

**INNOVA<sup>®</sup>**

**7111**

**SDS**

**SMART DIAGNOSTIC SYSTEM**

OE-Level Diagnostic Tablet



POWERED BY

**REPAIR SOLUTIONS** **PRO**

## HELLO...

On behalf of everyone at INNOVA, we want to welcome you and thank you for purchasing the **INNOVA® 7111 Smart Diagnostic System (SDS)** scan tool tablet! Our [2021 Motor Top 20](#) award winning tablet includes tons of pro-level features designed to help maximize your OBD2 diagnostic routine. In this manual, we will guide you on how to access a comprehensive library of time-saving diagnostic and service tools including:

- ✓ *Check Engine Light Diagnostics*
- ✓ *Bi-Directional Active Tests*
- ✓ *Special Functions*
- ✓ *Enhanced Data Stream*
- ✓ *TPMS / Tire Pressure Readings*
- ✓ *Transmission Temperature Readings*
- ✓ *Hybrid Battery Cell Voltage Readings*
- ✓ *EPB / ABS Servicing*
- ✓ *Full OEM Network Scans*
- ✓ *Battery Reset*
- ✓ *Digital Multimeter*
- ✓ *Oil Light Reset*
- ✓ *SRS / Safety System Inspection*
- ✓ *10 OBD II Modes*
- ✓ *Oil Life, Oil Level Checks, Brake Pad Life, Transmission Temperature, Engine Coolant Level*
- ✓ *Battery System Check*
- ✓ *Stream Live Data PIDs*
- ✓ *Smog / Emissions Readiness*
- ✓ *ABS Inspections*
- ✓ *34+ Workshop Tools services*
- ✓ *And Much More...*

Plus, gain the benefit of having unlimited access to real world solutions:

POWERED BY



**RepairSolutionsPRO™** increases the power of your INNOVA OBD2 diagnostic tablet by delivering the most complete automotive repair database with verified fixes from ASE Certified Master Technicians. Get the right fix and the right parts instantly right on your SDS Scan Tool Tablet.

Enjoy using your INNOVA SDS Scan Tool Tablet!

Yours sincerely,

The Innova Technical Team

**P.S.:** See what's new, connect with us on social...





## TABLE OF CONTENTS

<b>LEGAL INFORMATION . . . . .</b>	<b>1</b>
FCC Compliance Statement . . . . .	1
Trademarks . . . . .	1
Patents . . . . .	2
Version Information . . . . .	2
California Product Warnings . . . . .	2
<b>SAFETY PRECAUTIONS . . . . .</b>	<b>3</b>
Safety First! . . . . .	3
Safety Alert Icons . . . . .	4
<b>INTRODUCTION . . . . .</b>	<b>5</b>
Tablet Controls . . . . .	5
Initial Tablet Setup . . . . .	6
Create Your Account . . . . .	7
The Home Screen . . . . .	8
Technical Specifications . . . . .	9
RepairSolutionsPRO™ (RSPRO) . . . . .	10
RSPRO Offers... . . . .	10
<b>GETTING STARTED . . . . .</b>	<b>11</b>
Connecting the Tablet . . . . .	11
AutoLink Connection . . . . .	11
Scanning a Vehicle . . . . .	12
<b>OBD2 DIAGNOSTICS . . . . .</b>	<b>14</b>
Performing a Scan – OBD2 Diagnostics . . . . .	14
Viewing Scan Results – OBD2 Diagnostics . . . . .	14
Emissions Readiness – Interpreting Results . . . . .	15
MIL DTC Code . . . . .	15

---



Fix for DTCs (RSPRO) . . . . .	16
Monitor Status. . . . .	18
Confirmed DTC . . . . .	19
Pending DTC. . . . .	19
Permanent DTC . . . . .	19
<b>Additional Testing Utilities. . . . .</b>	<b>19</b>
Erasing OBD2 DTCs - Mode \$04 . . . . .	19
OBD Testing Modes . . . . .	20
Live Data - Mode \$01 . . . . .	24
Vehicle Information - Mode \$09 . . . . .	27
Editing Customer Information . . . . .	29
Scheduled Maintenance. . . . .	30
Predicted Failures. . . . .	30
TSBs and Recalls . . . . .	30
<b>OEM DIAGNOSTICS . . . . .</b>	<b>32</b>
Performing a Scan – OEM Diagnostics . . . . .	32
Select System . . . . .	33
Viewing the “Select System” Test Results . . . . .	33
Scan All Systems . . . . .	34
Viewing the “Scan All Systems” Test Results. . . . .	34
Viewing & Scanning An Individual Control Module. . . . .	35
Erase All OEM DTCs . . . . .	40
Rescan All Systems . . . . .	41
Vehicle Inspection Health Report. . . . .	41
Viewing The Vehicle Inspection Test Results . . . . .	42
<b>FCA Secure Gateway (Fiat, Chrysler, Alfa Romeo, Dodge, RAM, Jeep) . . . . .</b>	<b>45</b>
What is SGW? . . . . .	45
Functions Limited by SGW . . . . .	45

Preparing the 7111 for FCA Secure Gateway Access . . . . .	45
Unlocking the FCA Secure Gateway . . . . .	46

## **WORKSHOP TOOLS . . . . . 47**

Oil Maintenance Reset . . . . .	48
Battery Reset. . . . .	48
Electronic Parking Brake (EPB) Reset . . . . .	49
Steering Angle Sensor (SAS) Calibration . . . . .	50
Transmission Fluid Temperature . . . . .	51
ABS Bleeding . . . . .	52
Battery/Alternator Test . . . . .	52
Battery Test Only . . . . .	52
View Battery Live Data . . . . .	54
Alternator/Charging System Test. . . . .	54
View Alternator Live Data. . . . .	54
EV/HEV/PHEV Battery Health . . . . .	54
A/F Setting . . . . .	56
AC System Relearn . . . . .	57
Adblue Reset . . . . .	58
Clutch Relearn . . . . .	58
Coolant Bleeding . . . . .	59
DPF Reset . . . . .	60
Headlamp Calibration . . . . .	62
Immobilizer Reset . . . . .	62
Injector Coding . . . . .	63
Key Coding Procedure . . . . .	64
Language Change Reset . . . . .	65
Maintenance Reset . . . . .	66
NOx Sensor Reset . . . . .	67

Occupant Seat Sensor Calibration .....	67
Read/Write Odometer Settings .....	68
Reset Electric Traction System .....	69
Suspension Calibration .....	70
Throttle Body Relearn/TEC Learn .....	71
Tire Size Reset. ....	73
TPMS Relearn. ....	74
Transmission Fluid Level Check .....	75
Transmission Reset .....	76
Transport Mode .....	77
Window Door Roof .....	78

## **PREVIOUS VEHICLES . . . . . 80**

Scan History Reports.....	80
Viewing Scan History Reports . . . . .	81
Emailing & Printing Reports . . . . .	81
Playback Recorded Live Data .....	82

## **SETTINGS . . . . . 83**

Technical Support (Send an Email) .....	83
Date and Time Settings .....	84
Vehicle Inspection Setup .....	85
Retailer Selection .....	86
RepairSolutionsPRO Settings.....	87
Wi-Fi Settings .....	87
Smog Check or I/M Program Location .....	88
Regional Settings.....	89
Language.....	89
Idle Time Settings .....	90
Auto Shut Off .....	90

---



## TABLE OF CONTENTS

Volume Settings . . . . .	90
Brightness Settings . . . . .	91
Theme Settings . . . . .	91
Account Information . . . . .	91
Create An Account . . . . .	92
Edit Account Information . . . . .	92
Account Log In . . . . .	92
Reset Account Password . . . . .	92
Version Information . . . . .	92
Report an Issue . . . . .	93

## **SUPPORT . . . . . 95**

Tool Library . . . . .	95
Smog Check and I/M Program LED Definition . . . . .	96
Icon Monitor Status . . . . .	96
DTC Library . . . . .	96
DLC Locator . . . . .	97
View User's Manual . . . . .	98
Tutorials . . . . .	98
7111 Introduction . . . . .	98
First Time User Experience . . . . .	99
OBD2 Diagnostics . . . . .	100
OEM Diagnostics . . . . .	101
Workshop Tools . . . . .	101
Settings . . . . .	102
Previous Vehicles/Scan History . . . . .	103
Technical Support . . . . .	103
Demo Mode . . . . .	104



**DIGITAL MULTIMETER . . . . . 106**

    Introduction . . . . .106

    DMM Settings . . . . .108

**WARRANTY+ CUSTOMER SERVICE . . . . . 110**

    Limited Warranty. . . . . 110

    Customer Service . . . . . 110

**GLOSSARY . . . . . 111**

    OBD2 Terminology . . . . . 111

    OBD2 Monitors . . . . . 112

        Continuous Monitors . . . . . 112

        Non-Continuous Monitors. . . . . 112

    Additional Terminology + Acronyms . . . . . 113

## LEGAL INFORMATION

### FCC COMPLIANCE STATEMENT

---

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**FCC ID: 2AWLZ-7111**

#### FCC RF Radiation Exposure Statement

- The transmitters within this device must not be co-located or operating in conjunction with any other antenna or transmitter.
- This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. To maintain with IC RF exposure compliance requirements please follow operation instruction as documented in this manual.

### TRADEMARKS

---

Title, ownership rights, and intellectual property rights in the Products and Services shall remain in Innova and/or its licensors and other suppliers. Licensee and End Users acknowledge such ownership, confidential information, and intellectual property rights and will not take any action to jeopardize, limit or interfere in any manner with Innova's or its licensors' or other suppliers' ownership of or rights with respect to the Products and Services. The Products and Services may be **protected by Patent, Trademark, Copyright and/or other intellectual property laws and by international treaties**. All trademarks used in connection with the Products and Services are owned by Innova, its affiliates or its licensors and other suppliers, and no license to use any such trademarks is provided hereunder. Licensee and End Users agree that Innova may use in any manner and without limitation all comments, suggestions, complaints and other

feedback Licensee and End Users provide relating to the Products and Services. For more information and current listing of trademarks, please visit <https://www.innova.com/pages/trademarks>.

## PATENTS

---

Innova Electronics Corp. protects its intellectual property with numerous U.S. patents, which were used to research, design and manufacture this product. Please visit <https://www.innova.com/pages/patents> for additional information.

## VERSION INFORMATION

---

Please note that the images and functions on this manual may differ based on the current **Firmware Version (FW)** and **Software Version** you have. To check your tablet's current version and to check for updates, please see the **SETTINGS** tab under the **Version Information** section. [[See page 92](#)]

## CALIFORNIA PRODUCT WARNINGS

---

### **WARNING**

This product can expose you to chemicals including DiNP, which is known to the State of California to cause cancer. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

## SAFETY PRECAUTIONS

### SAFETY FIRST!

---

It is important that every user utilizing this product read all instructions and warnings included within this manual to ensure your safety, the safety of others, and to prevent damage to this product & vehicles being diagnosed and repaired. This manual describes common test procedures used by experienced service technicians. It is inferred that the user has a good understanding of vehicle systems before using this product.

Many test procedures require precautions to avoid accidents that can result in personal injury, and/or damage to your vehicle or test equipment. At a minimum, the following safety standards should be followed whenever using this product, or whenever working on a vehicle.

- ❑ When an engine is running, it produces carbon monoxide, a toxic and poisonous gas. To prevent serious injury or death from carbon monoxide poisoning, **operate the vehicle ONLY in a well-ventilated area.**
- ❑ To protect your eyes from propelled objects as well as hot or caustic liquids, **always wear approved safety eye protection.**
- ❑ When an engine is running, many parts (such as the coolant fan, pulleys, fan belt etc.) turn at high speed. To avoid serious injury, **always be aware of moving parts.** Keep a safe distance from these parts as well as other potentially moving objects.
- ❑ Engine parts become very hot when the engine is running. To prevent severe burns, **avoid contact with hot engine parts.**
- ❑ Before starting an engine for testing or troubleshooting, make sure the parking brake is engaged. **Put the transmission in park** (for automatic transmission) **or neutral** (for manual transmission). **Block the drive wheels** with suitable tire blocks.
- ❑ Connecting or disconnecting test equipment when the ignition is ON can damage test equipment and the vehicle's electronic components. **Turn the ignition OFF before connecting the tablet to or disconnecting the tablet from the vehicle's Data Link Connector (DLC).**
- ❑ To **prevent damage to the on-board computer** when taking vehicle electrical measurements, always use a digital multimeter with at least 10 Megohms of impedance.
- ❑ Fuel and battery vapors are highly flammable. To prevent an explosion, keep all sparks, heated items, and open flames away from the battery and fuel vapors. **DO NOT SMOKE NEAR THE VEHICLE DURING TESTING.**
- ❑ **Don't wear loose clothing or jewelry when working on an engine.** Loose clothing can become caught in the fan, pulleys, belts, etc. Jewelry is highly conductive and can cause a severe burn if it makes contact between a power source and ground.

## SAFETY ALERT ICONS

---

As you read this manual, color-coded icons are used throughout to identify safety alerts and warnings. These are provided to help prevent serious injury to you, injury to bystanders, and damage to property or equipment. They are characterized as follows:



**Yellow Icon** – Provides a “**NOTE:**” statement to offer special information or tip on what is being instructed.



**Orange Icon** – Potential hazardous situation. Provides a “**WARNING:**” statement on how to proceed to avoid serious injury to the user, bystanders, and/or equipment.



**Red Icon** – Imminent hazardous situation. Provides an immediate “**DANGER:**” alert on what must be done to prevent serious injury or death to the user or bystanders.




## INTRODUCTION

## TABLET CONTROLS

See **Figure 1** for the locations of items 1 through 9, below.

1. **POWER Button** - Turns the tablet “On” and “Off.” When tablet is off, press and hold for approximately 3 seconds to turn on. When tablet is on, press and hold for approximately 3 seconds to display the “power down” options menu.
2. **USB Charging Port** – Supports charging of the tablet battery using provided USB cable and power adapter.
3. **TF-Card Port** – Supports installation of a TF (expandable memory) card. Functionality is currently disabled.
4. **Mini HDMI Port** – Supports connection of an external HDMI (High-Definition Multimedia Interface) compatible external display.
5. **Headphone Port** – Supports connection of external headphones. (Future expansion)
6. **Display** - 7-inch color LCD display shows menus and sub-menus, test results, tablet functions and vehicle status information.
7. **DLC Cable** - Connects the tablet to the vehicle's on-board Data Link Connector (DLC).
8. **Rear Kickstand** – Lets you freely stand the tablet on a solid surface.
9. **Detachable VCI Connector** – The detachable Vehicle Communication Interface (VCI) connector allows mobility and flexibility around the vehicle by detaching the tablet from the DLC cable and wirelessly connecting via Bluetooth®.

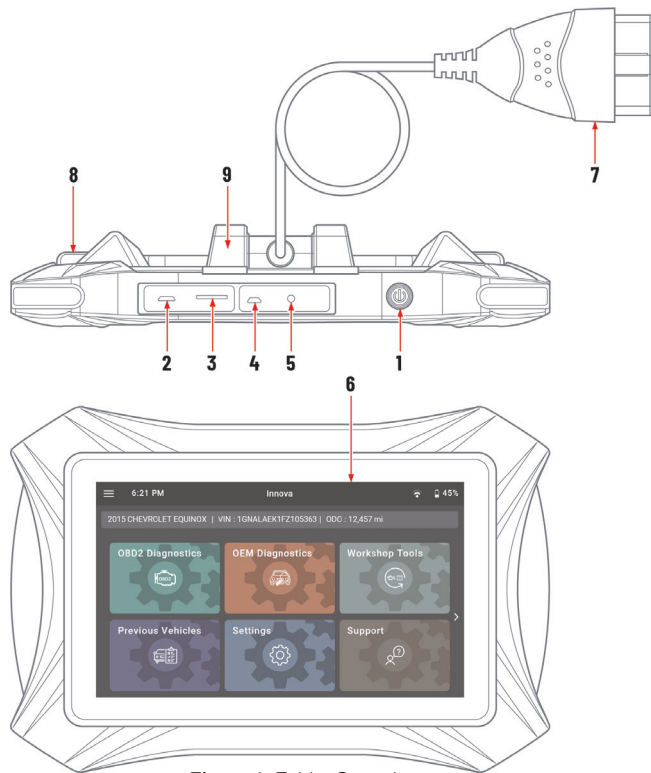

**Figure 1:** Tablet Controls




## Power ON and Power OFF

### To power ON the tablet:

1. With the tablet off, press and hold the **POWER** button for approximately 3 seconds, then release.
  - The screen displays the message “LOADING” while the software loads.
  - When the software has been loaded, the Home Page displays. [[See page 8](#)]


2. If the tablet is connected to a vehicle, the message “*Retrieving vehicle information...*” automatically shows while the tablet establishes communication with the vehicle.

**To restart or power OFF the tablet:**

3. With the tablet on, press and hold the  **POWER** button for approximately 3 seconds.
  - The “power down” options menu displays at the right side of the screen.
4. To restart the tablet:
  - Tap the  **Restart** icon.
  - The screen displays the message “LOADING” while the software loads.
  - The Home screen displays once the software is loaded. [\[See page 8\]](#)
  - If the tablet is connected to a vehicle, the message “*Retrieving vehicle information...*” displays while the tablet establishes communication with the vehicle.
5. To power off the tablet:
  - Tap the  **POWER** icon.
  - The tablet powers down and turns off.

## INITIAL TABLET SETUP


Follow these steps to setup the tablet for the first time.

1. **Charge Tool** – use the included charging cable to completely charge your tool before conducting your first scan.
2. **Power On** – Once fully charged, press and hold the  **POWER** button for approximately 3 seconds.
3. **Setting your tablet preferences** – Wi-Fi Connection, Preferred Units, Idle Time, Volume Level, Brightness Level and Them Preference. [\[See page 83\]](#)
4. **Check for Updates** – We're continuously making free software, data, and firmware updates. It is important to keep your tablet up to date to ensure its best performance. Please follow the steps to check and automatically update your tablet under SETTINGS/Version Information. [\[See page 92\]](#)



**NOTE:** To proceed, your tablet must be linked to a Wi-Fi network.

5. **Create Your Account** – Allows complete access to all of the tablet's powerful features. [\[See page 7\]](#)
6. **First-Time User Experience Tutorial** - Offers detailed instructional tutorials on how to use the tablet's various features and functions. [\[See page 100\]](#).
7. **Smog Check or I/M Program Location** – Allows selecting your US state to enhance emission readiness logic. [\[See page 88\]](#)
8. **Enjoy your INNOVA® Smart Diagnostic System!**

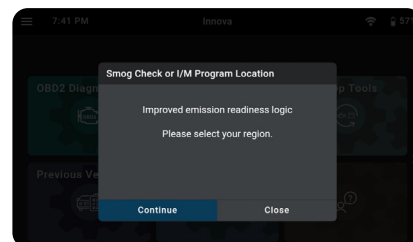

Have questions? We're here to help:

- **Live Chat:** [www.innova.com](http://www.innova.com)
- **Email Us:** [support@innova.com](mailto:support@innova.com)
- **Call Us:** 800-544-4124 (Monday through Friday, 6am - 6pm PST)

## CREATE YOUR ACCOUNT

The first time you power on your tablet, you will be asked to create a **RepairSolutionsPRO™** account. Although it is optional, having a personal account will help keep your tablet updated with the latest updates and future enhancements. Plus, get access to our extensive database of verified DTC fixes – curated by our network of ASE Certified master technicians.




**NOTE:** Please make sure your tablet is properly connected to your wireless network before registering. A “No Internet Connection” displays if the device is not connected to the Internet. Follow the prompts to complete your connection.

1. Complete the displayed **Create an Account** form with your name, email address, your desired password, and other personal information.

2. Agree to the terms and tap on the **Create Account** button at the bottom of the form.

## THE HOME SCREEN

The Home screen provides access to all the tablet's primary functions. See **Figure 2** for the explanation of items 1 through 10, below.

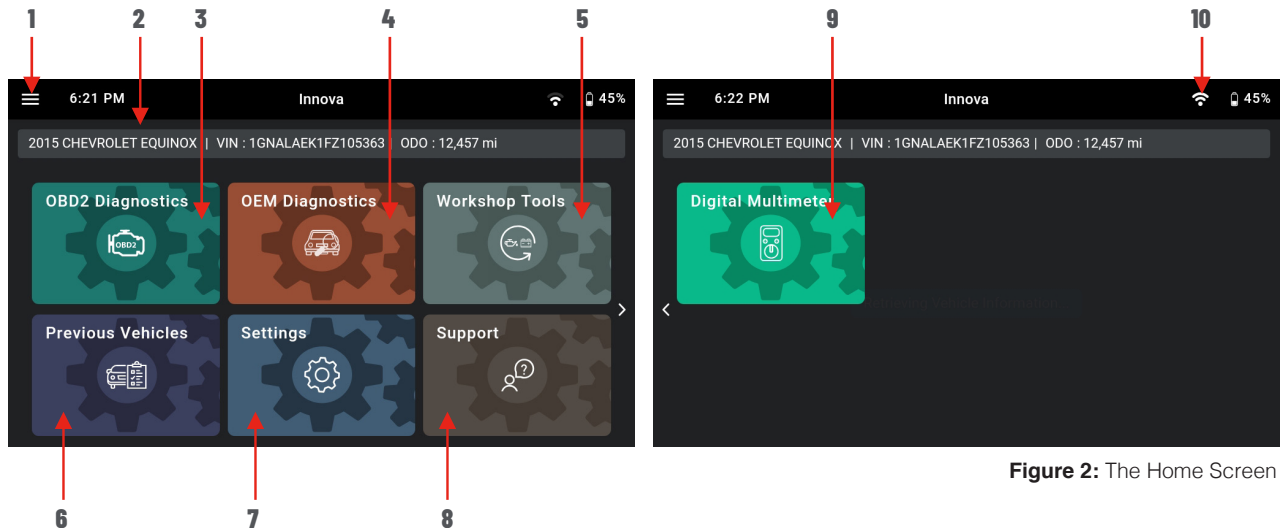

**Figure 2:** The Home Screen

- 1. Main Menu** – Quick access to Home, Previous Vehicle, Support, Settings and Updates (when available).
- 2. Vehicle Info Bar** – When connected to a vehicle, dialog displays vehicle's make, model, year, VIN, and current mileage (ODO).
- 3. OBD2 Diagnostics Tab** – Use to perform OBD2 scans, view & record Live Data, create a RepairSolutionsPRO Report, Erase OBD2 DTCs and all services in 10 OBD2 modes. [\[See page 14\]](#)
- 4. OEM Diagnostics Tab** – Provides enhanced OEM level diagnostics that are not available over generic OBD2. Access ABS, Airbag, Transmission, Tire Pressure, Battery, and many Body control modules to view and erase their DTCs. Perform bi-directional tests on fuel pump, injectors, ignition coils, and much more. Plus, get access to hundreds of additional parameters that you can view in real-time. [\[See page 32\]](#)
- 5. Workshop Tools Tab** – Perform several OEM service reset procedures, including: Oil Maintenance Reset, Battery Reset, Electronic Parking Brake Reset, Steering Angle Sensor (SAS) Reset, ABS Bleeding, Battery/Alternator Test, and EV/HEV/PHEV Battery Health. Access dealership level re-learn procedures to complete repairs or maintenance and much more. [\[See page 47\]](#)
- 6. Previous Vehicles Tab** – Access and view reports for all previously tested vehicles, including pre-recorded Live Data streams. [\[See page 80\]](#)
- 7. Settings Tab** – Setup your tablet's settings, including Wi-Fi, update software, and other personal settings. [\[See page 83\]](#)
- 8. Support Tab** – Access the tablet's Tool Library for DTC, Smog Check or I/M Program LED Definition and Icon Monitor Status; connect with Innova's ASE Certified Technical Team for support, view DLC Locator, User Manual, Demo Mode and Tutorials. [\[See page 95\]](#)
- 9. Digital Multimeter** - The digital multimeter tab provides functionality to measure voltage, current, and

resistance. The measuring device is the DS200 which is connected to the 7111 via Bluetooth. [\[See page 106\]](#)

10.  **Wi-Fi Icon** - Tap to access and edit the tablet's Wi-Fi settings. [\[See page 87\]](#)

## TECHNICAL SPECIFICATIONS

The following table provides the tablet's current technical specifications\*:

<b>Display Type</b>	7" Touch Panel/1024x600 pixels
<b>J1962 DLC Cable</b>	6-foot Detachable 16-pin OBDII Compliant Connector
<b>Detachable Vehicle Communication Interface (VCI) with Bluetooth® Connectivity</b>	Maximum communication range of 30 feet.
<b>Operating System</b>	Proprietary user interface running on Android 9.0
<b>Battery</b>	Built-in 6000mAH rechargeable battery/6-hour life
<b>Wi-Fi</b>	802.11b/g/n
<b>Operating Temperature</b>	23°F to 113°F (-5°C to 45°C)
<b>Memory</b>	16GB Memory for Report and Image Storage
<b>I/O Interface</b>	Micro USB2.0, HDMI Port, TF Card Slot, Headphone, and USB Charging Port.
<b>Tablet Case</b>	Rugged ABS Shock & Drop Resistant
<b>Included Accessories</b>	Molded Storage Case, Power Supply, Quick Start Guide

\*Manufacturer reserves the right to change technical specifications at any time.

## RepairSolutionsPRO™ (RSPRO)

---

Innova's **RepairSolutionsPRO™ (RSPRO)** is embedded into your scan tool tablet and offers a free web-based service created to assist professional technicians simplify and augment their vehicle diagnostic process.

In essence, it helps you decode the diagnostic data collected by your INNOVA® OBD2 Scan Tool Tablet to arrive at a most likely fix. At its core, it links to a database of millions of real-world verified fixes—collected over the last 25 years by ASE Master Technicians across the U.S.— that is cross-referenced to your specific vehicle's problem to instantly arrive at a verified fix. Think of it as a second opinion from your most trusted peers to help you diagnose and repair more vehicles.

POWERED BY



### RSPRO OFFERS...

- **Verified Fixes** – Provides the most likely fix(es) with recommended parts to repair the problem. These fixes are reported and verified by ASE Technicians for the specific vehicle's retrieved DTCs. [[See page 16](#)]
- **TSBs & Recalls** – Learn if there are any special NHTSA safety recalls or Technical Service Bulletins (TSBs) issued by the tested vehicle's manufacturer. [[See page 30](#)]
- **Scheduled Maintenance** – Offers the vehicle manufacturer's recommended maintenance intervals, which can be used to guide your customer on scheduled service routines. Plus, conveniently order the correct maintenance part(s) right from the tablet. [[See page 30](#)]
- **Predicted Failures** – With millions of verified repair solutions, get a statistical probability of what failures may occur within the next 12 months. Use this to guide your customer on potential issues to look out for. [[See page 30](#)]
- For additional resources and content, visit us at [Pro.RepairSolutions.com](http://Pro.RepairSolutions.com).

## GETTING STARTED


### CONNECTING THE TABLET

1. Turn the vehicle's ignition OFF.
2. Locate the vehicle's 16-pin Data Link Connector (DLC). [\[See page 97\]](#)



**NOTE:** Some DLCs have a plastic cover that must be removed before connecting the Tablet.

3. Connect the tablet to the vehicle's DLC. The cable connector is keyed and will only fit one way.
  - If you have problems connecting the cable to the DLC, rotate the connector 180°.
  - If you still have problems, check the DLC on the vehicle and on the tablet.

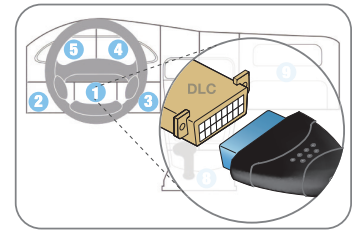


### AUTOLINK CONNECTION

The tablet features an **“AutoLink Connection”** function, which automatically retrieves vehicle information upon plugging the tablet into the vehicle's Data Link Connector (DLC) port.

#### Using the AutoLink Function

1. Verify that the tablet is connected as indicated above (*Connecting the Tablet*).
2. If the tablet is off, power ON the tablet by pushing the **POWER** button for 3 seconds.
3. Turn the ignition ON. **DO NOT** start the engine.
  - Tablet begins communicating and displays “Retrieving Vehicle Information...”
  - If an “Information” dialog appears, follow the on-screen instructions to establish a connection.
4. Once complete, tablet displays the vehicle's Year, Make, Model, VIN, and mileage on the Vehicle Info Tab.

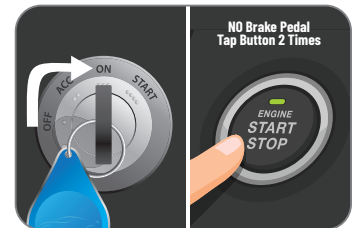

**NOTE:** With certain vehicles, you may be required to manually input some of the vehicle's information. This may include the vehicle's Year, Make, Model, Trim, Body Code, Engine; vehicle's VIN; and/or the vehicle's mileage.

#### Providing Vehicle's VIN Information

1. A dialog appears requesting a Vehicle Identification Number (VIN).

2. Tap the dialog window and enter the vehicle's 17-digit VIN number.
  - The Submit button becomes "active" once all 17-digits are entered.
3. Tap the **Submit** button.
  - An error dialog will display if the VIN is unable to be decoded. Re-enter VIN.
  - If you are still unable to decode the VIN, tap **Select Vehicle** (see steps below).

### Providing Vehicle Selection Information

1. A dialog appears requesting **Vehicle Selection**.
2. Tap on each of the available entries (**Year, Make, Model, Trim, Body Code, Engine**).
  - A grayed-out selection means that an entry is not available or not necessary for this vehicle.
3. Make a selection under each option.
4. Tap **Continue** to save your selections and return to the Home screen.
5. Tap **Cancel** to exit without selecting and return to the Home screen.

### Providing Vehicle's Mileage

2009 DODGE SPRINTER 2500 | VIN : WD0PE745295375510 | ODO : 7,990 mi

1. If the vehicle doesn't support automatic retrieval of stored mileage, a dialog is displayed on the screen.
2. Input the vehicle's odometer reading:
  - Tap on the entry box and enter mileage.
  - Tap **Submit** to confirm entry and return to the Home page.
3. If you choose to cancel, the mileage will be marked as missing, and the Vehicle Info Bar will display "ODO: N/A (tap to update)".
  - Tap on the Vehicle Info Bar "**(tap to update)**" to re-enter the mileage.

75510 | ODO : N/A (tap to update)



**NOTE:** Please be aware that correct mileage is necessary to generate accurate diagnostic reports.

## SCANNING A VEHICLE

Never replace a part based only on the DTC definition. Each DTC has a set of testing procedures, instructions and flow charts that must be followed to confirm the location of the problem. Always refer to the vehicle's service manual for detailed testing instructions.

*Retrieving and using Diagnostic Trouble Codes (DTCs) for troubleshooting vehicle operation is only one part of an overall diagnostic strategy.*



**NOTE:** Check your vehicle thoroughly before performing any test.



**WARNING:** ALWAYS observe safety precautions whenever working on a vehicle.

Refer to the appropriate diagnostic test you wish to perform:

- **OBD2 Diagnostics** – [See page 14](#)
- **OEM Diagnostics** – [See page 32](#)
- **Workshop Tools** – [See page 47](#)

## OBD2 DIAGNOSTICS

The **OBD2 Diagnostics** function allows you to perform OBD2 scans, view & record Live Data, create a RepairSolutionsPRO™ Report, erase OBD2 DTCs and perform other functions in the 10 OBD2 Modes.



### PERFORMING A SCAN – OBD2 Diagnostics

1. Follow the **AutoLink Connection** steps. [[See page 11](#)]
2. Tap **OBD2 Diagnostics**.
  - The tablet automatically starts a check of the vehicle's computer to determine which communication protocol it is using. When the tablet identifies the computer's communication protocol, a communication link is established.




**NOTE:** A *PROTOCOL* is a set of rules and procedures for regulating data transmission between computers, and between testing equipment and computers. As of this writing, five different types of protocols (ISO 9141, Keyword 2000, J1850 PWM, J1850 VPW and CAN) are in use by vehicle manufacturers.

- If the Tablet fails to link to the vehicle's computer, a "Scan Failed" message shows.
  - Ensure the vehicle is OBD2 compliant—check vehicle emission control information (VECI) label located in the vehicle's engine compartment.
  - Verify the connection at the DLC, and verify the ignition is ON.
  - Turn the ignition OFF, wait 5 seconds, then back ON to reset the computer.
  - Tap **Try Again** to try again, or tap **Cancel** to return to the Home Page.
- 3. A progress dialog displays while the tablet retrieves any Diagnostic Trouble Codes, Monitor Status and Freeze Frame Data from the vehicle's computer memory.
- 4. When the retrieval process is complete, the **OBD2 Diagnostics** screen displays with the scan results.

### VIEWING SCAN RESULTS – OBD2 Diagnostics

Scan results are shown immediately following completion of a scan; and can also be viewed later using the **PREVIOUS VEHICLE** function available through the Home page [[See page 80](#)].

Scan results are shown in a multi-page display, which includes **OBD2**

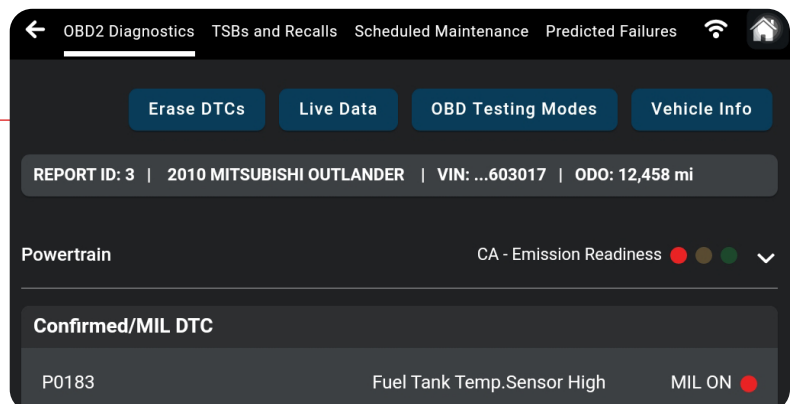

**Diagnostics, TSBs and Recalls, Scheduled Maintenance, and Predicted Failures.**

Each report begins with a vehicle information bar that includes a **Report ID**, the vehicle's description (**year/make/model**), the last six digits of the **Vehicle Identification Number (VIN)** and the **odometer reading (ODO)** at the time the scan was performed.

REPORT ID: 2 | 2018 FORD EXPLORER | VIN: ...A75690 | ODO: 39,999 Mi

**EMISSIONS READINESS – Interpreting Results**

Indicates whether the vehicle is ready for an Emissions Test (Smog Check) through a “traffic light” type display. When viewing the **Emission Readiness** field, use the following definitions to identify the vehicle's Emissions Test readiness status:

Powertrain


MIL ON | CA - Emission Readiness ● ● ● ▼

- **MIL ON (or OFF)** – Displays the vehicle's Malfunction Indicator Lamp (MIL) status.
- **CA (California)** – Displays the acronym of I/M program location.
- **Green** - Indicates all engine systems are operating normally. The vehicle is ready for an Emissions Test (Smog Check), and there is a good possibility it can be certified.
- **Yellow** – Indicates one of the following two conditions is present:
  - A **“Pending”** Diagnostic Trouble Code is present. It is possible the vehicle can be tested for emissions and certified. Many areas (states / countries) allow an Emissions Test to be performed if the only code present is a “PENDING” code.
  - One or more monitors **“Have Not Run”** their diagnostic testing. The issue of the vehicle being ready for an Emissions Test will depend on the emissions regulations and laws of your local area.
  - Some areas require that all Monitors indicate a **“Has Run”** status before an Emissions Test (Smog Check) can be performed. Other areas only require that some, but not all, Monitors indicate a **“Has Run”** status before an Emissions Test can be performed.
- **Red** - Indicates there is a problem with one or more of the vehicle's systems, and Diagnostic Trouble Code(s) (DTCs) are present. The vehicle is not ready for an Emissions Test. The problem(s) that caused the DTCs to set must be repaired before an Emissions Test can be performed.

**MIL DTC Code**

This is the code that has commanded the vehicle's Malfunction Indicator Lamp (MIL) “on,” and is the code for which *Freeze Frame* data stored. This field includes the DTC number, description, and MIL status (ON or OFF).


- In OBD2 systems, when an emissions-related engine malfunction occurs that causes a DTC to set, a record or snapshot of engine conditions at the time that the malfunction occurred is also saved in the vehicle's computer memory. The record saved is called Freeze Frame data.

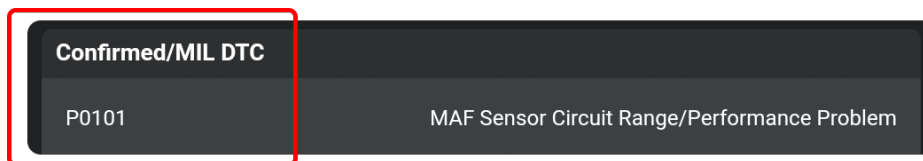

### Viewing Freeze Frame Data - Mode \$02

Under Freeze Frame, saved engine conditions can include, but are not limited to engine speed, open or closed loop operation, fuel system commands, coolant temperature, calculated load value, fuel pressure, vehicle speed, air flow rate, and intake manifold pressure. These values are typically used to further diagnose and pinpoint the issue.

- Tap the **Freeze Frame** button to view the captured results.

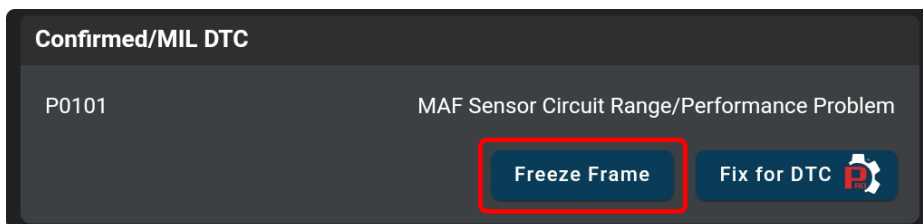

### FIX FOR DTCs (RSPRO)

POWERED BY



Innova's **RepairSolutionsPRO™** (RSPRO) reports offer a fix, which is cross referenced for accuracy against a database of millions of verified fixes. It is real-world data that has been collected for over 25 years by Innova's network of ASE Master Technicians across the U.S.

If available, it includes the most likely fix(es) for the MIL DTC and the parts required to repair it. If not, it only shows the OBD2 Report.



**NOTE:** Certain fields and pages require that you create a RepairSolutionsPRO report to access, download and display the associated "enhanced" data.

1. Tap the **Fix for DTC** button in the OBD2 Diagnostics screen.



**NOTE:** Verify the tablet is registered to the RepairSolutionsPRO App.

 
- If you haven't registered for the RSPRO app yet or you are logged out, a screen displays asking to either log it to your account, or create an account.

2. With the tablet paired and registered with the RepairSolutionsPRO App.


- The tablet also verifies if it's connected to a Wi-Fi network.



**NOTE:** The tablet can be connected to a Wi-Fi network by using the RepairSolutionsPRO app, or by using the Settings tab on the tablet. [[See page 87](#)]

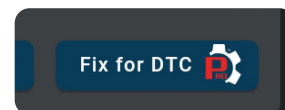

3. The tablet's screen displays *Fix for DTCs* screen, and includes:

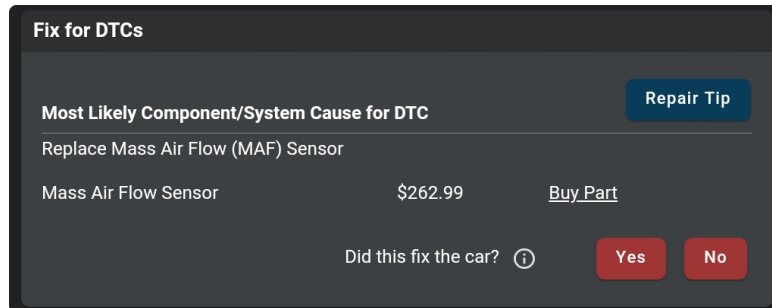

#### Most Likely Component/System Cause for the DTC

- Includes recommended parts, cost, and a **Buy Part** button.
- Second Most Likely Component/System Cause for the DTC.
- Third Most Likely Component/System Cause for the DTC.
  - Swipe down to view other potential fixes (if available).
- Other Likely Component/System Cause for the DTC.




**NOTE:** The **Buy Part** button can be activated or disabled in the *Settings* tab under the *RepairSolutionsPRO* section. [[See page 87](#)]

#### Repair Tip

The Repair Tip offers additional insight and helpful tips to resolve the issue.

1. Tap the **Repair Tip** button in the *Fix for DTCs* screen.
  - The Repair Tip menu for the retrieved DTC is provided.

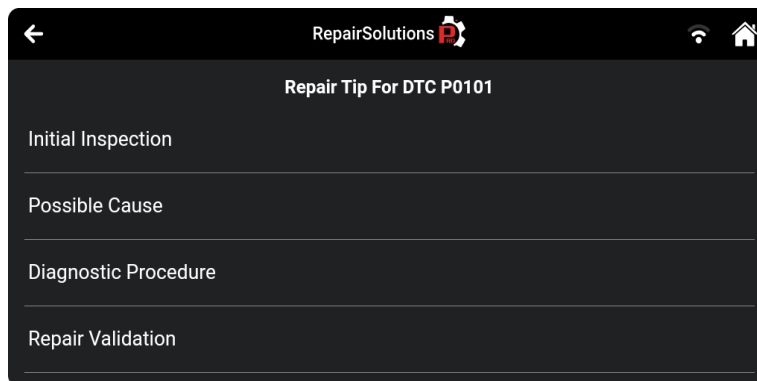


2. Each Repair Tip for DTC includes: Initial Inspection, Possible Cause, Diagnostic Procedure and Repair Validation.
  - Select the information you wish to view.
  - When finished viewing, tap the **Back** button to return to the Repair Tip menu.

**Did this fix the car?**

- Users will be prompted to select which likely fix resolved their vehicle's DTC.
- Help other technicians find the best DTC solutions. Kindly validate the provided fixes to ensure that we continue to improve and maintain the most accurate fix database on the market.



**NOTE:** If the Fix is not available for DTC, an advisory message displays.

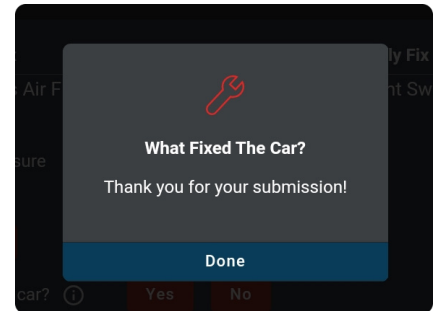**MONITOR STATUS**

Shows the current status for all **Monitors** supported by the vehicle. Available monitors are listed and identified as follows (*The CCM - Comprehensive Component Monitor is being used as an example.*):

**Green Solid Icon = CCM**

*Description:* This icon indicates the monitor has completed both Since DTCs Cleared (KOEO) and This Driving Cycle testing (KOER).

*Tips:* The monitor has met all conditions required to complete self-diagnosis and testing of the assigned system.

**Red Solid Icon = CCM**

*Description:* This icon indicates that the monitor has not completed testing Since DTCs Cleared (KOEO).

*Tips:* The monitor has not met all conditions required to complete self-diagnosis and testing of the assigned system. A drive cycle may need to be performed to complete the testing.

**Green/Gray Solid Icon = CCM**

*Description:* This icon indicates that the monitor has not completed testing This Driving Cycle (KOER).

*Tips:* The monitor has not met all conditions required to complete self-diagnosis and testing of the assigned system. A drive cycle may need to be performed to complete the testing.

**Red/Gray Solid Icon = CCM**

*Description:* This icon indicates that the monitor has been disabled This Driving Cycle (KOER).

*Tips:* The monitor is unable to complete self-diagnosis and testing of the assigned system. The monitor is disabled for this driving cycle, check for failed OBD Monitor Test and refer to the service information before continuing.

[View Glossary](#)

Monitor Status - This Driving Cycle	
<b>MIS</b>	Misfire Monitor
<b>FUE</b>	Fuel System Monitor
<b>CCM</b>	Comprehennsive Component Monitor (CCM)
<b>CAT</b>	Catalyst Monitor
<b>EVA</b>	EVAP System Monitor

## CONFIRMED DTC

Shows all “confirmed” powertrain DTCs for the vehicle. Each entry in the list includes the DTC number and description.

### Confirmed DTC

P106E	Direct Pressure Drive Line No3 Line Open
P1070	No.4 Fuel Heater Circuit Short

## PENDING DTC

Shows all “pending” powertrain DTCs for the vehicle. Each entry in the list includes the DTC number and description.

### Pending DTC

P1233	Fuel Pump Driver Module Disabled Or Off Line (Fuel Pump Driver Module)
P0302	Cylinder 2 Misfire Detected

## PERMANENT DTC

Shows all “permanent” powertrain DTCs for the vehicle. Each entry in the list includes the DTC number and description.

### Permanent DTC

P100A	Alternative Fuel Rail Pressure Sensor B Circuit
-------	--

## ADDITIONAL TESTING UTILITIES

The following utilities are also included under the **OBD2 DIAGNOSTICS** scan results.

### ERASING OBD2 DTCs - Mode \$04



**NOTE:** When the Erase function is used to erase DTCs from the vehicle's on-board computer, “Freeze Frame” data and manufacturer-specific-enhanced data are also erased. “Permanent” DTCs ARE NOT erased by the Erase function.



**NOTE:** When DTCs are erased, the I/M Readiness Monitor Status program resets the status of all Monitors to a not run condition. To set all Monitors to a COMPLETE status, an OBD2 Drive Cycle must be performed.

Erase DTCs from the vehicle's computer memory as follows:


1. Perform the **AutoLink Connection** steps. [\[See page 11\]](#)
  - If the tablet is already connected and linked to the vehicle's computer, proceed directly to **Step 2**.
  - Ensure that the ignition is in the Key ON, Engine OFF position.
2. Tap the **Erase DTCs** button at the top of the OBD2 Diagnostic results page.
  - The tablet displays an attention message confirming deletion.
  - If you want to proceed, tap **Erase DTCs** to continue.

- If you do not want to proceed, choose **Cancel** to exit the erase procedure.
- 3. By selecting to Erase DTCs, a “*One moment please...*” progress dialog displays during the erase process.
  - If the erase was successful, a confirmation message shows.
  - After 3 seconds, the tablet automatically re-scans the vehicle to confirm DTC deletion.
- 4. If the erase was not successful, an advisory dialog displays indicating to either:
  - Place the vehicle in the Key ON, Engine OFF position (**OR**).
  - Place the vehicle in park or neutral; set the parking brake; and start the engine.

## OBD TESTING MODES

OBD Testing Modes are accessed from the **OBD2 Diagnostic** results page. [\[See page 14\]](#)

1. Tap the **OBD Testing Modes** button.
2. The OBD Testing Modes screen displays with the following options:
  - **I/M Readiness Status - PIDs \$01 & \$41** – Lets you view the drive cycle procedures for all monitors supported by the vehicle in *Since DTC Cleared* or *This Driving Cycle*. [\[See page 21\]](#)
  - **Read DTCs - Modes \$03, \$07 & \$0A** – Lets you view the OBD2 DTCs. [\[See page 14\]](#)
  - **Erase DTCs - Mode \$04** – Lets you erase DTCs from the vehicle’s computer memory. [\[See page 19\]](#)
  - **Freeze Frame - Mode \$02** – Lets you view Freeze Frame data stored on the vehicle’s computer. [\[See page 16\]](#)
  - **Live Data - Mode \$01** – Lets you view real-time data. [\[See page 24\]](#)
  - **O2 Sensor Monitor - Mode \$05** – Retrieves and displays O2 sensor monitor test results from your vehicle’s on-board computer. [\[See page 22\]](#)
  - **OBD Monitor Test - Mode \$06** – Retrieves test results for emission-related powertrain components and systems that are not continuously monitored. [\[See page 22\]](#)
  - **Request Control On-Board System - Mode \$08** – Lets you perform an EVAP Test or Particulate Filter Regeneration and Inducement System Reinitialization. [\[See page 23\]](#)
  - **Drive Cycle Procedures** – Lets you view the driving cycle for a monitor. [\[See page 22\]](#)
  - **Vehicle Information - Mode \$09** – Lets you retrieve reference information for vehicle under test. [\[See page 27\]](#)

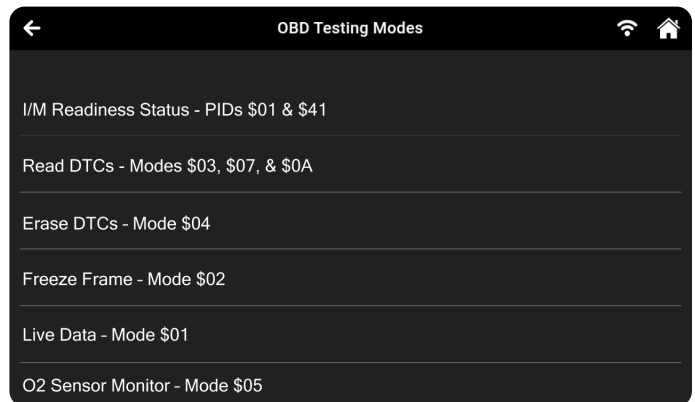


**NOTE:** In cases where a function is not supported by the vehicle under test, the unsupported function is “grayed out,” and cannot be selected.

## I/M Readiness Status - PIDs \$01 & \$41


The vehicle's computer stores a record of monitor status upon completion of a full diagnostic check of all monitored components and systems since the computer's memory was last cleared.

The **I/M Readiness Status - PIDs \$01 & \$41** feature displays which vehicle particular Monitor has or has not run and completed testing of their designated sections within the vehicle's emissions control system. Additionally, it also provides the descriptions for each monitor.

- From the Monitor Status field on the OBD2 Diagnostic page, tap the **View Drive Cycles** button. Or, from OBD Testing Modes screen, tap **I/M Readiness Status - PIDs \$01 & \$41**.
  - The **I/M Readiness Status - PIDs \$01 & \$41** page displays. Select **Since DTCs Cleared** or **This Driving Cycle** as appropriate.

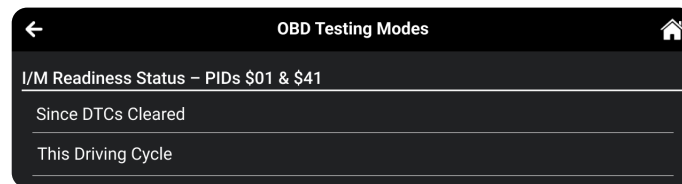

- If the vehicle under test does not support Since DTCs Cleared or This Driving Cycle, a warning message displays "This vehicle does not support this monitor type." Tap the **Back** button to return to the previous dialog.
- The Select Monitor screen displays a list of all Monitors supported by the vehicle.

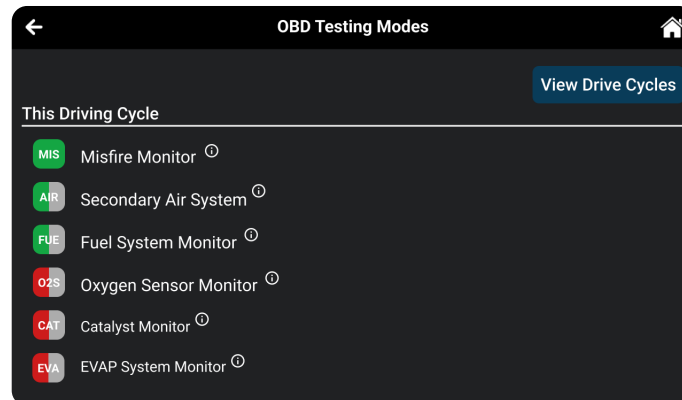


- To view a Monitor description, tap the **i Info** icon .
- To view Drive Cycle Procedures for a Monitor, tap the **View Drive Cycles** button.
  - The page refreshes to display the Drive Cycle procedure for the Incomplete or Enabled monitors.



**NOTE:** If Drive Cycle Procedures are not available for the vehicle, an advisory message show.

- The Drive Cycle Procedure screen shows the specific set of operating procedures that ensure the vehicle is

driven in such a way that all the required “Enabling Criteria” for the Monitor to run and complete its diagnostic testing are met.


- When you are finished viewing the Drive Cycle Procedures, tap the **Back** button to return to the previous dialog or tap the  **Home** button to return to the Home Screen.

## Drive Cycle Procedures

The **Drive Cycle Procedures** lets you view the Drive Cycle Procedures for all monitors supported by the vehicle.

- From the OBD Testing Modes, tap the **Drive Cycle Procedures** button.

- The Drive Cycle Procedures page displays.
- The **Drive Cycle Monitors** column on the left lists the monitors supported by the vehicle.
- The right column of the page shows the **Drive Cycle Procedure** for the currently selected monitor.

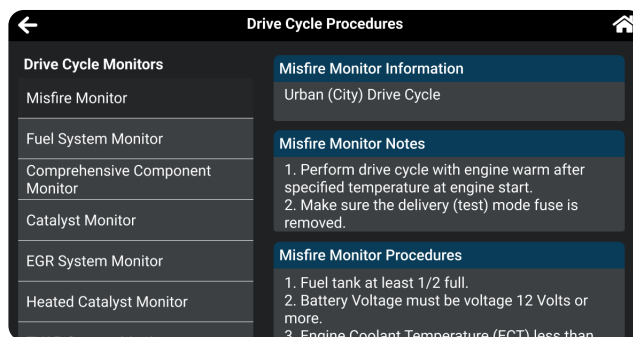

- Tap a **monitor name** to view the Drive Cycle procedure for the selected monitor.
  - The page refreshes to display Monitor information and the Drive Cycle procedure for the selected monitor.
- Follow the provided steps to perform and complete the monitor's “Enabling Criteria”.

## O2 Sensor Monitor – Mode \$05

The **O2 Sensor Monitor – Mode \$05** lets you view the test results of the vehicle's two or more O2 sensors. These sensors are designed to help identify problems that can reduce fuel efficiency or increase emissions. Each O2 sensor has a unique name that identifies its location in the exhaust system – cylinder bank location (bank 1 or bank 2) and its location in relation to the catalytic converter (*upstream* or *downstream*). Please reference the vehicle's service manual for further information.



**NOTE:** Service Mode \$05 is not supported in ISO 15765-4 (CAN) applications – it includes the majority of 2008 and older vehicles. For CAN applications, the functionality of Service Mode \$05 was implemented in Service Mode \$06.

- From the OBD Testing Modes screen, tap **O2 Sensor Monitor – Mode \$05**.
  - The Oxygen Sensor page displays.
- Tap the **X** icon on the top right to return to the OBD Testing Modes selection screen.

## OBD Monitor Test – Mode \$06

The **OBD Monitor Test – Mode \$06** retrieves and displays test results for emission-related powertrain components and systems that are not continuously monitored. The tests available are determined by the vehicle manufacturer.



**NOTE:** The tablet does not perform the OBD Testing Modes. Instead, it retrieves results from the most recently performed tests from the on-board computer's memory.

1. From the OBD Testing Modes screen, tap **OBD Monitor Test - Mode \$06**.
2. When test results have been retrieved, the test results screen displays. The following information is provided for each available test:

- Test ID number
- Component ID
- Test Value
- Min or Max test limit



**NOTE:** Only one test limit, either **Min** or **Max**, is shown for any given test.

- Unit of measurement
- Status

OBD Mode Tests						
Oxygen Sensor Monitor - Bank 1 Sensor 1 (\$01)						
Component ID	Value	Min	Max	Unit	Status	
Absolute Average Slope of the O2 Sensor Signal (\$8E)	29.135	4.000	65.000	V	OK	
Oxygen Sensor Monitor - Bank 1 Sensor 2 (\$02)						
Component ID	Value	Min	Max	Unit	Status	
Post Catalyst Sensor Lean Test (\$8C)	0.087718	0.000000	0.199958	V	OK	



**NOTE:** Status is calculated by the tablet by comparing the test Value against the displayed test limit (either Min or Max). Status is shown as either Low, High or OK.

3. Tap the **X** icon to close the test results screen and return to the OBD Testing Modes screen.

## Request Control On-Board System - Mode \$08

The **Request Control On-Board System - Mode \$08** mode allows you perform an EVAP Test or Particulate Filter Regeneration and Inducement System Reinitialization.

- **EVAP Test** - lets you initiate a leak test for the vehicle's EVAP system.
- **Particulate Filter Regeneration** – this service requests the vehicle to initiate a PF regeneration. The vehicle manufacturer is responsible to determine the criteria to enable, start and stop the test, such as engine running, vehicle speed, or engine rpm.
- **Inducement System Reinitialization** - This service requests the vehicle to initiate a reinitialize the inducement system. The vehicle manufacturer is responsible to determine the criteria to enable, start and stop the test, such as engine running, vehicle speed, or engine rpm.



**NOTE:** The tablet does not perform the leak test, but signals to vehicle's on-board computer to initiate the test. The vehicle manufacturer determines the criteria and method for stopping the test once it has been started. **BEFORE** using the Request Control On-Board System function, refer to the vehicle's service manual to determine the procedures necessary to stop the test.



**NOTE:** Some vehicle manufacturers do not allow Tablets or other external devices to control vehicle systems. If the Request Control On-Board System is not supported by

the vehicle under test, an advisory message display. Tap the **Back** to return to the OBD Testing Mode.

1. From the OBD Testing Modes, tap for **Request Control On-Board System - Mode \$08**.

- A Request Control On-Board System - Mode \$08 screen displays.



**NOTE:** The EVAP Test is used for Spark Ignition, and the Particulate Filter Regeneration and Inducement System Reinitialization use for Compression Ignition.

2. Tap the test you wish to perform displayed on the screen.
  - A “One moment please...” message displays while the tablet performs the test.
3. When the test has been initiated by the vehicle’s on-board computer, a confirmation message displays.

## LIVE DATA - MODE \$01

The tablet allows you view and/or record “real-time” Live Data for further vehicle analysis. This information includes values (volts, rpm, temperature, speed, etc.) and system status information (open loop, closed loop, fuel system status, etc.) generated by the various vehicle sensors, switches, and actuators.

The real time (Live Data) vehicle operating information (values/status) that the computer supplies to the tablet for each sensor, actuator, switch, etc. is called **Parameter Identification Data (PID)**.


Each PID (sensor, actuator switch, status, etc.) has a set of operating characteristics and features (parameters) that serve to identify it. The tablet displays this information for each sensor, actuator, switch, or status that is supported by the vehicle under test.



**DANGER:** If the vehicle must be driven to perform a troubleshooting procedure, ALWAYS have a second person help you. One person should drive the vehicle while the other person observes the tablet data. Trying to drive and operate the tablet at the same time is dangerous and could cause a serious injury to you and bystanders.

## Viewing Live Data

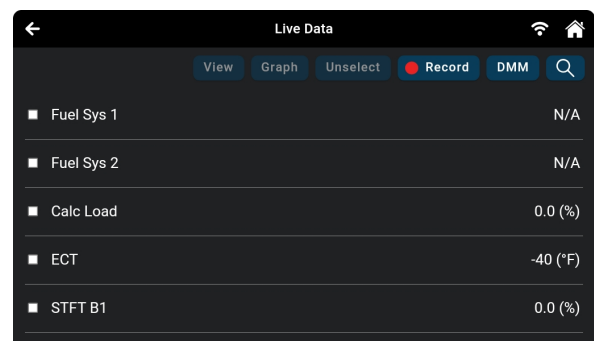

1. Connect with the vehicle by following the steps for **OBD2 DIAGNOSTICS / PERFORMING A SCAN**. [\[See page 14\]](#)
2. While linked to the vehicle, start the engine.
3. Tap the **Live Data** button to place the tablet in Live Data mode.
  - A progress dialog displays while the vehicle is scanned, and Live Data mode is activated.
  - Tap **Cancel** to exit the procedure.
4. The results screen displays all of the vehicle’s available PIDs with reported values. Each PID is unselected to offer customization on which




component you wish to select and explore further. A total PID count is provided at the top left of the screen.




**NOTE:** The View, Graph, and Unselect buttons remain “disabled” until a PID is selected from the list.

5. Select the **PID(s)** you wish to explore.
  - A “checkmark” indicates the associated PID *is selected* for viewing.
  - An “empty checkbox” indicates the PID is *not selected* for viewing.
  - Tapping a checkbox repeatedly will toggle it on and off.
  - Tap the **Unselect** button to unselect *all* PIDs.
6. Tap the “**search**”  icon to quickly search for the PID(s) you wish to view or graph.
  - Use the keyboard to type in the name of the PID(s) and select as desired.
  - Tap the “**hide search**”  icon to exit the search function and return to the PID list.
7. Tap the **View** button to view the selected PIDs data in tabular mode.
  - Each entry in the table shows the name of the PID, and a numerical representation of the current value for the PID.

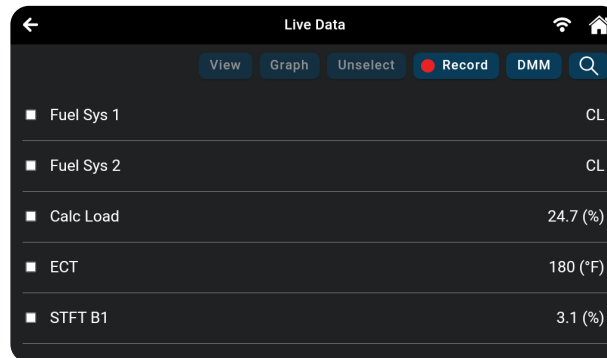

- Tap **PID List** to return to the full PID results list. (*Step 4 above*)


8. Tap the **Graph** button to view the selected PIDs in graph mode.

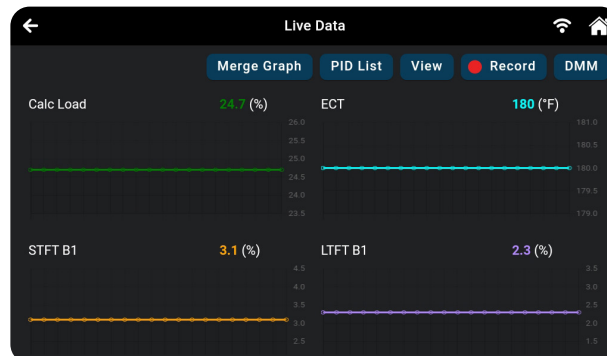




**NOTE:** The Graph function button will stay inactive if the selected PID does not report a numerical value. An example is the Fuel System Status PID, which reports either Open Loop (OL) or Closed Loop (CL).

9. Tap the **Merge Graph** button to view more PIDs on a single graph.

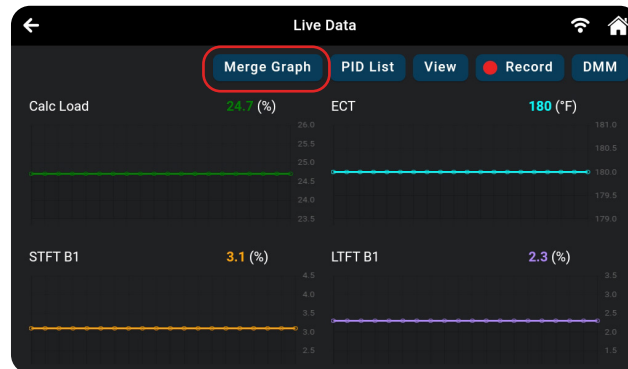

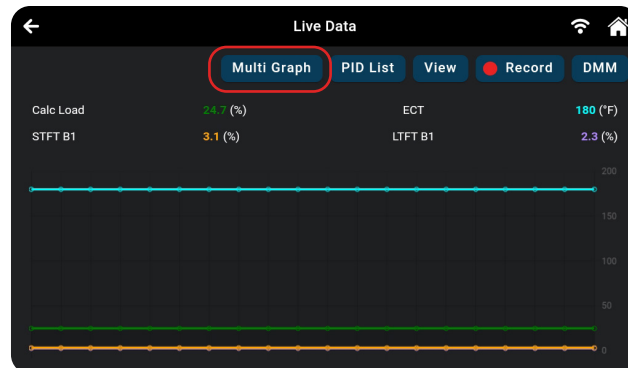

10. Tap the **Multi Graph** button to go back to the selected PIDs in graph mode.



11. Tap the **Record** button to record the selected PIDs in real time. [\[See page 26\]](#)



**NOTE:** Tapping the **Record** button without selecting any PIDs will record **all** of the vehicle's available PIDs.


12. When troubleshooting vehicle problems, use the Live Data / PID results displayed on the tablet and compare them against the specifications found in the vehicle's repair manual.
13. Tap the  icon to return to the *OBD2 Diagnostics* results page, or the  **Home** icon to exit.

## Recording (Capturing) Live Data

The tablet allows you to record and save Live Data information for each PID supported by the vehicle.

Place the tablet in *Live Data* mode as indicated in **Live Data Mode**. [\[See page 24\]](#)

1. Tap **Record** to begin recording Live Data. Tap **Stop** to stop recording.
2. A “Recording Complete” dialog displays the message “Would you like to save the recorded live data?”

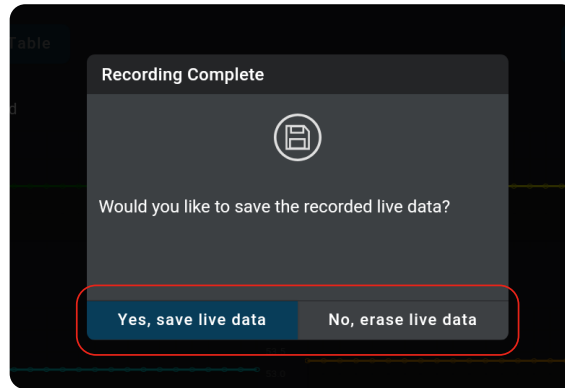


- Tap **Yes, Save Live Data** to save the recorded data to the tablet's memory for later playback [See page 82].
- Tap **No, Erase Live Data** to discard the recorded data.

### Live Data Split Screen Mode

An exceptional aspect of the Innova 7111 and DS200 integration is its ability to display Live Data and DMM values on a single display view. This time saving feature allows users to simultaneously utilize the digital multimeter alongside real-time vehicle data.

1. Tap the **DMM** button. The screen switches to the Live Data Split Screen mode.

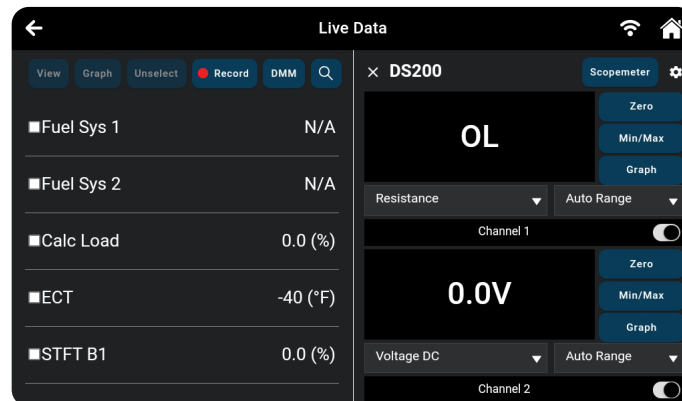

2. Measure, compare, and analyze values instantly as events unfold, as desired.


## VEHICLE INFORMATION - MODE \$09

The **OBD2 DIAGNOSTICS** test results page includes additional information, which can be accessed by tapping the **Vehicle Info** button on the results page. This page allows you to view **Customer Information**, **Vehicle ID**, **Available**


**Modules**, and **In-Use Performance Tracking (IPT)**.

1. Tap on the **Vehicle Info** button to display the details.
2. A dialog screen shows. Scroll to view each section.

### Additional Vehicle Information & Customer Information


- **Additional Vehicle Information** – offers basic information such as VIN and Year, Make and Model of vehicle. More details are accessible with the Vehicle Information button.
- **Customer Information** – Includes the Date/Time at which the scan was run and the customer's information, which can be edited using the  icon. [\[See page 29\]](#)

REPORT ID: 2 | 2018 FORD EXPLORER | VIN:...A75690 | ODO: 39,999 Mi

Additional Vehicle Information	Customer Information 
VIN: 1FM5K8HT4JGA75690	Date/Time: 03/18/22 1:20 PM
YMME: 2018 Ford Explorer V6, 3.5L	First Name: N/A
	Last Name: N/A
	Phone: N/A
	Email: N/A

### Vehicle ID

The Vehicle ID section displays the following information:

← Vehicle Info 

Vehicle ID

Global Format  
 Ford Explorer (1FM5K8HT4JGA75690)  
 Vin#: 1FM5K8HT4JGA75690  
 Module#: \$7E8  
 Cal ID: JZBR3AZ.H32  
 CVN: D4 01 D4 8A

- **VIN:** The complete Vehicle Identification Number.
- **YMME:** The vehicle's year, make, model and engine.
- **Module No:** The control module identification number(s).
- **Cal ID:** The vehicle's calibration ID(s). These IDs uniquely identify the software version(s) for the vehicle's control module(s).
- **CVN:** The Vehicle's Calibration Verification Number(s) (CVNs) required by OBD2 regulations. CVNs are used to determine if emission-related calibrations for the vehicle under test have been changed.

### Available Modules

The Available Module section displays the following information:

- **OBD2:** Confirms the vehicle's on-board diagnostic system is OBD2 compliant.
- **Protocol:** Lists the vehicle's OBD2 communication protocol. This can be either ISO 9141, Keyword 2000, J1850 PWM, J1850 VPW or CAN.
- **Module\$:** Lists the primary control module's identification number.

**Available Modules**

OBD2  
Protocol: CAN500KBAUD  
Module\$: \$7E8

## In-Use Performance Tracking (IPT)


The tablet can retrieve In-use Performance Tracking (IPT) statistics for monitors supported by the vehicle under test. Two values are returned for each monitor; the number of times that all conditions necessary for a specific monitor to detect a malfunction have been encountered (XXXCOND), and the number of times that the vehicle has been operated under the specific conditions for the monitor (XXXCOMP). Statistics are also provided for the number of times the vehicle has been operated in OBD monitoring conditions (OBDCOND), and the number of times the vehicle's engine has been started (IGNCNTR).

**In-Use Performance Tracking**

Description	Count
OBDCOND	516
IGNCNTR	1717
CATCOMP1	572
CATCOND1	516

## EDITING CUSTOMER INFORMATION

Each vehicle scan can be personalized by adding the customer's information, including their **First Name**, **Last Name**, **Phone** and **Email**.

1. Tap the  icon to display the Edit Customer Information fields.
2. Tap the field you wish to edit, then enter the desired value using the keyboard.
  - Enter the **Phone number (including area code) as a 10-digit number**, without spaces or other characters (Example: **8005551212**).
  - Be sure to use a properly formatted Email address (Example: **yourname@gmail.com**).
3. When all desired information has been entered, tap **Save** to save your changes.
  - A confirmation message displays when customer information has been successfully saved.
  - If an invalid Phone number or Email address has been entered, an advisory message

**Enter Customer Information**

First Name

Last Name

Phone

Email


**Save****Cancel**

displays. Tap **Close** to return to the Edit Customer Information fields. Make the necessary correction(s), then tap **Save** to save your changes.

## SCHEDULED MAINTENANCE

The **Scheduled Maintenance** page provides a listing of scheduled maintenance procedures due at the next service interval. The **Next Service** field shows the odometer reading at which the associated service procedures are due.

Each entry in the list shows a scheduled inspection or repair/ replacement procedure. In cases of replacement procedures, the entry shows the required replacement part(s), the “per unit” part cost, and the number of parts required for the procedure.

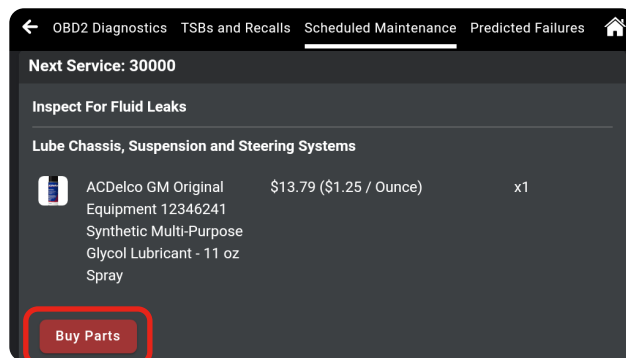


Tap the **Buy Parts** button to access the web page for your preferred online parts supplier.



**NOTE:** The tablet uses the value entered in the **Retailer** section of the **SETTINGS** page to determine your preferred parts supplier. [\[See page 86\]](#)

## PREDICTED FAILURES

The **Predicted Failure** page provides a listing of components and systems that may experience a failure within the next 12-month period. Each is based on historical data taken from millions of real-world vehicle repair records collected for over 25 years by Innova's network of ASE Master Technicians across the U.S.

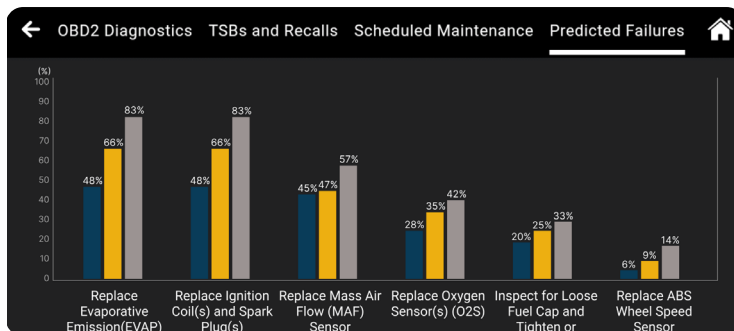


Each entry in the list provides the following information:

- **Predicted Failure(s) within 12 months:** A brief description of the predicted failure/repair/ maintenance procedure required.
- **Probability of Failure:** Expressed as a percentage of 100; shows a bar graph and numerical value. The higher the value, the most likely the failure will occur.
- **Price:** Estimated cost to accomplish the associated repair/ maintenance procedure.

## TSBs AND RECALLS


The **TSBs and Recalls** page provides a listing of all Technical Service Bulletins (TSBs) and Recalls issued against the vehicle.

TSBs and Recalls are grouped in categories (NHTSA Recalls, Body TSBs, Electrical TSBs, Factory Recalls, etc.). The number of items in each category is shown following the category name.

Tap the  icon for a category to expand the category and view the full text of the associated TSBs or recalls.



**NOTE:** Some TSBs and/or recalls for the vehicle may have already been accomplished.

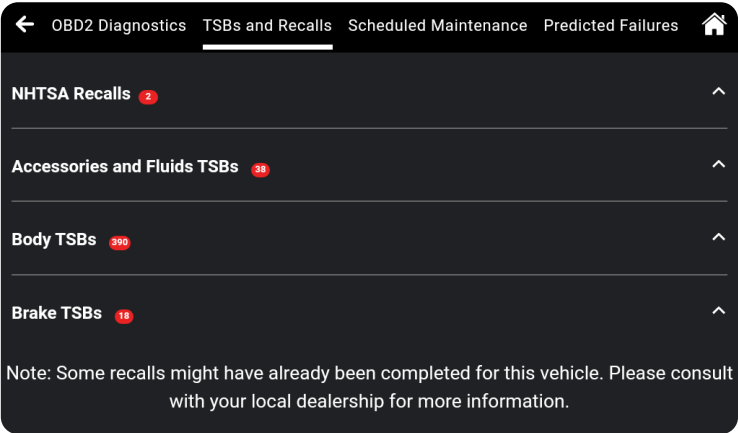


## OEM DIAGNOSTICS

The **OEM Diagnostics** function allows you to perform enhanced, OEM level diagnostics not available over generic OBD2. Access ABS, Airbag, Transmission, Tire Pressure, Battery, and many body control modules to view and erase their DTCs. Perform bi-directional tests on fuel pumps, injectors, ignition coils, and much more. Plus, get access to hundreds of additional parameters that you can view in real-time.



## PERFORMING A SCAN – OEM DIAGNOSTICS


1. Follow the **AutoLink Connection** steps to connect with the vehicle. [\[See page 11\]](#)
2. Tap **OEM Diagnostics**.
3. A selection dialog is provided.
4. Select the type of test you wish to perform.
  - Tap **Select System** to initiate a thorough scanning of the Powertrain, Body, or Chassis systems. [\[See page 33\]](#)
  - Tap **Scan All Systems** to perform a comprehensive vehicle scan of all available network modules. [\[See page 34\]](#)
  - Tap **Vehicle Inspection** to perform a complete vehicle health status report, including: OBD2 check, all network system scan, service checks, warning lights, tire pressures, and more. [\[See page 41\]](#)
  - Tap the “**individual**” listed control module name (for example: **ECM - Engine Control Module**) to perform a diagnostic check on that single module. [\[See page 35\]](#)

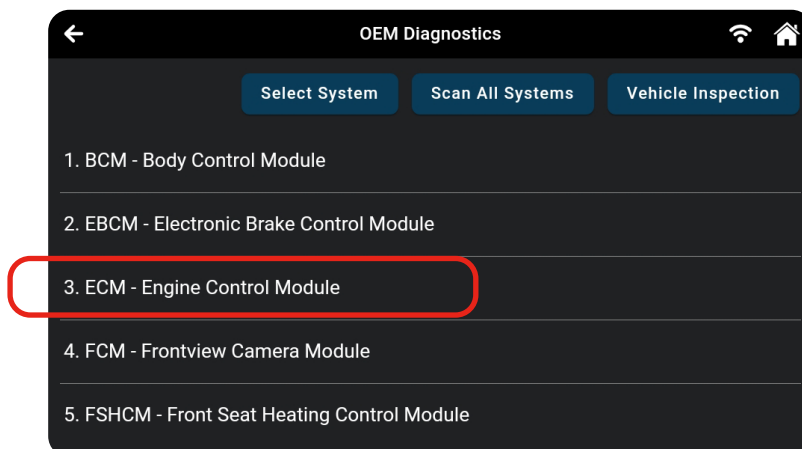

## SELECT SYSTEM

1. From the OEM Diagnostics results screen, tap **Select System**.

- The Module Selection displays.

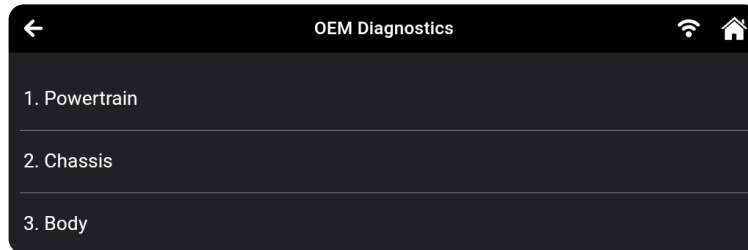


2. Choose either **Powertrain**, **Body**, or **Chassis** modules that you wish to scan.

- A message displaying “Retrieving Vehicle Information...” will appear while the tablet scans all systems within each module. Please be patient as this process may take a few moments.
- Tap “**Cancel**” to stop the scan and return to the previous screen.
- For Powertrain on *BMW models only*, follow these additional steps:
  - Turn the ignition OFF, then back ON.
  - Tap **Continue** to complete the scan.
- If the Tablet fails to link to the vehicle’s computer, a “Scan Failed” message shows.
  - Ensure the vehicle is OBD2 compliant.
  - Verify the connection at the DLC, and verify the ignition is ON.
  - Turn the ignition OFF, wait 5 seconds, then back ON to reset the computer.
  - Tap **Try Again** to try again; or tap **Cancel** to return to the Home Page.

3. The Select System screen will display the diagnostic test results.

## VIEWING THE “SELECT SYSTEM” TEST RESULTS

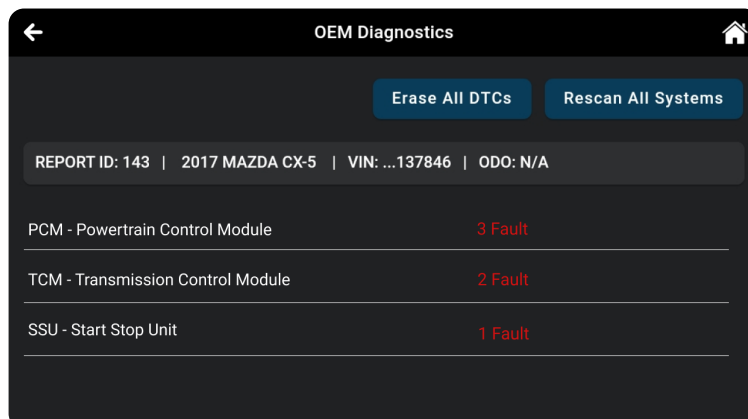

Each report begins with a vehicle information bar that includes a **Report ID**, the vehicle's description (**year/make/model**), the last six digits of the Vehicle Identification Number (**VIN**) and the odometer reading (**ODO**) at the time the scan was performed.

The results window lists all tested Control Modules with its corresponding result:

- **# Fault** – Indicates the number of reported DTCs.
- **No Fault** – Indicates that no DTCs were found.
- **Available** – Indicates that the module is part of the system but does not report DTCs.

The results screen also allows to either:

- **Erase All DTCs** - Erases all the vehicle's retrieved Diagnostic Trouble Codes (DTC). [[See page 40](#)]
- **Rescan All Systems** - Performs a complete "Select System" report. [[See page 41](#)]

## SCAN ALL SYSTEMS


---

1. From the OEM Diagnostics results screen, tap **Scan All Systems**.
2. A progress bar appears, "*Retrieving Vehicle Information...*", while the tablet scans all the vehicle's equipped modules. Please note that it will take a few moments while it scans all of the vehicle's systems.
  - Tap "**Cancel**" to stop the scan and return to the previous screen.
  - On *BMW models only* follow this process:
    - Turn the ignition OFF, then back ON.
    - Tap **Continue** to complete the scan.
  - If the Tablet fails to link to the vehicle's computer, a "Scan Failed" message shows.
    - Ensure the vehicle is OBD2 compliant.
    - Verify the connection at the DLC, and verify the ignition is ON.
    - Turn the ignition OFF, wait 5 seconds, then back ON to reset the computer.
    - Tap **Try Again** to try again; or tap **Cancel** to return to the Home Page.
3. The Scan All Systems screen displays the diagnostic test results.

## VIEWING THE "SCAN ALL SYSTEMS" TEST RESULTS

Scan results are shown immediately following completion of a scan; and can also be viewed later using the **PREVIOUS VEHICLE** function available through the Home page. [[See page 80](#)]

Each report begins with a vehicle information bar that includes a **Report ID**, the vehicle's description (**year/make/model**), the last six digits of the Vehicle Identification Number (**VIN**) and the odometer reading (**ODO**) at the time the scan was performed.

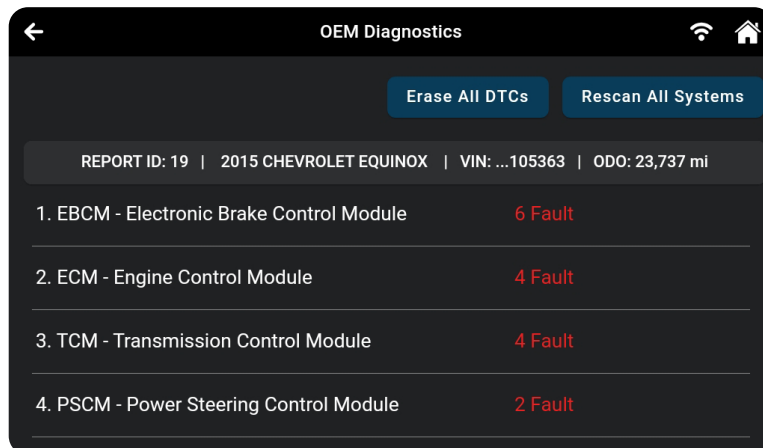

The results window lists all tested Control Modules with its corresponding result:

- **# Fault** – Indicates the number of reported DTCs.
- **No Fault** – Indicates that no DTCs were found.
- **Available** – Indicates that the module is part of the system but does not report DTCs.


The results screen also allows to either:

- **Erase All DTCs** - Erases ALL of the vehicle's retrieved Diagnostic Trouble Codes (DTC). [[See page 40](#)]
- **Rescan All Systems** - Performs a complete "Scan All Systems" report. [[See page 41](#)]


## VIEWING & SCANNING AN INDIVIDUAL CONTROL MODULE

Perform diagnostics for a single, selected vehicle module. Depending on the module selected, you can **Read DTCs**, **Erase DTCs**, view **Live Data**, and perform **Active Test** and/or **Special Function** procedures.

1. From the *Select System* result page or *Scan All Systems* results page, tap the **name of the module** you wish to explore further.

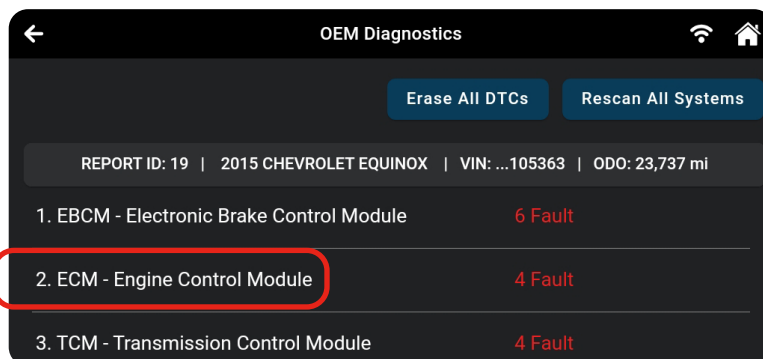

- The *Available Functions* dialog selection screen is provided.

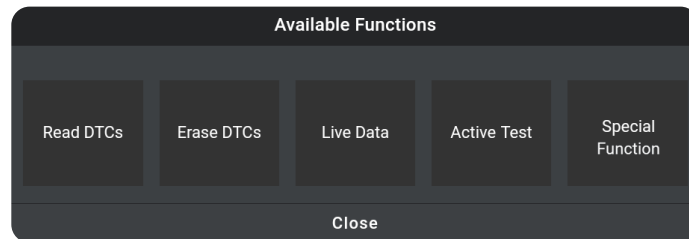

- Tap on the corresponding button to perform the function you would like to run. Or, tap **Close** to exit.




**NOTE:** Actions that are not available for the selected module are “grayed” out.

- **Read DTCs** – [See page 36](#)
- **Erase DTCs** – [See page 37](#)
- **Live Data** – [See page 37](#)
- **Active Test** – [See page 38](#)
- **Special Function** – [See page 39](#)

## Reading DTCs for a Selected Module

- Select the module for which you wish to read DTCs. [[See page 35](#)]
- Tap **Read DTCs** in the “*Available Functions*” menu.
  - The tablet retrieves and displays DTCs stored in the vehicle’s computer for the currently selected module.
  - Each entry shows the DTC number, type, and definition.

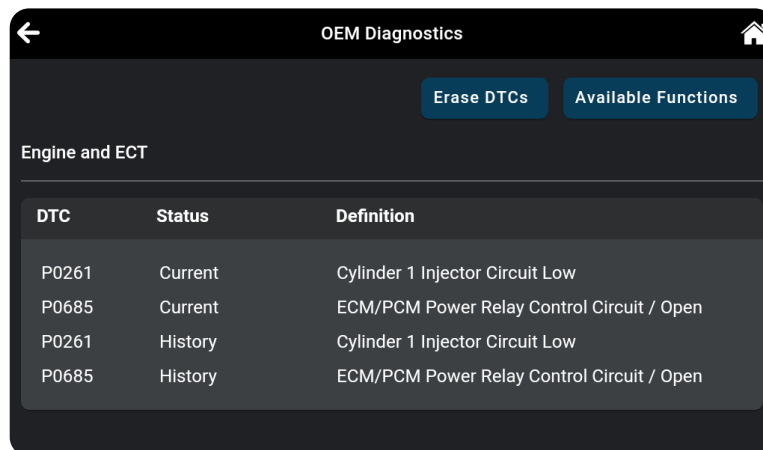


**NOTE:** If no DTCs for the selected module are currently stored in the vehicle’s computer, the message “No DTCs” displays.

3. Continue as desired:

- Tap the **Erase DTCs** button to erase ALL retrieved Diagnostic Trouble Codes (DTCs).
- Tap the **Available Functions** button to open its selection menu.
- Tap the ← icon at the top left of the screen to return to the *All Systems Scan* screen.

### Erasing DTCs for a Selected Module


1. Select the module for which you wish to read its DTCs. [\[See page 35\]](#)
2. Tap **Erase DTCs** in the “Available Functions” menu. A confirmation message shows.
  - Ensure that the ignition in the Key ON, Engine OFF position.
  - If you are sure you want to proceed, tap **Continue**.
  - If you do not want to proceed, tap **Cancel** to cancel the erase procedure.
3. If you chose to erase DTCs, an “Erasing DTCs...” message displays while the erase function is in progress.
  - If the erase was successful, a confirmation message shows. Tap **Scan Again** to re-scan the currently selected module; or tap **Close** to exit and return to the test results screen.
  - If the erase was not successful, an advisory message shows. Make sure the tablet is properly connected to the vehicle’s DLC, then tap **Try Again** to repeat the erase procedures.
  - Tap **Cancel** to cancel the erase procedure and close the message.

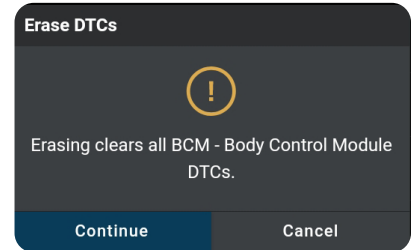

### Viewing Live Data for a Selected Module

You can view Live Data for the currently selected module.

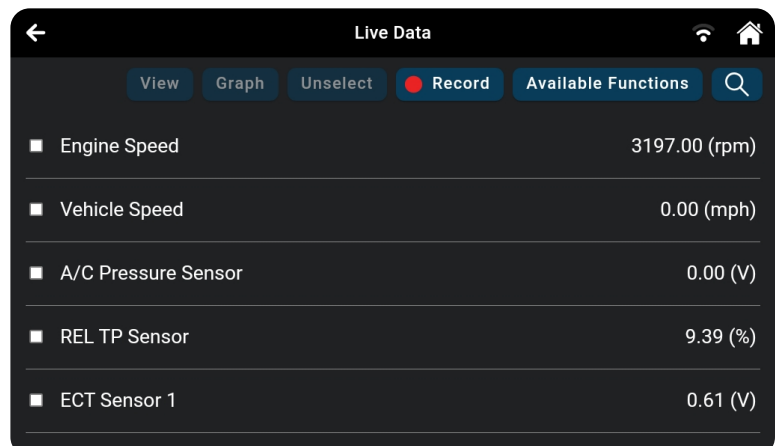

1. While linked to the vehicle, start the engine.
2. Select the module for which you wish to view Live Data. [\[See page 35\]](#)
3. Tap **Live Data** in the “Available Functions” menu to place the tablet in Live Data mode.
4. The results screen displays all of the vehicle’s available PIDs with reported values. Each PID is unselected to offer customization on which component you wish to select and explore further. A total PID count is provided at the top left of the screen.
5. Select the PIDs you wish to explore further and continue as desired:
  - Tap the **View** button to view PID data in a tabular format.



- Tap the **Graph** button to view PID data in graphical format.
- Tap the **Unselect** button to unselect all PID parameters.
- Tap **Record** to record the selected Live Data PID(s) in real time.




**NOTE:** Tapping the **Record** button without selecting any PIDs will record **all** of the vehicle's available PIDs.

- Tap the **Available Functions** button to open its selection menu.
- Tap the  icon to quickly search and select desired PID(s).
- Tap the  icon at the top left of the screen to return to the *All Systems Scan* screen.

## Performing Active Tests for a Selected Module


Active Tests let you perform active tests for various vehicle actuators and systems. The specific tests available depend on the vehicle make and model.


1. Select the module for which you wish to perform Active Tests. [\[See page 35\]](#)
2. Tap **Active Test** in the “Available Functions” menu.
  - The tablet retrieves and displays a menu of Active Tests available for the vehicle under test.

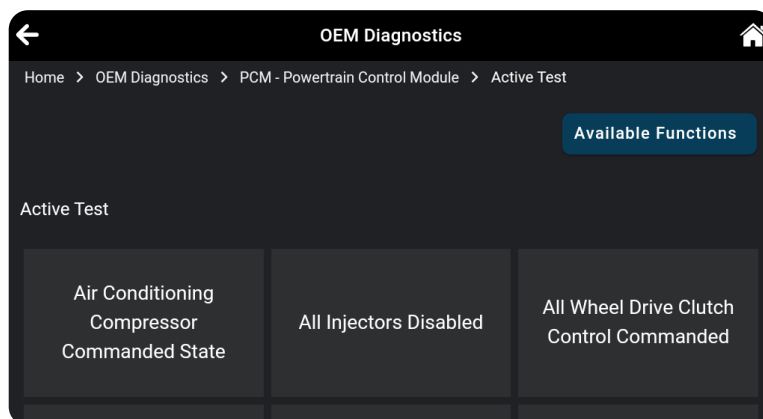

**NOTE:** If Active Tests are not supported for the vehicle under test, the message “Active Test is not supported for this vehicle” displays. Tap **Exit** to return to the previous page.

- Choose the desired test.
  - The tablet may display one or more instructional screens to prepare the vehicle for testing.
3. Prepare the vehicle for testing, as necessary.
    - The tablet displays a “control” screen to run the test.

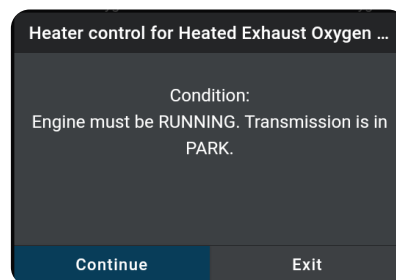

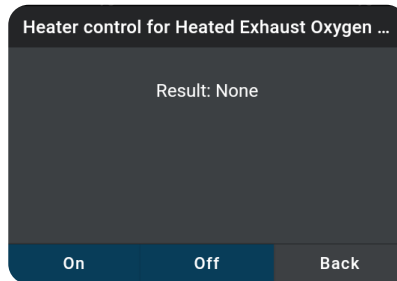


4. Tap the appropriate control to operate the actuator as desired.
  - The screen refreshes to show the result.
5. Repeat step 3 as desired.
6. Tap **Back** to return to the Active Test menu.

### Performing Special Functions for a Selected Module

Special Functions let you perform diagnostic and calibration procedures for various vehicle actuators and systems. The specific tests available depend on the vehicle make and model.


1. Select the module for which you wish to perform Special Functions. [[See page 35](#)]
2. Tap **Special Function** in the “Available Functions” menu.
  - The tablet retrieves and displays one or more menus of Special Functions available for the vehicle under test.

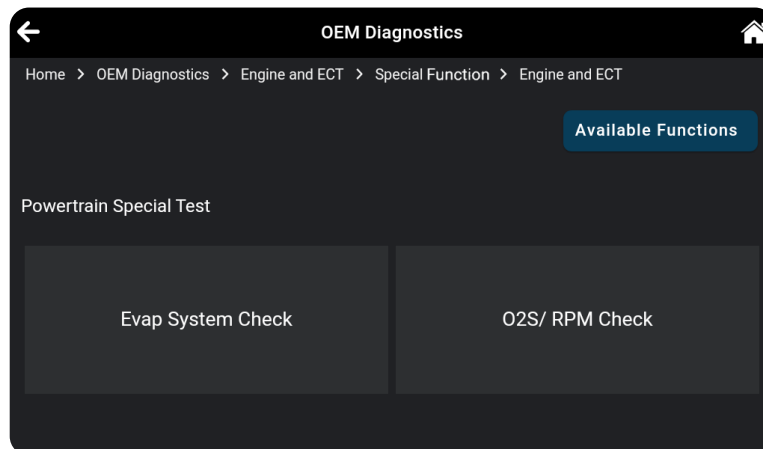


**NOTE:** If Special Functions are not supported for the vehicle under test, the message “Special Function is not supported for this vehicle” displays. Tap **Exit** to return to the previous page.

3. Make the necessary selections to choose the desired test.

- A series of instructional screens display.

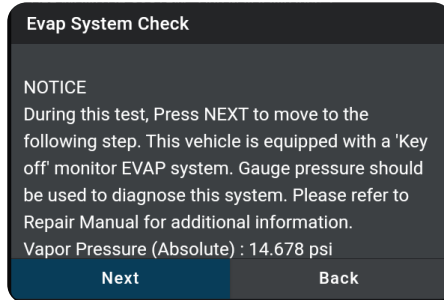

4. Follow the on-screen prompts to prepare the vehicle for testing, and to perform the selected test procedure.
  - A "results" screen displays when the test procedure has completed.

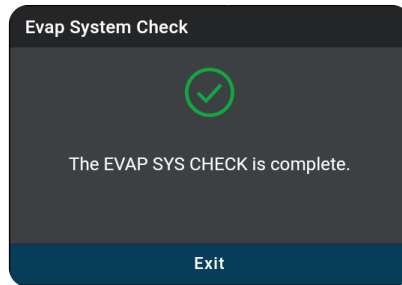


5. Tap **Finish** or **Exit** to return to the previous menu.
6. Tap the ← icon at the top left of the screen to return to previous page.

## ERASE ALL OEM DTCs

Erase all the stored OEM DTCs from the vehicle's computer memory as follows:

1. Perform the **Select System** or **Scan All Systems** steps. [\[See page 34\]](#)
2. If the tablet is already connected and linked to the vehicle's computer, proceed directly to **Step 3**.
  - Ensure that the ignition in the Key ON, Engine OFF position.
3. Tap the **Erase All DTCs** button at the top of the *Select System* or *Scan All Systems* results page.
  - The tablet displays an attention message confirming deletion.

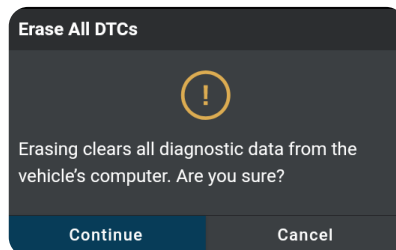

- If you want to proceed, tap **Continue**.
  - If you do not want to proceed, choose **Cancel** to exit the erase procedure.
4. By selecting to Erase DTCs, a “*One moment please...*” progress dialog displays during the erase process.
    - If the erase was successful, a confirmation dialog displays.
  5. If the erase was not successful, an advisory dialog displays with instructions with either:
    - “*Turn the ignition off, then turn the ignition on*” = follow steps and tap **Erase DTCs** to resume.
    - “*Erase has failed*” = tap **Erase Again** to try again.
  6. Once all DTCs are erased, tap **Scan Again** to confirm that all DTCs were erased.
    - Or tap **Close** to exit.

## RESCAN ALL SYSTEMS

Use this function to get the most current diagnostic status for the vehicle under test – particularly as you continue to troubleshoot each individual control module.


1. From the “*Select System*” or “*Scan All Systems*” result page, tap **Rescan All Systems** button at the top right of the page.
2. Tool generates a new report and updates the “*Select System*” or “*Scan All Systems*” results page. [[See page 34](#)]

## VEHICLE INSPECTION HEALTH REPORT


The **Vehicle Inspection** function facilitates assessment of a vehicle's systems and components to determine its overall health and to identify potential issues. Three types of Vehicle Inspection reports are available: **Diagnostic Report**, **Customer Report**, and **Collision Industry Report**. Each report returns a unique set of data according to the report type.

Use the Vehicle Inspection function to retrieve and view operational and diagnostic information including OBD2 Diagnostic Info, MIL DTC Diagnostic Info, Scan All Systems, Service Check, Service Warning Lights and TSB Recall, Schedule Maintenance, Predictive Failure, and Warranty.

1. From the OEM Diagnostics screen, tap the **Vehicle Inspection** button.
  - The Select Business Report screen displays.
2. Tap the **Business Report** you wish to retrieve.

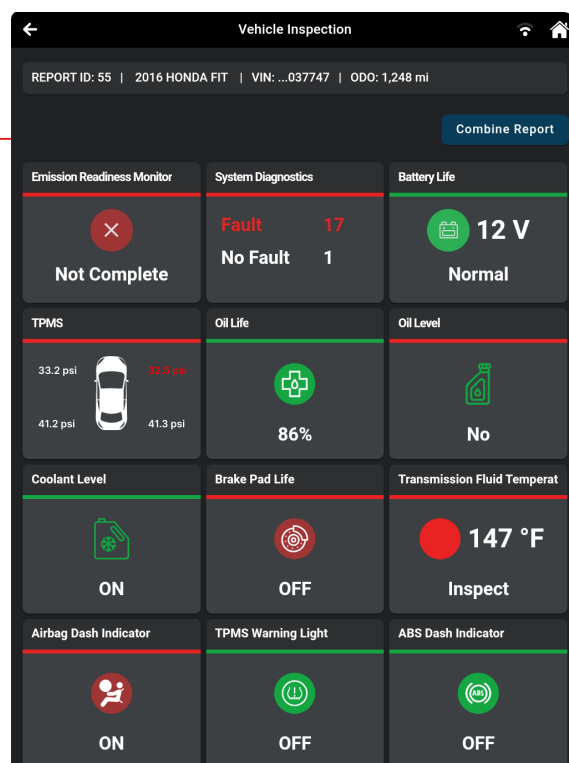

- **Diagnostic Report** - Provides a report for OBD2 data, MIL DTC additional information, Scan All Systems data, and Vehicle Care.
- **Customer Report** - Provides a report for OBD2 data, Scan All Systems data, Service Check, Service Warning Lights, and Vehicle Care.
- **Collision Industry Report** - Provides a report for OBD2 data, Scan All Systems data, Service Check, and Service Warning Lights.

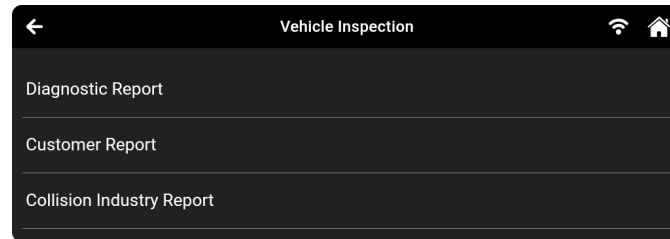


3. The next screen displays the report type menu. Tap the report type you wish to view.

- **PreScan** - View the vehicle's diagnostic report before making any repairs.
- **PostScan** - View the vehicle's diagnostic report after completing the repairs or improvements.



**NOTE:** You must conduct the PreScan report before generating the PostScan report.

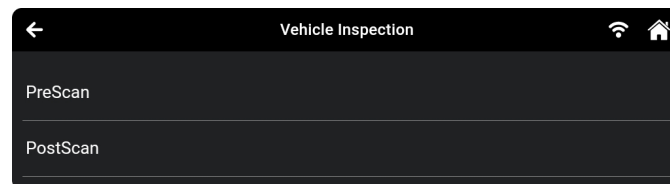

4. A progress bar appears, “Retrieving Vehicle Information...”, while the tablet scans all of the vehicle's equipped modules.
- It can take several minutes depending on the number of available systems available on the vehicle being tested. Tap **Cancel** to abort the scan.

## VIEWING THE VEHICLE INSPECTION TEST RESULTS

Scan results are shown immediately following completion of a scan; and can also be viewed later using the **PREVIOUS VEHICLE** function available through the **Menu** or **Home** page. [\[See page 80\]](#).

Each report begins with a vehicle information tab that includes a **Report ID**, the vehicle's description (**year/make/model**), the last six digits of the Vehicle Identification Number (**VIN**) and the odometer reading (**ODO**) at the time the scan was performed.

### Emissions Readiness Monitors Status

Indicates whether the vehicle is ready for an Emissions Test (Smog Check) based on DTCs present, Freeze Frame

data, Monitor Status, MIL (Check Engine Light) status, State/Region, and Engine Type. Results are shown as “Complete” or “Not Complete”.

- Tap the **Emission Readiness Monitor** tab to view the OBD2 Diagnostics report. [[See page 14](#)]
- **Emission Readiness Monitor** - For a “Not Complete” result, drive cycle procedures can be found in the OBD2 Diagnostics screen. [[See page 21](#)]

## System Diagnostics (DTC Status Overview)

Gives a quick snapshot of all Diagnostic Trouble Codes (DTCs) found on the vehicle with “**Fault** – DTCs reported” or “**No Fault** – no DTCs present”.

- Tap the **Systems Diagnostics** tab to open the Scan All Systems window to view scan details. [[See page 34](#)]

## Vehicle Service Status

Some vehicles are capable of checking and reporting on its various service items. If available, the tablet displays these as individual tab segments as defined below. Use these results to share with customer or to create a service due task list.

- **Battery Life:** Indicates the current battery charge voltage and suggests if the battery requires replacement. The Battery Life field is color-coded to provide a visual indication of battery status: *Green = good; Yellow = poor; Red = replace battery.*
  - Tap the **Battery Life** tab to access the Battery/Alternator Test. [[See page 52](#)]
- **TPMS / Tire Pressure Readings:** Shows the status of the vehicle Tire Pressure Monitoring System (TPMS) and the individual tire pressures for all vehicle tires. The TPMS field is color-coded to provide a visual indication of tire pressure status: *Green = good; Red = low pressure.*
- **Oil Life:** Shows the current oil life for the vehicles lubricating oil as a percentage of 100. The Oil Life field is color-coded to provide a visual indication of oil life status: *Green = good; Red = poor.*
- **Oil Level:** Shows if the level is normal or below the manufacturer's set threshold: *Green = Good; Red = Low Level Warning.*
- **Coolant Level:** Indicates if the coolant reservoir is filled to the recommended manufacturer specifications. The Coolant Level is color-coded and provides a visual status: *Green = OK; Red = Low.*
- **Brake Pad Life – Front & Rear:** Shows the current measured brake pad life for the Front and Real axle as a percentage of 100. The Brake Pad Life is color-coded and provides a visual status: *Green = OK; Red = Not OK.*
- **Transmission Fluid Temperature:** Shows the current measure temperature of the vehicle's Transmission Fluid Temperature. The temperature is color-coded and provides a visual status: *Green = Good Condition; Red = Inspect.*

## Dashboard Warning Light Status

The tablet can read if the vehicle's systems are reporting a dashboard warning light status. If available for the vehicle under test, the tablet displays these as individual tab segments as defined below. Use these as part of the inspection process to confirm a lit dashboard warning light.

- **Airbag Dash Indicator:** Reports if the airbag dashboard light is currently ON or OFF. It is color-coded to provide a quick visual status: *Red = ON; Green = OFF*.
- **TPMS Warning Light:** Reports if the Tire Pressure Monitoring System (TPMS) dashboard light is currently ON or OFF. It is color-coded to provide a quick visual status: *Red = ON; Green = OFF*.
- **ABS Dash Indicator:** Reports if the Anti-Lock Brake System (ABS) dashboard light is currently ON or OFF. It is color-coded to provide a quick visual status: *Red = ON; Green = OFF*.

## Pre/PostScan Report

The Pre/PostScan Report is a crucial part of maintenance process, serving as a strategic guidepost for effective system upkeep. It consists of two key phases: **PreScan**, conducted before any work begins, and **PostScan**, performed after repairs or improvements are completed. By offering a comparative analysis of these two reports, it provides a comprehensive understanding of the system's development, ensuring transparency, and operational excellence.

- From the PostScan report, tap the **Combine Report** button to perform the function.

Pre/PostScan Report		
System	PreScan	PostScan
Emission Inspection Status	Fail	Pass
Battery Voltage	12.07 V	12.06 V
Service Check		
Odometer	1248 miles	1248 miles
Oil Life	90 %	90 %
Oil Level	Low	OK
Transmission Fluid Temperature	179.6 °F	179.6 °F
TPMS		
Left Front Tire Pressure	33.2 psi	33.2 psi

## FCA SECURE GATEWAY (Fiat, Chrysler, Alfa Romeo, Dodge, RAM, Jeep)

---

Innova has partnered with FCA and AutoAuth® to grant authentic access to FCA's Secure Gateway (SGW). Our partnership allows us to offer SGW-unlocking solutions. **This feature applies only to Fiat, Chrysler, Dodge, RAM, Jeep, and Alfa Romeo (FCA) models from 2018 and above.**

### WHAT IS SGW?

Starting with 2018 models, a Secure Gateway Module (SGW) was implemented in the electrical architecture to secure the vehicle's network and control access. This module is similar to a firewall that prevents unauthorized vehicle network access, which may put vehicle systems and customers at risk.

### FUNCTIONS LIMITED BY SGW

Certain functions are restricted due to SGW implementation:

- Erase OEM DTCs
- OEM Special Functions/Active Tests
- Workshop Tools (Resets, Relearns, Routines, Calibrations)

However, you can still carry out the following:

- OBD2 Diagnostics
- Reading OEM DTCs
- Viewing OEM Live Data

### PREPARING THE 7111 FOR FCA SECURE GATEWAY ACCESS

1. Make sure your 7111 tool is up-to-date by installing the latest firmware [[See page 92](#)].
2. Register for an authorized [AutoAuth®](#) account.
  - Click **Register** to create your account.
  - Fill in the necessary 'User Signup' fields and agree to the AutoAuth Terms & Conditions.
  - Click the **Sign-Up** button.
  - Check your email for account verification.
  - Follow the steps to signup as a **Service Center** or as an **Independent Technician**.
3. Register your device.
  - Tap **Settings** to view and copy your tool's serial number [[See page 83](#)].
  - On your AutoAuth account, navigate to **Manage Tools** and select **Add Tool**.
  - Select "**Innova Electronics**" as the manufacturer.
  - Under model, select "**All Models**".

- Enter, or paste, your tool's serial number.



**NOTE:** Be cautious with the number '0' and the letter 'O.' Both can look quite similar.

- Click **Add Tool** to complete the process.

4. Your 7111 is SGW ready!

## UNLOCKING THE FCA SECURE GATEWAY

Follow these steps when working on a Fiat, Chrysler, Dodge, RAM, Jeep, or Alfa Romeo with a secure gateway.

1. Ensure you have a stable and constant Internet connection [[See page 87](#)].
2. Select the **OEM Diagnostics** or **Workshop Tools** function you wish to perform.
  - A login window appears.
3. Enter your AutoAuth login credentials and tap **Continue**.
4. Proceed as usual to complete your diagnosis.


## WORKSHOP TOOLS

The **WORKSHOP TOOLS** tab allows you to perform over 30 OEM service reset procedures. Depending on the vehicle being tested, the tablet will only display the procedures which are specific to your vehicle. It can include a combination from any of the following reset procedures.



### AVAILABLE WORKSHOP TOOLS

- |   |   |  |
|---|---|--|
| <input type="checkbox"/> A/F Setting                        | <input type="checkbox"/> Headlamp Calibration             | <input type="checkbox"/> Steering Angle Sensor Calibration |
| <input type="checkbox"/> ABS Bleeding                       | <input type="checkbox"/> Immobilizer Reset                | <input type="checkbox"/> Suspension Calibration            |
| <input type="checkbox"/> AC System Relearn                  | <input type="checkbox"/> Injector Coding                  | <input type="checkbox"/> Throttle Body Relearn/TEC Learn   |
| <input type="checkbox"/> AdBlue Reset                       | <input type="checkbox"/> Key Coding Procedure             | <input type="checkbox"/> Tire Size Reset                   |
| <input type="checkbox"/> Battery Reset                      | <input type="checkbox"/> Language Change Reset            | <input type="checkbox"/> TPMS Relearn                      |
| <input type="checkbox"/> Battery/Alternator Test            | <input type="checkbox"/> Maintenance Reset                | <input type="checkbox"/> Transmission Fluid Level Check    |
| <input type="checkbox"/> Clutch Relearn                     | <input type="checkbox"/> NOx Sensor Reset                 | <input type="checkbox"/> Transmission Fluid Temperature    |
| <input type="checkbox"/> Coolant Bleeding                   | <input type="checkbox"/> Occupant Seat Sensor Calibration | <input type="checkbox"/> Transmission Reset                |
| <input type="checkbox"/> DPF Reset                          | <input type="checkbox"/> Read/Write Odometer Settings     | <input type="checkbox"/> Transport Mode                    |
| <input type="checkbox"/> Electric Parking Brake (EPB) Reset | <input type="checkbox"/> Oil Maintenance Reset            | <input type="checkbox"/> Window Door Roof                  |
| <input type="checkbox"/> EV/HEV/PHEV Battery Health         | <input type="checkbox"/> Reset Electric Traction System   |  |

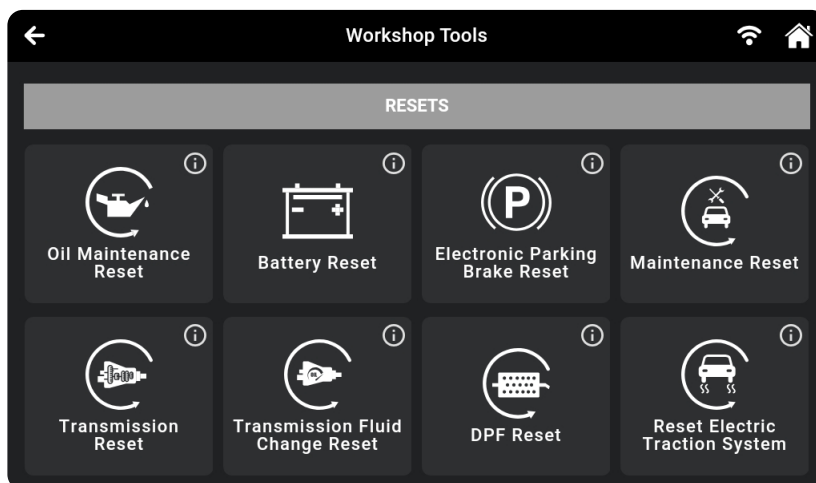


**NOTE:** Tap the **i** icon to access the video tutorial and description for each function.

## OIL MAINTENANCE RESET

### Resetting the Oil Maintenance Light

1. Tap **Oil Maintenance Reset** on the Workshop Tools screen.
  - An “instructional” dialog displays to confirm selection.
  - Select **Yes** to continue. Or, **No** to cancel.

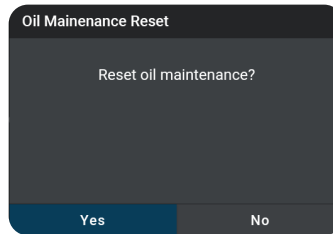

- A “One moment” message displays while the procedure is in process.
2. When the reset process has completed, a confirmation message displays. Tap **Exit** to return to the Workshop Tools screen.
    - If the oil reset was not successful, an advisory message displays.





**NOTE:** If the Tablet cannot reset the Oil Maintenance Light, an “instructional” dialog displays, showing the manual procedures for resetting the indicator light. When finished viewing the instructions, tap **Back** to return to the Workshop Tools screen.

## BATTERY RESET

You can use the tablet to view the procedures for resetting the battery monitor system following battery replacement or perform battery reset OBD service.

### To view battery reset procedures:


1. Tap **Battery Reset** on the Workshop Tools screen.
  - The Battery Reset menu displays.
2. Tap **Battery Reset Procedures**.
  - The Battery Reset Procedures menu displays. The menu provides access to **General Information**, and procedures to be followed **Before Battery Disconnection**, **Before Battery Connection**, and **After Battery Connection**.

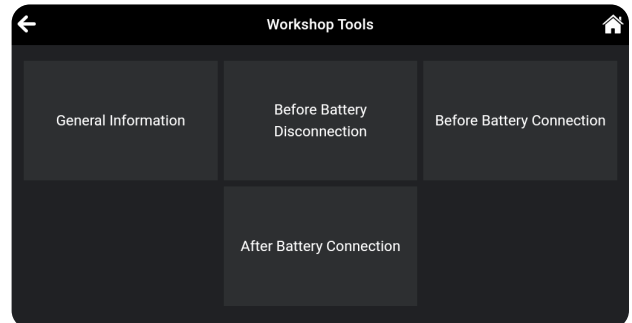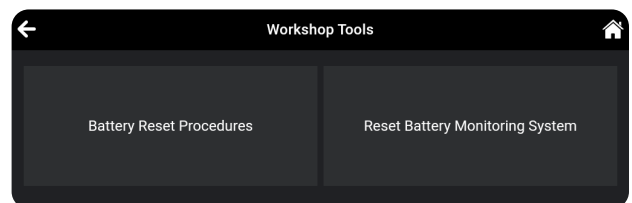

**NOTE:** If battery reset procedures are not available, an advisory message shows. Tap **Back** to return to the Workshop Tools screen.


## Electronic Parking Brake (EPB) Reset

3. Tap the procedure you wish to view.
  - The selected procedure displays.
4. When you have finished viewing the retrieved information, tap **Back** to return to the Battery Reset Procedures menu. Repeat **step 3** to view additional procedures.
  - When you have finished viewing all desired procedures, tap on the ← icon at the top of the page to return to the Workshop Tools screen.

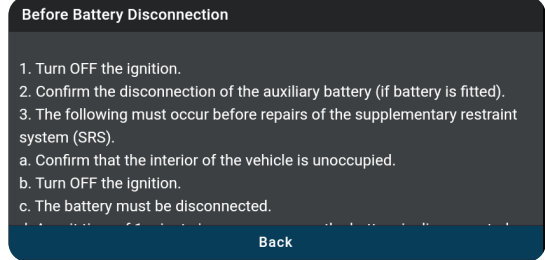

### To perform battery reset OBD service:

1. Tap **Battery Reset** on the Workshop Tools screen.
  - The Battery Reset menu displays.
2. Tap **Reset Battery Monitoring System** or **Battery Replacement Registration** – available selection depends on the vehicle being serviced.
  - An “instructional” message displays.
3. Follow the instructions provided to prepare the vehicle for battery reset OBD service. When all necessary procedures have been performed, tap **Next** to continue.
  - A “One moment please...” message displays while battery reset is in process.
4. If the battery reset process is successful, a “Reset Complete” message displays. Tap **Exit** to return to the Workshop Tools screen.
  - If the battery reset process is not successful, a “Reset Fail” message displays. Tap **Exit** to return to the Workshop Tools screen.

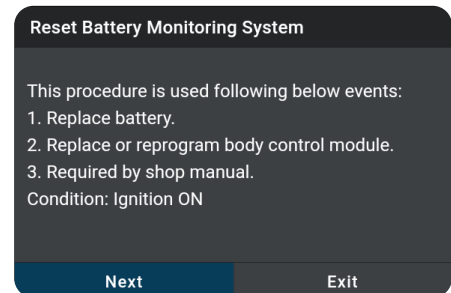


## ELECTRONIC PARKING BRAKE (EPB) RESET

The **Electronic Parking Brake (EPB)** reset procedures vary between vehicle makes and models.



**NOTE:** If an error occurs while performing calibration procedures, an “advisory” message displays. Tap **Exit** to return to the Workshop Tools screen.


1. Tap **Electronic Parking Brake Reset** on the Workshop Tools screen.
  - For some vehicles, one or more sub-menus display. Tap the desired module and/or option, as appropriate. Proceed to **step 2**.

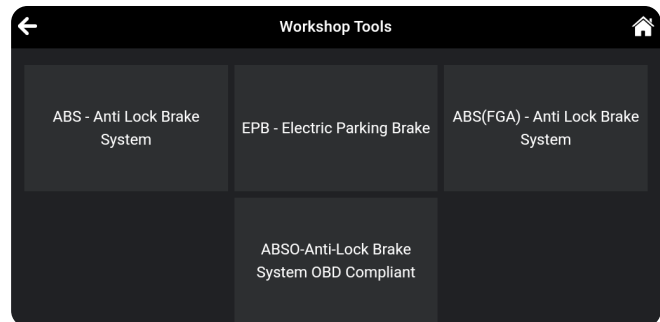



**NOTE:** If Electric Parking Brake reset is not supported by the vehicle under test, an “advisory” message displays. Tap **OK** to return to the Workshop Tools screen.

2. A “One moment” message displays, followed by one or more “informational/ instructional” or “selection” screens.
  - Perform test procedures as directed. Tap **Next**, as appropriate, to continue to the next step.
3. For some vehicles, “status” screens display as each phase of the calibration procedure is successfully completed. Tap **Next**, as appropriate, to scroll to the next screen.
  - A “One moment” message displays while the procedure is in process.
  - A “results” screen displays when the calibration procedure has completed.

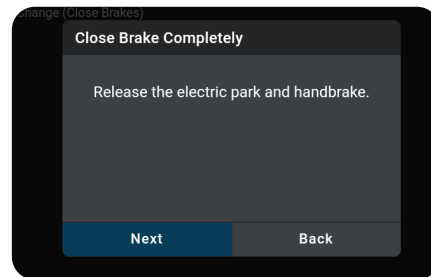

**NOTE:** If the procedure is stopped due to a communication error, an “advisory” message displays. Tap **Exit** to return to the Workshop Tools screen.

4. Tap on the ← icon at the top of the page to return to the Workshop Tools screen.


## STEERING ANGLE SENSOR (SAS) CALIBRATION

The Steering Angle Sensor (SAS) Calibration function procedures vary between vehicle makes and models.




**NOTE:** If an error occurs while performing calibration procedures, an “advisory” message displays. Tap **Exit** to return to the Service Reset menu.

1. Tap **Steering Angle Sensor Calibration** on the Workshop Tools screen.
  - For some vehicles, one or more sub-menus display. Tap the desired **module** and/or **option**, as appropriate. Proceed to **step 2**.

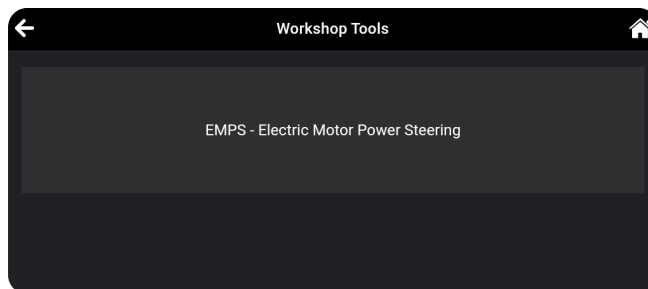


**NOTE:** If SAS calibration is not supported by the vehicle under test, an “advisory” message displays. Tap **OK** to return to the Service Reset menu.

2. A “One moment” message displays, followed by one or more “informational/ instructional” screens.

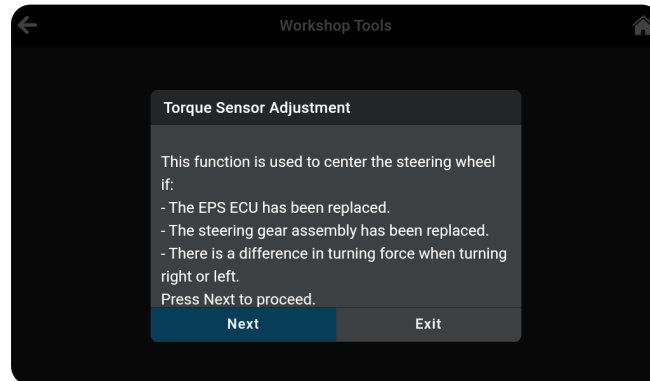


- Perform test procedures as directed. Tap **Next** or **Continue**, as appropriate, to scroll to the next screen. Or, tap **End** or **Exit** to terminate the procedure.
3. For some vehicles, “status” screens display as each phase of the calibration procedure is successfully completed. Tap **Next**, as appropriate, to scroll to the next screen.
    - A “results” screen displays when the calibration procedure has completed.
  4. Tap **End** or **Exit**, as appropriate, to return to the Steering Angle Sensor Calibration menu.
  5. Tap on the ← icon at the top of the page to return to the Workshop Tools screen.

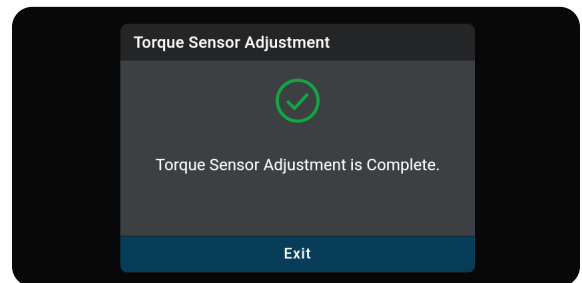

## TRANSMISSION FLUID TEMPERATURE

Depending on the vehicle under test, the tablet allows to view temperature readings from the Transmission Fluid Temperature Sensor (TFT) to help identify transmission overheating issues.

1. Tap **Transmission Fluid Temperature** on the Workshop Tools screen.
  - A “One moment please...” progress dialog displays. Tap **Cancel** to cancel the operation.
2. The Transmission Temperature Live Data PID list displays.
3. Select the PID(s) you wish to view and tap **View**, **Graph**, **Record** or **DMM**. [\[See page 24\]](#)
  - Tap **Unselect** to unselect all PID parameters.
4. Tap on the ← icon at the top of the page to return to the Workshop Tools screen.

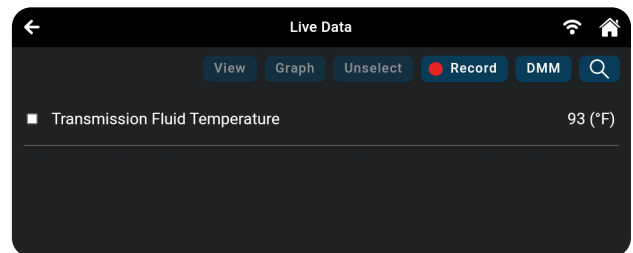

## ABS BLEEDING

The ABS Bleeding function procedures vary between vehicle makes and models.





**NOTE:** If an error occurs while performing ABS bleeding procedures, an “advisory” message displays. Tap **Exit** or **Back**, as necessary, to return to the Service Reset menu.



**NOTE:** If ABS bleeding is not supported for the vehicle under test, an “advisory” message displays. Tap **Retry**, as necessary, to return to the Service Reset menu.

1. Tap **ABS Bleeding** on the Workshop Tools screen.
  - One or more sub-menus will display. Select the desired options, then proceed to step 2.
2. One or more “informational/ instructional” screens display.
  - Perform test procedures as directed. Tap **Next** to scroll to the next step.
3. For some vehicles, “status” screens display as each phase of the calibration procedure is successfully completed. Tap **Next** to scroll to the next step.
  - A “results” message displays when the procedure has completed.
4. Tap **End** to close the results message.

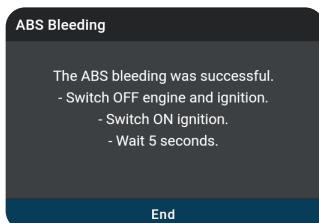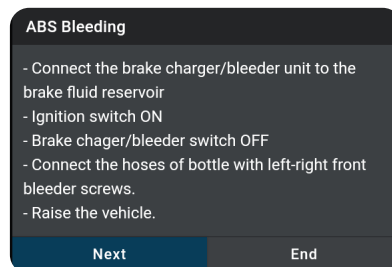

5. Tap on the ← icon at the top of the page to return to the Workshop Tools screen.

## BATTERY/ALTERNATOR TEST

The tablet can check the vehicle’s battery and alternator systems to ensure operations are within acceptable limits. You can test just the battery (**Battery Test**) or check both the battery and alternator (**Alternator Test**).

### BATTERY TEST ONLY

To perform a battery check **ONLY**:

1. Tap **Battery/Alternator Test** on the Workshop Tools screen.


- The Battery/Alternator Test menu displays.

2. Tap **Battery Test**.

- An “instructional” message displays, showing the procedures to prepare the vehicle for the battery check.

3. Prepare the vehicle for the battery check:

- Turn the engine off.
- Place the transmission in PARK or NEUTRAL, and set the parking brake.
- Make a visual check of the battery's condition. If the battery terminals are corroded or other damage is present, clean or replace the battery as appropriate.
- For “unsealed” batteries, make sure the water level in each cell is above the battery plates.
- Turn the ignition on. **DO NOT** start the engine.

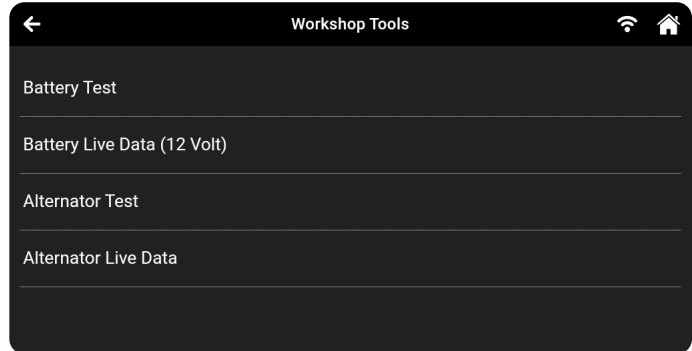

4. Tap **Continue** to proceed.



**NOTE:** If the engine is running, an advisory message shows. Turn the engine off, then turn the ignition on. **DO NOT start the engine. Tap Continue to proceed.**

- An “instructional” message displays.

5. Turn the vehicle's headlights on, then tap **Continue** to proceed.

- A “countdown” message shows while the battery check is in process.

6. Turn the vehicle's headlights off, then tap **Continue** to proceed.

- An “instructional” message shows.
- If battery voltage is *less than* 12.1 volts, an advisory message shows. Tap **Home** to return to the Home Page. Turn the ignition off and disconnect the tablet from the vehicle. Fully charge the battery, then repeat the battery check.
- If battery voltage is *between* 11.8 and 12.1 volts, a “*Battery voltage is low, this may affect the accuracy of the test result.*”
- If battery voltage is *greater than* 12.1 volts, an “instructional” message shows.

7. Start the vehicle's engine. Allow the engine to run for several seconds, then turn the engine off. Repeat for a total of three “start/stop” cycles.



**NOTE:** If the tablet did not detect “cranking status” for the vehicle's engine, an advisory message shows. Tap **Retest** to repeat the battery check, or choose **Exit** to return to the Home Page.

8. When the battery check is complete, a results screen displays the battery status.

9. Tap **End** to return to the Battery/Alternator Test menu.

10. Tap on the ← icon at the top of the page to return to the Workshop Tools screen.

## VIEW BATTERY LIVE DATA

1. Tap **Battery/Alternator Test**.
  - The Battery/Alternator Test menu displays.
2. Tap **Battery Live Data (12 Volts)** option.
  - The Battery Live Data (12 Volts) screen displays.
  - When you are finished viewing the Battery Live Data (12 Volts), tap the **Back** button to return to the Battery/ Alternator Test menu.

## ALTERNATOR/CHARGING SYSTEM TEST

### To perform a charging system (alternator) check:

1. Tap **Battery/Alternator Test** on the Workshop Tools screen.
  - The Battery/Alternator Test menu displays.
2. Tap **Alternator Monitor**.
3. An “instructional” message shows. Start and warm the engine to normal operating temperature. Turn on the headlights. Tap **Continue** to proceed.
  - An “instructional” message shows.
  - Follow the instructions.
4. When the alternator check is complete, a results screen shows charging system voltage and indicates whether the charging system is within acceptable limits.
5. Tap **Exit** to return to the Battery/Alternator Test menu.
6. Tap on the ← icon at the top of the page to return to the Workshop Tools screen.

## VIEW ALTERNATOR LIVE DATA


1. Tap **Battery/Alternator Test**.
  - The Battery/Alternator Test menu displays.
2. Tap **Alternator Live Data**.
  - The Alternator Live Data, screen displays.
3. When you’ve concluded viewing the Alternator Live Data, choose **Back** to return to the Battery/Alternator Test menu.

## EV/HEV/PHEV BATTERY HEALTH

The tablet offers the ability to check the battery health for a variety of electric powered vehicles, including: Electric Vehicle (EV), Hybrid-Electric Vehicle (HEV), and Plug-In Hybrid Electric Vehicle (PHEV).

1. Tap **EV/HEV/PHEV Battery Health** on the Workshop Tools screen.

- The Live Data dialog page displays with corresponding PIDs.

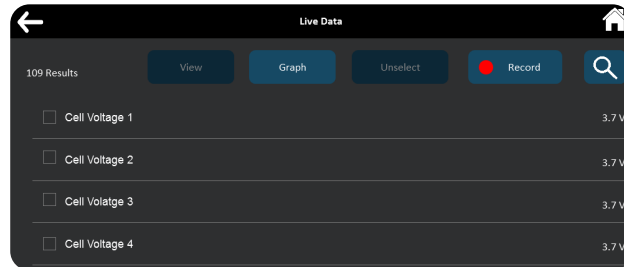


- Tap **Graph** to view all PIDs in bar graph format, or select the PIDs you wish to view and tap either the **View**, **Graph**, or **Record** buttons to proceed.




**NOTE:** When using the Graph function, selecting more than 10 PIDs will result with an alert dialog **“Recording more than 10 PIDs may decrease frequency”**. If prompted, tap the **Continue** button to view the graph or **Back** buttons to return to the PID values page.

- The **View** button displays the selected voltage PIDs in tabular format.
- The **Graph** button displays the selected PIDs in bar graph format. A voltage below recommended specs will appear “red” in color on the bar graph.

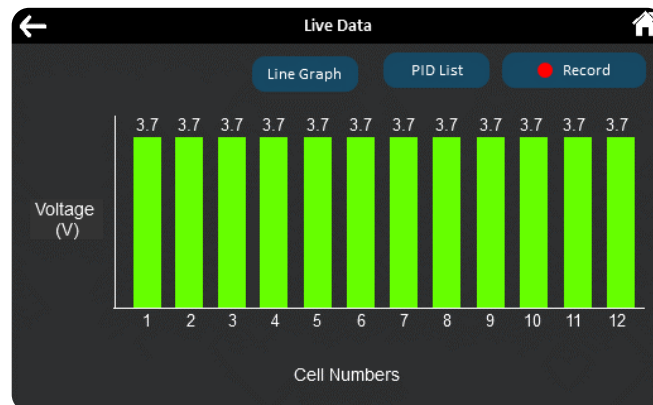

- The **Line Graph** button displays battery voltage PIDs in line graph format.

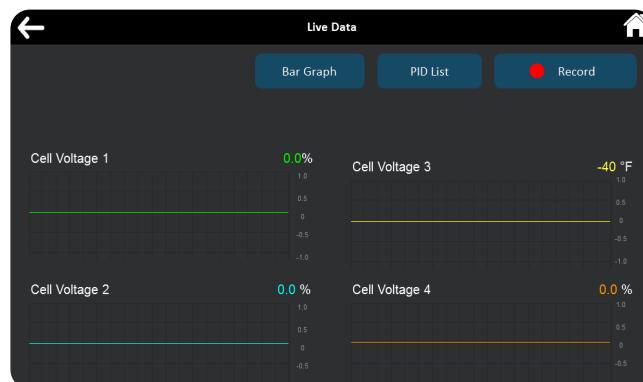

- The **PID List** button returns to the PID selection screen.
- 7. The **Record** button records selected PIDs. [\[See page 26\]](#)
- 8. Tap on the ← icon at the top of the page to return to the Workshop Tools screen.

## A/F SETTING

Allows you to set or re-learn new Air/Fuel ratio mix parameters.

The A/F Setting function procedures vary between vehicle makes and models.




**NOTE:** If an error occurs while performing A/F Setting, an “advisory” message displays. Choose **Exit**, as necessary, to return to the Workshop Tools screen.




**NOTE:** If A/F Setting is not supported for the vehicle under test, an “advisory” message displays. Tap **Exit**, as necessary, to return to the Workshop Tools screen.

1. Select **A/F Setting** in the Workshop Tools screen.
  - A “One moment please...” message may display.
  - One or more sub-menus will display. Select the desired options, then proceed to **step 2**.
2. One or more “informational/ instructional” screens display.

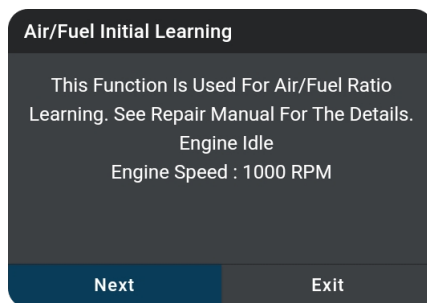

- Perform test procedures as directed. Choose **Next** or **Continue**, as appropriate, to scroll to the next screen.
3. For some vehicles, “status” screens display as each phase of the calibration procedure is successfully completed. Choose **Next** or **Continue**, as appropriate, to scroll to the next screen.
    - A “results” screen displays when the procedure has been completed.
  4. Tap **Exit** to close the results message.
  5. Tap on the ← icon at the top of the page to return to the Workshop Tools screen.

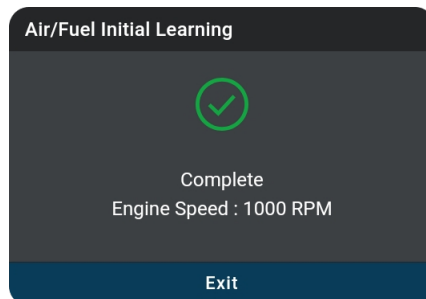

## AC SYSTEM RELEARN

Use this to re-learn the A/C equipment status after a vehicle's PCM has been replaced.




**NOTE:** If an error occurs while performing AC System Relearn, an “advisory” message displays. Choose **Exit**, as necessary, to return to the Workshop Tools screen.




**NOTE:** If AC System Relearn is not supported for the vehicle under test, an “advisory” message displays. Tap **Exit**, as necessary, to return to the Workshop Tools screen.

1. Select **AC System Relearn** in the Workshop Tools screen.
  - A “One moment please...” message may display.
  - One or more sub-menus will display. Select the desired options, then proceed to **step 2**.
2. One or more “informational/ instructional” screens display.
  - Choose **Start**, as appropriate, to perform the function.

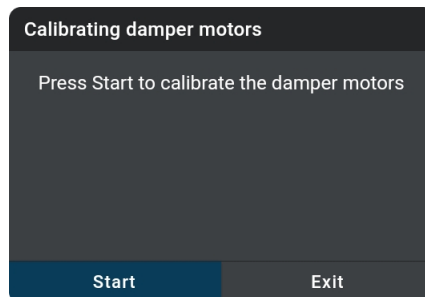

3. The screen refreshes to show results.

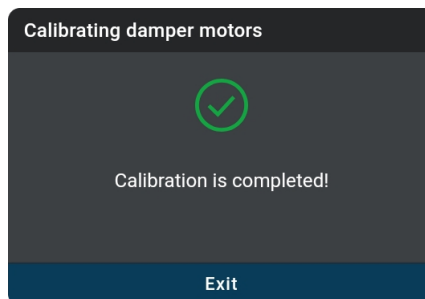

4. Tap **Exit** to close the results message.
5. Tap on the ← icon at the top of the page to return to the Workshop Tools screen.

## ADBLUE RESET


After the diesel exhaust treatment fluid is replaced or filled up, urea reset operation is required. The Adblue reset function allows you to reset the system to the specified fill level.

1. Tap **Adblue Reset** on the Workshop Tools screen.




**NOTE:** If the Adblue Reset is not supported by the vehicle under test, an “advisory” message displays. Tap **Exit** to return to the Workshop Tools screen.

- A “One moment please...” progress dialog displays. Tap **Cancel** to cancel the operation.
2. Once ready, the Adblue Reset menu will display. Select **Reset** to perform the test procedures as directed.

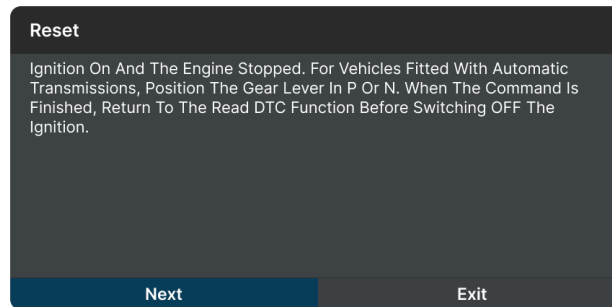

3. Tap **Next**, as appropriate, to scroll to the next screen. Or, tap **Exit** or **Cancel** to terminate the procedure.
4. A “results” screen displays when the reset procedure has been completed. Tap **Exit** to terminate the procedure.

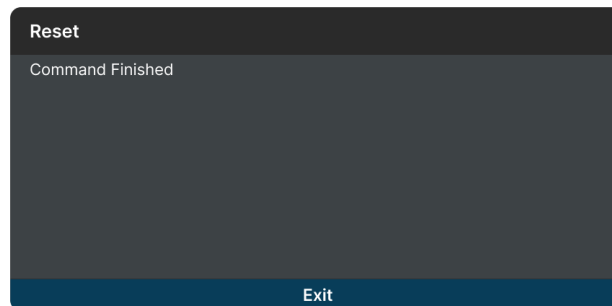

5. Tap on the ← icon at the top of the page to return to the Workshop Tools screen.

## CLUTCH RELEARN



Use to re-learn the clutch pedal up-stop and down-stop values after an ECU or clutch pedal replacement.

1. Tap **Clutch Relearn** on the Workshop Tools screen.



**NOTE:** If the Clutch Relearn is not supported by the vehicle under test, an “advisory” message displays. Tap **Exit** to return to the Workshop Tools screen.

- A “One moment please...” progress dialog displays. Tap **Cancel** to cancel the operation.
- 2. Once ready, the Clutch Relearn menu displays.
- 3. Select the desired option. Then perform the test procedures as directed. Tap **Next** or **Continue**, as appropriate, to scroll to the next screen. Or, tap **Exit** or **Cancel** to terminate the procedure.
- 4. A “results” screen displays when the reset procedure has been completed. Tap **Exit** to terminate the procedure.

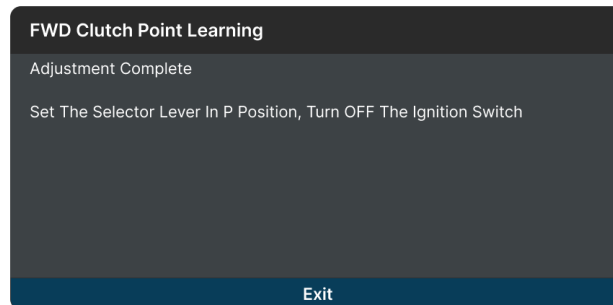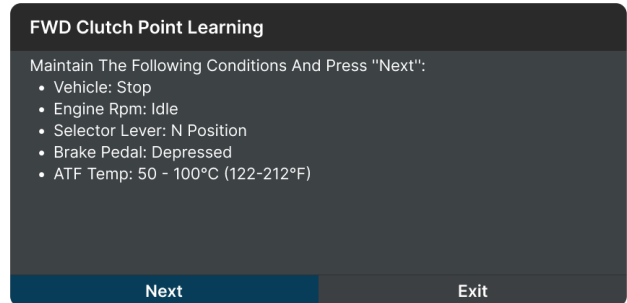

- 5. Tap on the ← icon at the top of the page to return to the Workshop Tools screen.

## COOLANT BLEEDING

Use this function whenever the coolant or antifreeze fluids are drained and/or refilled. Performing this routine removes any air pockets that may have built up when adding new coolant.

**Coolant Bleeding allows activation of the electronic water pump before venting the cooling system. Procedures vary between vehicle makes and models.**




**NOTE:** If an error occurs while performing Coolant Bleeding, an “advisory” message displays. Choose **Exit**, as necessary, to return to the Workshop Tools screen.




**NOTE:** If Coolant Bleeding is not supported for the vehicle under test, an “advisory” message displays. Tap **Exit**, as necessary, to return to the Workshop Tools screen.

- 1. Select **Coolant Bleeding** in the Workshop Tools screen.
  - A “One moment please...” message may display.
  - One or more sub-menus will display. Select the desired options, then proceed to **step 2**.

2. One or more “informational/ instructional” screens display.
  - Perform test procedures as directed. Choose **Next**, as appropriate, to scroll to the next screen.

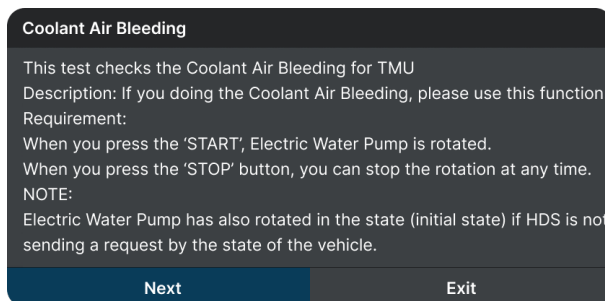

3. Tap **Start** or **Stop** as desired.
  - The screen is refreshed to show the result.

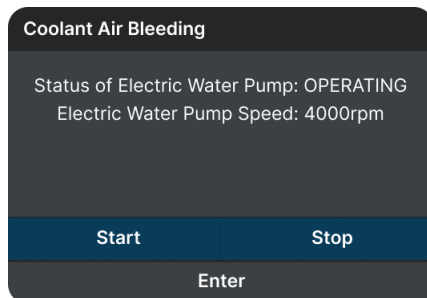

4. Tap **Enter** to finish the function.
  - One or more “instructional” screens will display. Follow the instructions on the screen.
5. Tap **Exit** to close the results message.
6. Tap on the ← icon at the top of the page to return to the Workshop Tools screen.

## DPF RESET

Use this function to initialize the regeneration of the vehicle's diesel particulate filter, or DPF, to prevent it from causing damage because of stuck of soot and ash in the vehicle's exhaust system. It also initializes the sensor and DPF component after they are replaced, when the DPF warning light came on, or when replacing the DPF pressure sensor.

1. Tap **DPF Reset** on the Workshop Tools screen.




**NOTE:** If the DPF Reset is not supported by the vehicle under test, an “advisory” message displays. Tap **Exit** to return to the Workshop Tools screen.



**NOTE:** The DPF Reset is only performed on Diesel vehicle.


- An “instructional” dialog displays to confirm selection. Select **Yes** to continue. Or, **No** to cancel.

- A “One moment please...” progress dialog displays.
2. The DPF Reset menu displays, select the desired option.

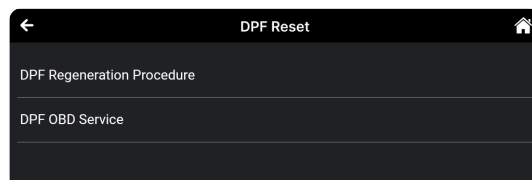


3. Tap the **DPF Regeneration Procedure**.

- The DPF Regeneration Procedure screen displays.

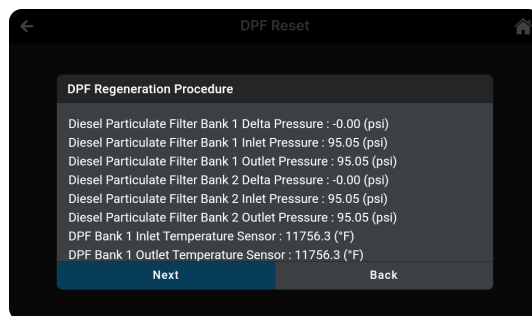

**NOTE:** If the vehicle under test does not support DPF Regeneration Procedure, an “information” screen displays the procedures for “passive” DPF regeneration. Choose **Back** to return to the DPF Reset menu.

4. Choose **Next** to continue.
  - An “informational” screen displays the procedures for “passive” or “active” DPF regeneration, as applicable. Choose **Back** to return to the DPF Reset Menu.
5. Tap the **DPF OBD Service**.
  - A “One moment” message displays, followed by the Diesel Particulate Filter Reset menu. Select the desired option.
  - An “instructional” screen displays. Prepare the vehicle for test as directed.
6. Choose **Next** to continue.
  - A series of “status” screens display while the routine is in process.
  - A “confirmation” screen displays when the routine is completed.

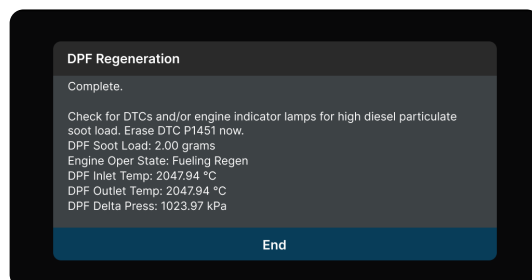



**NOTE:** If the routine does not complete successfully, an “advisory” message displays. Choose **Exit** to return to the DPF Reset menu.

7. Tap **End** to return to the DPF Reset menu, then tap on the ← icon at the top of the page to return to the Workshop Tools screen.

## HEADLAMP CALIBRATION

Calibration is required in most cases after installing a new headlamp capsule or replacing the sensors and modules used to operate the headlamps. This function allows you to adjust the ride height to the manufacturer’s recommended specifications.

**The Headlamp Calibration function procedures vary between vehicle makes and models.**





**NOTE:** If an error occurs while performing Headlamp Calibration, an “advisory” message displays. Choose **Exit**, as necessary, to return to the Workshop Tools screen.



**NOTE:** If Headlamp Calibration is not supported for the vehicle under test, an “advisory” message displays. Tap **Exit**, as necessary, to return to the Workshop Tools screen.

1. Select **Headlamp Calibration** in the Workshop Tools screen.
  - A “One moment please...” message may display.
  - One or more sub-menus will display. Select the desired options, then proceed to **step 2**.
2. One or more “informational/ instructional” screens display.
  - Perform test procedures as directed. Choose **Next** or **Continue**, as appropriate, to scroll to the next screen.
3. For some vehicles, “status” screens display as each phase of the calibration procedure is successfully completed. Tap **On**, **Off** or **Start** as desired, to perform the function.
  - A “results” screen displays when the procedure has been completed.
4. Tap **Exit** to close the results message.
5. Tap on the ← icon at the top of the page to return to the Workshop Tools screen.

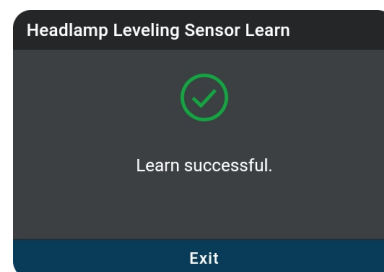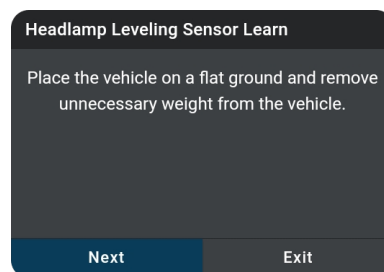

## IMMOBILIZER RESET


Allows you to reset the ignition immobilizer after the ignition switch key, ignition switch, combined instrument panel, ECU, BCM, or remote-control battery is replaced.

1. Tap **Immobilizer Reset** on the Workshop Tools screen.




**NOTE:** If the Immobilizer Reset is not supported by the vehicle under test, an “advisory” message displays. Tap **Exit** to return to the Workshop Tools screen.


- A “One moment please...” progress dialog displays. Tap **Cancel** to cancel the operation.
2. Once ready, the Immobilizer Reset menu displays.

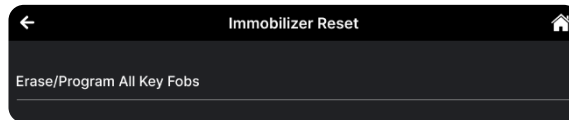

3. Select the desired option. Then perform the test procedures as directed. Tap **Next** or **Learn**, as appropriate, to scroll to the next screen. Or, tap **Exit** or **Cancel** to terminate the procedure.

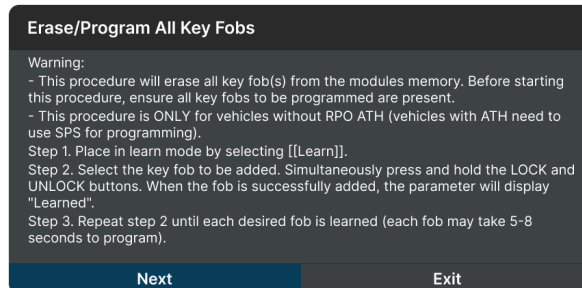

4. A “results” screen displays when the reset procedure has been completed. Tap **Exit** to terminate the procedure.

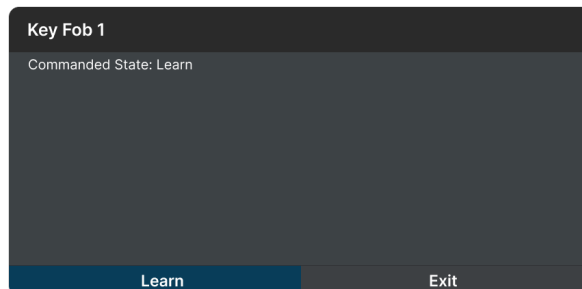

5. Tap on the ← icon at the top of the page to return to the Workshop Tools screen.

## INJECTOR CODING

Sets the injector adjustment values after installing new diesel fuel injectors so it can properly communicate with the vehicle's digital Electronic Control Unit, or ECU.

**The Injector Coding function procedures vary between vehicle makes and models.**




**NOTE:** If an error occurs while performing Injector Coding, an “advisory” message displays. Choose **Exit**, as necessary, to return to the Workshop Tools screen.




**NOTE:** If Injector Coding is not supported for the vehicle under test, an “advisory” message display. Tap **Exit**, as necessary, to return to the Workshop Tools screen.

1. Select **Injector Coding** in the Workshop Tools screen.
  - A “One moment please...” message may display.
  - One or more sub-menus will display. Select the desired options, then proceed to **step 2**.
2. One or more “informational/ instructional” screens display.
  - Perform test procedures as directed. Choose **Next** or **Continue**, as appropriate, to scroll to the next screen.

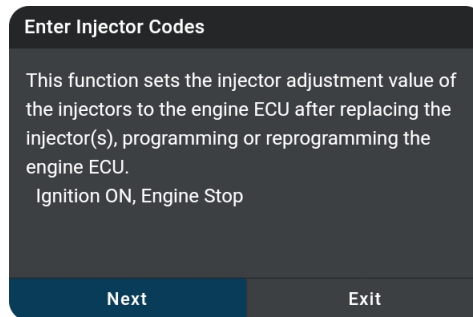

3. For some vehicles, “status” screens display as each phase of the calibration procedure is successfully completed. Choose **Next** or **Continue**, as appropriate, to scroll to the next screen.
  - A “results” screen displays when the procedure has been completed.
4. Tap **Exit** to close the results message.
5. Tap on the ← icon at the top of the page to return to the Workshop Tools screen.

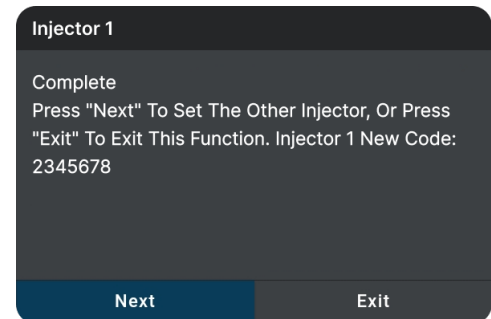

## KEY CODING PROCEDURE

Use this function to add (program) a new key fob and remotely disable a lost key – preventing the vehicle to be stolen in the future.

**The Key Coding Procedure function procedures vary between vehicle makes and models.**




**NOTE:** If an error occurs while performing Key Coding Procedure, an “advisory” message display. Choose **Exit**, as necessary, to return to the Workshop Tools screen.



**NOTE:** If Key Coding Procedure is not supported for the vehicle under test, an “advisory” message display. Tap **Exit**, as necessary, to return to the Workshop Tools screen.

1. Select **Key Coding Procedure** in the Workshop Tools screen.
  - A “One moment please...” message may display.
  - The Key Coding Procedure menu displays.
2. Tap the procedure you wish to view.
  - The screen shows the procedure for the option you selected.

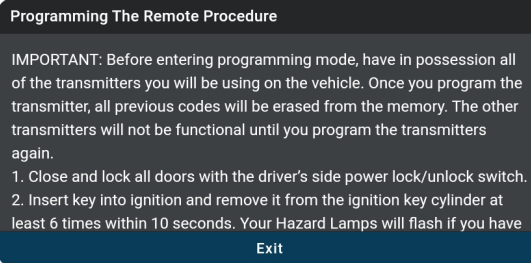

3. Tap **Exit** to close the results screen.
4. Tap on the ← icon at the top of the page to return to the Workshop Tools screen.

## LANGUAGE CHANGE RESET


Allows changing the displayed language of the cabin compartment or update the language displayed in the cluster.

1. Tap **Language Change Reset** on the Workshop Tools screen.




**NOTE:** If the Language Change Reset is not supported by the vehicle under test, an “advisory” message displays. Tap **Exit** to return to the Workshop Tools screen.

- A “One moment please...” progress dialog displays. Tap **Cancel** to cancel the operation.
2. Once ready, the Language Change Reset menu displays.

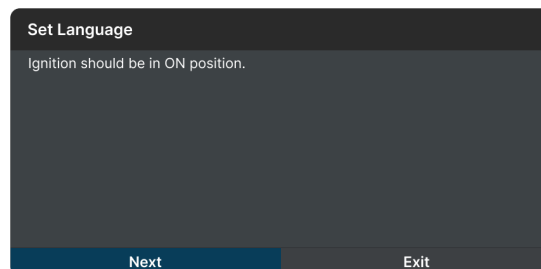

3. Select the desired language. Tap **Exit** to terminate the procedure.

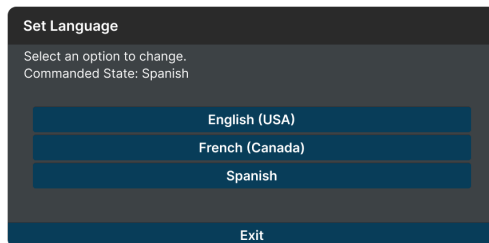

4. Tap on the ← icon at the top of the page to return to the Workshop Tools screen.

## MAINTENANCE RESET


The Maintenance Reset function gives you access to view the procedures, or send a command, for resetting the scheduled maintenance counter to zero after servicing the vehicle.

1. Tap **Maintenance Reset** on the Workshop Tools screen.




**NOTE:** If the Maintenance Reset is not supported by the vehicle under test, an “advisory” message displays. Tap **Exit** to return to the Workshop Tools screen.

- A “One moment please...” progress dialog displays. Tap **Cancel** to cancel the operation.
2. Once ready, the Maintenance Reset menu displays.
    - Select the desired option. Then perform the test procedures as directed. Tap **Next**, as appropriate, to scroll to the next screen. Or, tap **Exit** or **Cancel** to terminate the procedure.

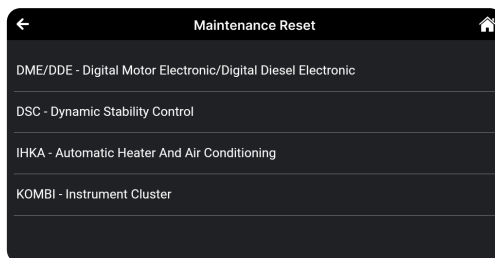

3. A “results” screen displays when the reset procedure has been completed. Tap **End** to terminate the procedure.
4. Tap on the ← icon at the top of the page to return to the Workshop Tools screen.

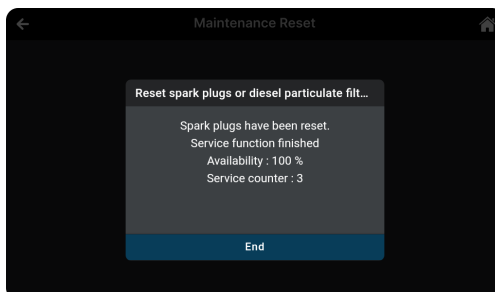


## NOX SENSOR RESET

NOx sensor helps detect the content of nitrogen oxides (NOx) within the engine's exhaust. Use this function to reset the catalytic converter correct values in the vehicle's Electronic Control Unit (or ECU) whenever a NOx fault is re-initialized and the NOx catalytic converter is replaced.


1. Tap **NOx Sensor Reset** on the Workshop Tools screen.



**NOTE:** If the NOx Sensor Reset is not supported by the vehicle under test, an "advisory" message displays. Tap **Exit** to return to the Workshop Tools screen.

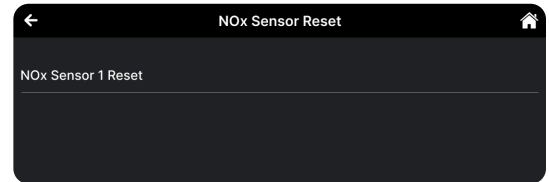

- A "One moment please..." progress dialog displays. Tap **Cancel** to cancel the operation.
2. Once ready, the NOx Sensor Reset menu displays.
3. Select the desired option. Tap **Reset** to perform reset NOx sensor selected. Or, tap **Exit** to return to the NOx Sensor Reset menu.

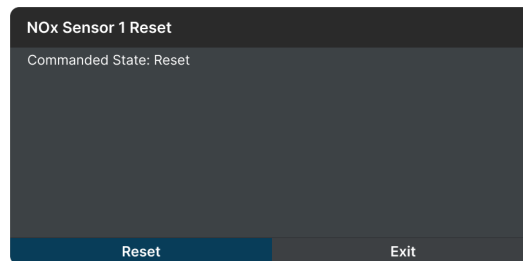

4. Tap on the ← icon at the top of the page to return to the Workshop Tools screen

## OCCUPANT SEAT SENSOR CALIBRATION

Use this to reset or calibrate the vehicle's seat sensors after making repairs after an accident or seat service routine. This feature helps set the zero point for the passenger seat.

**The Occupant Seat Sensor Calibration function procedures vary between vehicle makes and models.**





**NOTE:** If an error occurs while performing Occupant Seat Sensor Calibration, an "advisory" message displays. Choose **Exit**, as necessary, to return to the Workshop Tools screen.



**NOTE:** If Occupant Seat Sensor Calibration is not supported for the vehicle under test, an "advisory" message displays. Tap **Exit**, as necessary, to return to the Workshop Tools screen.

1. Select **Occupant Seat Sensor Calibration** in the Workshop Tools screen.
  - A “One moment please...” message may display.
  - One or more sub-menus will display. Select the desired options, then proceed to **step 2**.
2. One or more “informational/ instructional” screens display.
  - Perform test procedures as directed. Select **On** or **Off**, as appropriate.
3. For some vehicles, “status” screens display as each phase of the calibration procedure is successfully completed.
  - The screen is refreshed to show the result.

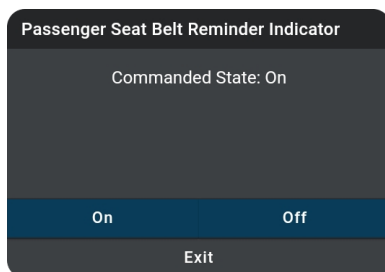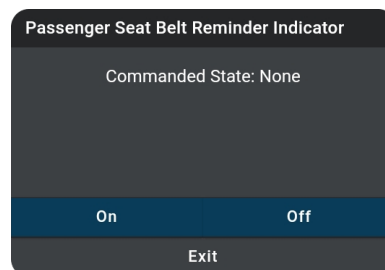

4. Tap **Exit** to close the results message.
5. Tap on the ← icon at the top of the page to return to the Workshop Tools screen.

## READ/WRITE ODOMETER SETTINGS

Use this function to copy, write, or rewrite the actual (legally correct) vehicle distance travelled (in miles or kilometers) to the vehicle's odometer chip.


Use this function to perform different settings to be modified in the combined instrument panel.

1. Tap **Read/Write Odometer Settings** on the Workshop Tools screen.




**NOTE:** If the Read/Write Odometer Settings is not supported by the vehicle under test, an “advisory” message displays. Tap **Exit** to return to the Workshop Tools screen.


- A “One moment please...” progress dialog displays. Tap **Cancel** to cancel the operation.
2. One or more sub-menus will display. Select the desired options, then proceed to **step 3**.

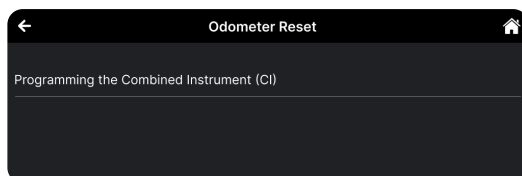

3. Select the desired option. Then perform the test procedures as directed. Tap **Next**, as appropriate, to scroll to the next screen. Or, tap **Exit** or **Cancel** to terminate the procedure.

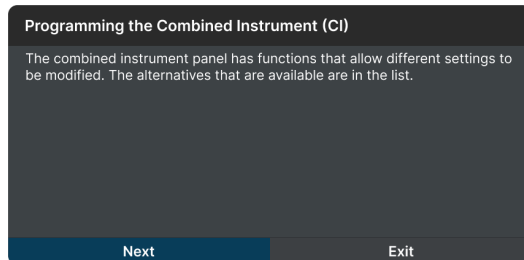

4. A "results" screen displays when the reset procedure has been completed. Tap **Back** to terminate the procedure.

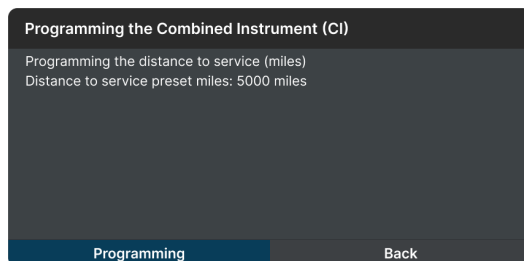

5. Tap on the ← icon at the top of the page to return to the Workshop Tools screen.

## RESET ELECTRIC TRACTION SYSTEM


Use this feature to calibrate the Yaw Rate Sensor after replacement of the ABS ECU and Yaw Rate / G sensor.

1. Tap **Reset Electric Traction System** on the Workshop Tools screen.




**NOTE:** If the Reset Electric Traction System is not supported by the vehicle under test, an "advisory" message displays. Tap **Exit** to return to the Workshop Tools screen.


- A "One moment please..." progress dialog displays. Tap **Cancel** to cancel the operation.
2. Once ready, the Reset Electric Traction System menu displays.

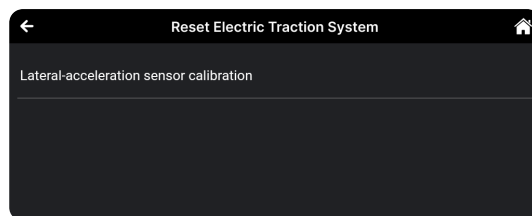

3. Select the desired option. Then perform the test procedures as directed. Tap **Yes** or **Continue**, as appropriate, to scroll to the next screen. Or, tap **No**, **Exit** or **Cancel** to terminate the procedure.

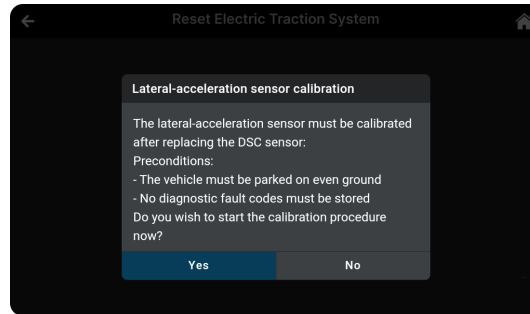

4. A “results” screen displays when the reset procedure has been completed. Tap **Exit** to terminate the procedure.

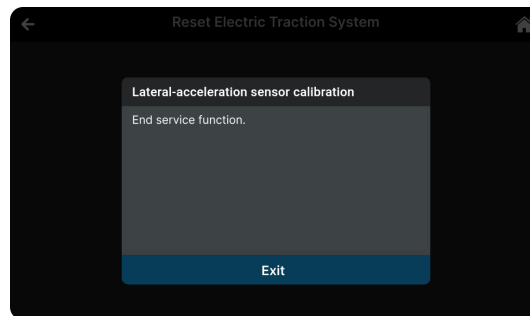

5. Tap on the ← icon at the top of the page to return to the Workshop Tools screen.

## SUSPENSION CALIBRATION

Use this function to reset the height for the vehicle's 4 suspensions on each wheel when the heights are different, or after replacing the vehicle height sensor or control module in the vehicle's air suspension system.

**The Suspension Calibration function procedures vary between vehicle makes and models.**



**NOTE:** If an error occurs while performing Suspension Calibration, an “advisory” message displays. Choose **Exit**, as necessary, to return to the Workshop Tools screen.




**NOTE:** If Suspension Calibration is not supported for the vehicle under test, an “advisory” message displays. Tap **Exit**, as necessary, to return to the Workshop Tools screen.

1. Select **Suspension Calibration** in the Workshop Tools screen.
  - A “One moment please...” message may display.
  - One or more sub-menus will display. Select the desired options, then proceed to **step 2**.

2. One or more “informational/ instructional” screens display.



- Perform test procedures as directed. Choose **Next** or **Continue**, as appropriate, to scroll to the next screen.
3. For some vehicles, “status” screens display as each phase of the calibration procedure is successfully completed. Choose **Next** or **Continue**, as appropriate, to scroll to the next screen.
    - A “results” screen displays when the procedure has been completed.

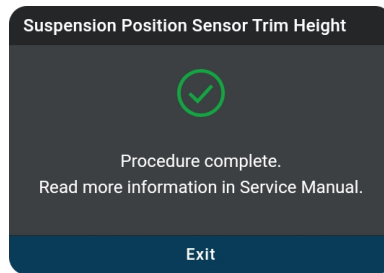

4. Tap **Exit** to close the results message.
5. Tap on the ← icon at the top of the page to return to the Workshop Tools screen.

## THROTTLE BODY RELEARN/TEC LEARN

Today's modern vehicles are being equipped with fly-by-wire electronic throttle body sensors. Over time, carbon buildup can accumulate around the throttle plate, changing its home position. If the buildup occurs gradually, the PCM learns the new home position. But if you clean or replace the throttle body, the PCM won't know and will continue to use the adaptive settings as if the carbon buildup is still there. Another instance is when your battery goes dead or you disconnect it to work on your vehicle, the PCM will again forget its adaptive home position.


This function allows you to help the PCM relearn the new throttle position anytime the throttle body is cleaned, replaced or disconnected. Doing so ensures that idle position of the throttle plate is kept idle within the specified range.

1. Tap **Throttle Body Relearn/TEC Learn** on the Workshop Tools screen.




**NOTE:** If the Throttle Body Relearn/TEC Learn is not supported by the vehicle under test, an “advisory” message displays. Tap **Exit** to return to the Workshop Tools screen.


- A “One moment please...” progress dialog displays. Tap **Cancel** to cancel the operation.
- 2. Once ready, the Throttle Body Relearn/TEC Learn menu displays.
- 3. Tap **Throttle Body Relearn Procedure**.
  - The TPMS Relearn Procedure screen displays. Tap **Exit** to return to the Throttle Body Relearn/TEC Learn menu.

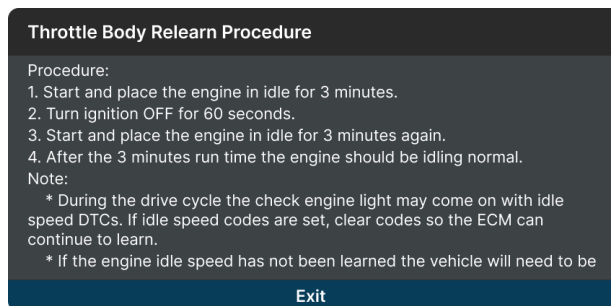

4. Tap **Idle Learn Reset**.
  - An “instructional” screen displays. Tap **Reset** to perform the test procedures as directed. Or, tap **Exit** or **Cancel** to terminate the procedure.

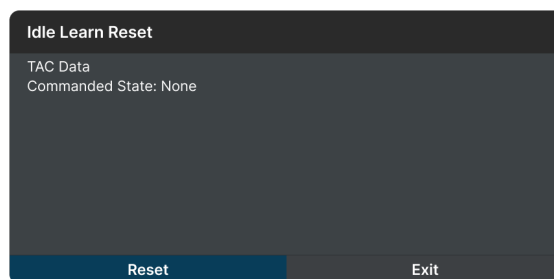

5. A “results” screen displays when the reset procedure has been completed. Tap **Exit** to terminate the procedure.

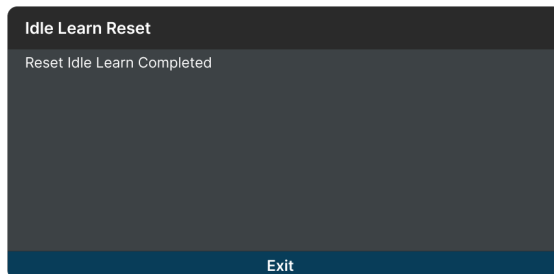

6. Tap on the ← icon at the top of the page to return to the Workshop Tools screen.

## TIRE SIZE RESET

Whenever different size tires are installed on a vehicle the speedometer will no longer read the correct speed. With larger tires, the speedometer may indicate a slower speed than in actuality; and in smaller tires, the speedometer will indicate a faster speed. Use this function to reset the tires after installing different size tires on a vehicle.

**The Tire Size Reset function procedures vary between vehicle makes and models.**



**NOTE:** If an error occurs while performing Tire Size Reset, an “advisory” message display. Choose **Exit**, as necessary, to return to the Workshop Tools screen.



**NOTE:** If Tire Size Reset is not supported for the vehicle under test, an “advisory” message display. Tap **Exit**, as necessary, to return to the Workshop Tools screen.

1. Select **Tire Size Reset** in the Workshop Tools screen.
  - A “One moment please...” message may display.
  - One or more sub-menus will display. Select the desired options, then proceed to **step 2**.
2. One or more “informational/ instructional” screens display.
  - Perform test procedures as directed. Choose **Next** or **Continue**, as appropriate, to scroll to the next screen.
3. For some vehicles, “status” screens display as each phase of the calibration procedure is successfully completed. Choose **Next** or **Continue**, as appropriate, to scroll to the next screen.
  - A “results” screen displays when the procedure has been completed.

### BCM Program Tire Size

This function is used to update the tire circumference value stored in the BCM after changing the size of the tires on the vehicle. To restore the tire circumference to its original factory programmed value based on the Sales Code, please run Restore Vehicle Configuration function.

NOTE: Run the Initialize EGS Misc that function found in the TCM module if equipped.

Do you want to continue?

Continue

Exit

### BCM Program Tire Size

Tire size has been changed successfully. Cycle the ignition for a minimum of 30 seconds and clear any DTCs that might have been set during the procedure. If ABS is displaying Vehicle Configuration Mismatch DTC, please run the ABS Initialization Misc. Function.

Exit

4. Tap **Exit** to close the results message.
5. Tap on the ← icon at the top of the page to return to the Workshop Tools screen.

## TPMS RELEARN


Use this to initialize / relearn the Tire Pressure Monitoring System, or TPMS, and turn off a TPMS light/message on the dashboard. Also, use this function to write the ID of new sensor to the control module whenever the TPMS sensor is replaced.

1. Tap **TPMS Relearn** on the Workshop Tools screen.




**NOTE:** If the TPMS Relearn is not supported by the vehicle under test, an “advisory” message displays. Tap **Exit** to return to the Workshop Tools screen.

- A “One moment please...” progress dialog displays. Tap **Cancel** to cancel the operation.
2. Once ready, the TPMS Relearn menu displays.

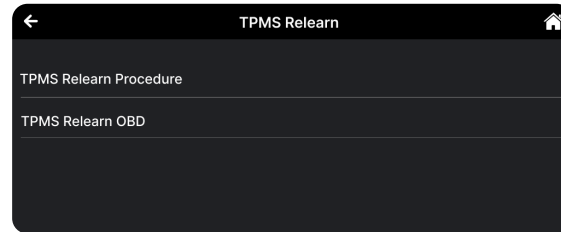


3. Tap the **TPMS Relearn Procedure**.

- The TPMS Relearn Procedure screen displays. Tap **Exit** to return to the TPMS Relearn menu.

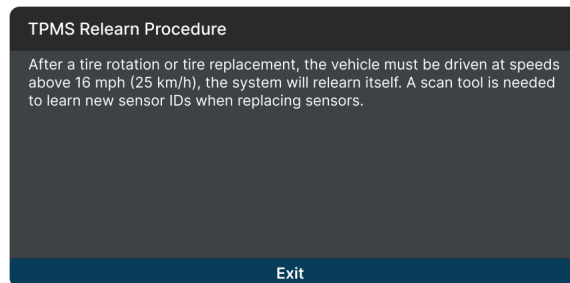

4. Tap the **TPMS Relearn OBD**.


- An “instructional” screen displays. Prepare the vehicle for testing as directed.

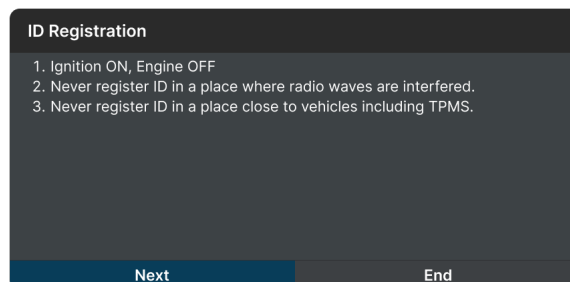

- Select the desired option. Then perform the test procedures as directed. Tap **Next** or **Continue**,

as appropriate, to scroll to the next screen. Or, tap **End** or **Cancel** to terminate the procedure.

5. A “results” screen displays when the reset procedure has been completed. Tap **End** to terminate the procedure.

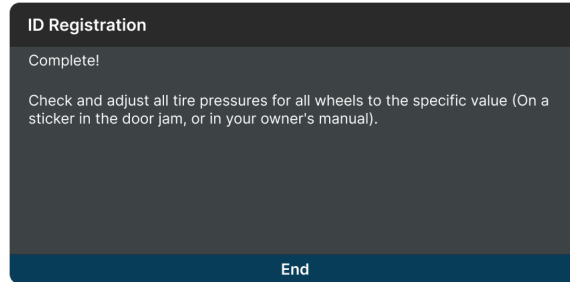

6. Tap on the ← icon at the top of the page to return to the Workshop Tools screen.

## TRANSMISSION FLUID LEVEL CHECK

Allows you to check the vehicle's transmission fluid level.

**The Transmission Fluid Level Check function procedures vary between vehicle makes and models.**




**NOTE:** If an error occurs while performing Transmission Fluid Level Check, an “advisory” message displays. Choose **Exit**, as necessary, to return to the Workshop Tools screen.




**NOTE:** If Transmission Fluid Level Check is not supported for the vehicle under test, an “advisory” message displays. Tap **Exit**, as necessary, to return to the Workshop Tools screen.

1. Select **Transmission Fluid Level Check** in the Workshop Tools screen.
  - A “One moment please...” message may display.
  - One or more sub-menus will display. Select the desired options, then proceed to **step 2**.
2. One or more “informational/ instructional” screens display.
  - Perform test procedures as directed. Choose **Next** or **Continue**, as appropriate, to scroll to the next screen.

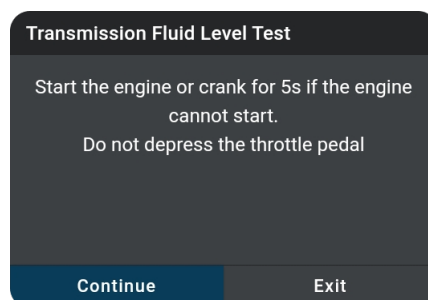

- For some vehicles, “status” screens display as each phase of the calibration procedure is successfully completed. Choose **Next** or **Continue**, as appropriate, to scroll to the next screen.

- A “results” screen displays when the procedure has completed.

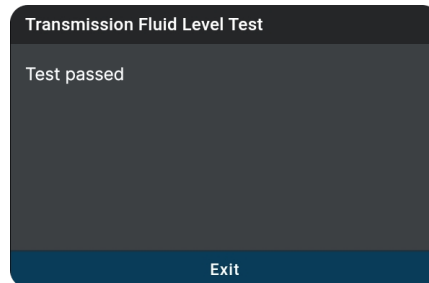

- Tap **Exit** to close the results message.
- Tap on the ← icon at the top of the page to return to the Workshop Tools screen.

## TRANSMISSION RESET

When replacing the Transmission Control Module (TCM) or the Hydraulic Control Unit (HCU), use this function to reset the vehicle’s TCM and HCU values to their default values.


- Tap **Transmission Reset** on the Workshop Tools screen.



**NOTE:** If the Transmission Reset is not supported by the vehicle under test, an “advisory” message displays. Tap **Exit** to return to the Workshop Tools screen.


- A “One moment please...” progress dialog displays. Tap **Cancel** to cancel the operation.

- Once select a module to perform Transmission Reset function, the Transmission Reset menu will displays.

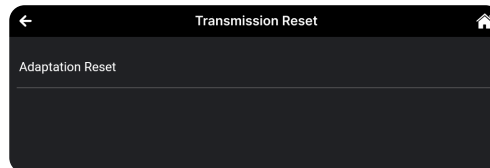


- Select the desired option. Then perform the test procedures as directed. Tap **Start** or **Continue**, as appropriate, to scroll to the next screen. Or, tap **Exit** or **Cancel** to terminate the procedure.

- A “results” screen displays when the reset procedure has been completed. Tap **End** to terminate the procedure.

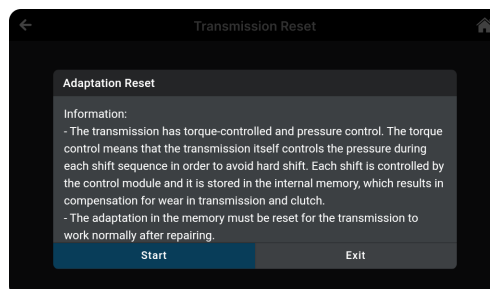

4. Tap on the ← icon at the top of the page to return to the Workshop Tools screen.

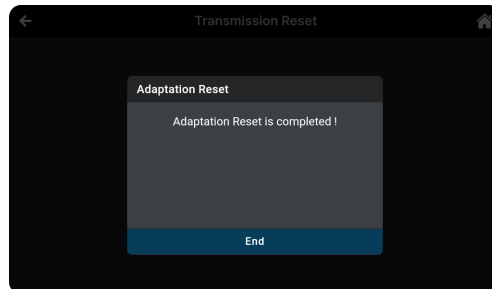

## TRANSPORT MODE

In order to reduce power consumption while the vehicle is in transit, the following functions may be disabled, including limiting the vehicle speed, not waking up the door opening network, and disabling the remote-control key, etc. Use this function to deactivate the vehicle's transport mode to restore the vehicle to normal operation.

**The Transport Mode function procedures vary between vehicle makes and models.**




**NOTE:** If an error occurs while performing Transport Mode, an "advisory" message display. Choose **Exit**, as necessary, to return to the Workshop Tools screen.




**NOTE:** If Transport Mode is not supported for the vehicle under test, an "advisory" message display. Tap **Exit**, as necessary, to return to the Workshop Tools screen.

1. Select **Transport Mode** in the Workshop Tools screen.
  - A "One moment please..." message may display.
  - One or more sub-menus will display. Select the desired options, then proceed to **step 2**.
2. One or more "informational/ instructional" screens display.
  - Perform test procedures as directed. Select **On** or **Off**, as appropriate.

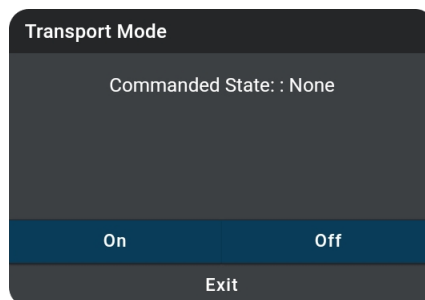

3. For some vehicles, "status" screens display as each phase of the procedure is successfully completed.
  - A "results" screen displays when the procedure has been completed.

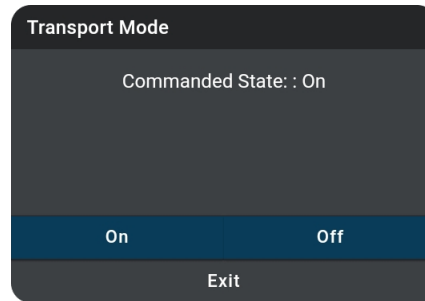

4. Tap **Exit** to close the results message.
5. Tap on the ← icon at the top of the page to return to the Workshop Tools screen.

## WINDOW DOOR ROOF

With this function, you can reset the zero point (stop point) for the window, door, or sunroof sensors after being replaced or serviced. This function can also set the sunroof to be locked off, close when it rains, the memory function of the sliding/tilting sunroof, the outside temperature threshold, etc.

**The Window Door Roof function procedures vary between vehicle makes and models.**





**NOTE:** If an error occurs while performing Window Door Roof, an “advisory” message display. Choose **Exit**, as necessary, to return to the Workshop Tools screen.



**NOTE:** If Window Door Roof is not supported for the vehicle under test, an “advisory” message display. Tap **Exit**, as necessary, to return to the Workshop Tools screen.

1. Select **Window Door Roof** in the Workshop Tools screen.
  - A “One moment please...” message may display.
  - One or more sub-menus will display. Select the desired options, then proceed to **step 2**.
2. One or more “informational/ instructional” screens display.
  - Perform test procedures as directed. Choose **Next** or **Continue**, as appropriate, to scroll to the next screen.
3. For some vehicles, “status” screens display as each phase of the calibration procedure is successfully completed. Choose **Next** or **Continue**, as appropriate, to scroll to the next screen.
  - A “results” screen displays when the procedure has been completed.

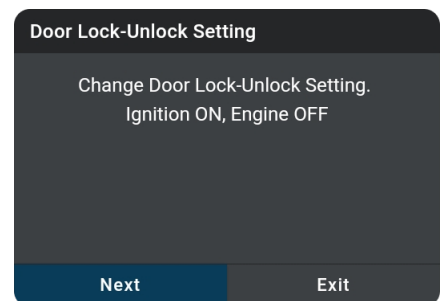

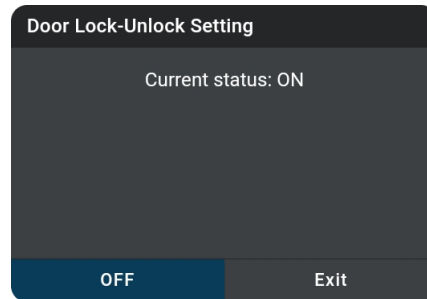

4. Tap **Exit** to close the results message.
5. Tap on the ← icon at the top of the page to return to the Workshop Tools screen.

## PREVIOUS VEHICLES

The INNOVA® Smart Diagnostic System permanently stores the results of the most recent vehicle scans you have performed. The **PREVIOUS VEHICLES** tab allows you to retrieve these historical scan records and view them as needed. The page includes two options: **Scan History** and **Live Data**.



## SCAN HISTORY REPORTS

Entries on the **Scan History** tab are listed in reverse chronological order (most recent scan first). Each entry in the list provides the following information:

Report No.	Date	Time	Customer Name	Vehicle	Scan Type	DTCs
60	04/01/24	11:43 PM		2016 Honda Fit L4, 1.5L, DOHC; 16V	Customer Report (PreScan)	79




- **Search Bar** – Tap the search bar to enter a search criterion – Customer Name, Phone Number, Email or Vehicle.
- **Report No.** – The auto-generated reference report number for the scan.
- **Date** – The date on which the scan was performed.
- **Time** – The time at which the scan was performed.
- **Customer Name** – The name of the customer, if provided. [\[See page 29\]](#)
- **Vehicle** – The year, make, model, trim and engine size of the tested vehicle.
- **Scan Type** – Identifies if the scan was an **OBD Diagnostics** scan [\[See page 14\]](#) or an **OEM Diagnostics** scan [\[See page 32\]](#) or **Vehicle Inspection** scan. [\[See page 41\]](#)
- **DTCs** – The total number of Diagnostic Trouble Codes retrieved by the scan.
- **Email Icon** – Allows you to email the associated report. A gray color indicates that the report has not been sent, while a green color indicates that the report was successfully sent.
- **✓ Icon** – If present, expands to show customer's contact information.
- **Delete Icon** – Allows you to delete the corresponding report.


## VIEWING SCAN HISTORY REPORTS

1. Tap an entry on the **Scan History** tab.
2. The report view differs based on the *Scan Type* listed on the entry:
  - **OBD2 Diagnostics** – the OBD2 Diagnostic test result screen displays. [\[See page 14\]](#)
  - **OEM Diagnostics** – the Scan All Systems test result screen displays. [\[See page 32\]](#)
  - **Vehicle Inspection** – the Vehicle Inspection Report test result screen displays. [\[See page 41\]](#)
  - Navigate as usual to view the report.

## EMAILING & PRINTING REPORTS

The Scan History report results lets you email a PDF version of the report to a customer or yourself.

1. Tap the  email icon at the end of the entry.
  - If the  email icon is missing:
    - Tap on the report entry you wish to send.
    - Scroll to the “Fix for DTCs” section.
    - Tap the **Tap For Details** button to generate the report.
    - Tap the  **Menu** icon and tap **Previous Vehicle** to return to the Scan History tab.
2. The Vehicle Diagnostic Report dialog entry window displays.

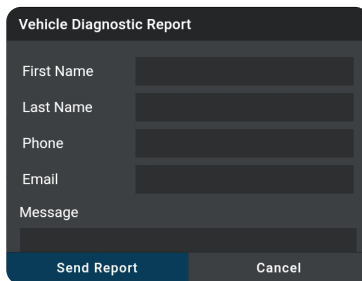

Vehicle Diagnostic Report

First Name

Last Name


Phone

Email


Message

**Send Report** **Cancel**

3. Enter the recipient's information.
  - Be sure to use a properly formatted Email address (*Example: yourname@gmail.com*).
4. Tap the **Send Report** button to proceed; or tap **Cancel** to exit.
  - Confirmation dialog screen displays.

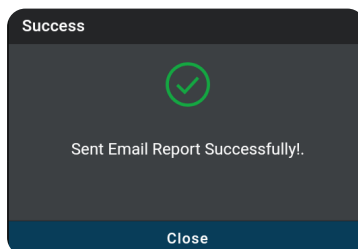



Success



Sent Email Report Successfully!


**Close**

5. Tap **Close** to finish and exit.
  - Report icon turns from  “gray” to  “green” when a report is sent.
6. Recipient receives an email with a PDF copy of their report, which can be saved and printed.

## PLAYBACK RECORDED LIVE DATA



Entries on the **Live Data** tab are listed in reverse chronological order (*most recent scan first*). Each entry in the list provides the following information:

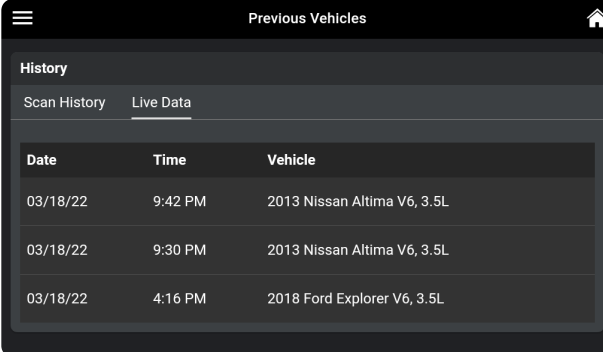
- **Date** – The date on which the recording was made.
- **Time** – The time at which the recording was made.
- **Vehicle** – The year, make, model and engine size of the vehicle for which the recording was made.



Previous Vehicles		
History		
Scan History   Live Data		
Date	Time	Vehicle
03/18/22	9:42 PM	2013 Nissan Altima V6, 3.5L
03/18/22	9:30 PM	2013 Nissan Altima V6, 3.5L
03/18/22	4:16 PM	2018 Ford Explorer V6, 3.5L

### To View & Playback Recorded Live Data:

1. Tap on **Live Data** tab to view all recoded entries.
2. Tap an entry on the Live Data tab to play back recorded data.
  - Loading Live data dialog displays.
3. Tap **Play** to start the playback.
  - If desired, use the **View Table** and **View Graph** buttons to toggle the display between graph mode and tabular mode during playback.
  - In the **View Table** mode, tap on **Unselect Parameters** to unselect all mode parameters, or tap on each individual parameter to “select” and “unselect” each parameter you wish to view during playback.
4. Tap **Pause** to pause the playback.
5. Tap **Stop** to stop the playback.
6. To exit, tap on the  icon to return to the Previous Vehicle main screen, or the  **Home** icon to return to the Home screen.

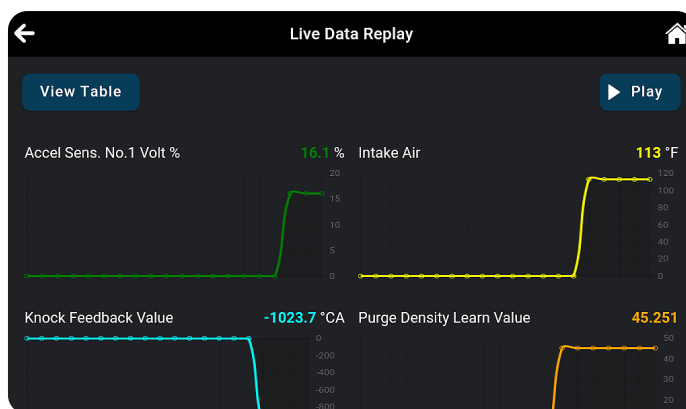


## SETTINGS

The **Settings** tab allows you to customize several personal preferences including retailer selection, Wi-Fi, language, and other options. In addition, you can contact technical support, and report any issues.



### To enter the Settings mode:

1. Tap the **Settings** tab on the Home page to access the selection page.
  - You can also access this page by tapping on the **Menu** icon in the upper left corner of the page and tapping on **Settings**.
  - The Settings page displays.

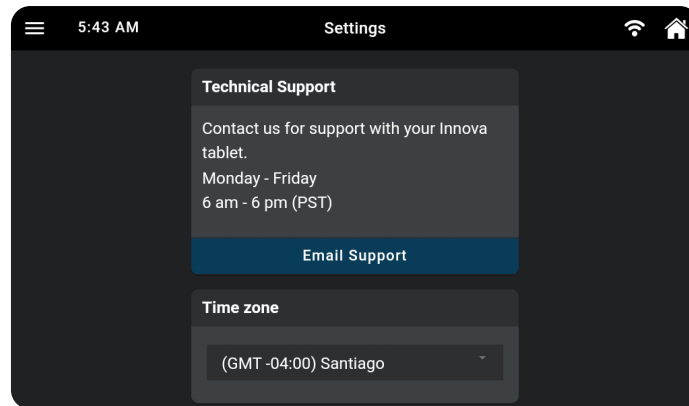

2. Swipe up or down to scroll to the desired option.
3. Make adjustments and settings as outlined in the next pages.

### To exit the Settings mode:

- Tap the **Menu** icon on the top left to open the Menu panel and make another selection.
- Tap the **Home** icon on the top right to return to the Home page.

## TECHNICAL SUPPORT (Send an Email)

The Innova Electronics technical team is here to help if you encounter any issues or if you have any questions. You can reach them directly with the tablet from **Monday through Friday, 6:00AM to 6:00PM, Pacific Time**.

### To connect with Technical Support:

1. From the Home page, tap **Settings**. (You can also access it from the **Main Menu** by tapping on **Settings**)
  - The Settings screen displays.
2. Tap **Email Support**.

- The Support by Email dialog displays.

- The Email field shows the most recently entered email address for the tablet. If no address was previous entered, the Email field shows an empty text box.



**NOTE:** You *MUST* provide a personal email address to receive a reply from Innova Technical Support via email.

- To enter an **Email** address for the first time:
  - Tap the **Email** text box, then enter your personal email address.
- To change an existing **Email** address:
  - Tap **Change**. The current Email address displays in an editable text box.
- Tap the **Send** button to send your email to Innova Technical Support.
  - To cancel your message without sending, tap **Cancel** to return to the Technical Support dialog.
  - A confirmation message displays. Tap **Close** to close the message.

## DATE AND TIME SETTINGS

Here you can set the current date and time for the tablet.

- From the Home page, tap **Settings**. (You can also access it from the ≡ Main Menu by tapping on ⚙ **Settings**)
  - The Settings screen displays.
- Scroll the **Settings** page.
  - If the tablet is connected to the internet, the **Time zone** field will be displayed. Proceed to **step 3**.
  - If the tablet is not connected to the internet, the **Date and Time Settings** field will be displayed. Proceed to **step 4**.
- With an internet connection, the tablet will display world clock. You can change the date and time by selecting the time zone.

## Time zone

(GMT -08:00) Pacific Time (US &amp; ...

- Select the desired time zone, then tap **OK** button.
4. Without an internet connection, you can manually set date and time.

## Date and Time Settings

03/31/2024

11:22 pm

Set Date and Time

- To specify the current date:
    - Tap the **date format** field. The Set Date dialog displays.
    - Scroll through the “month”, “day”, and “year” fields to set the current calendar date, then tap **Done**. Click **Cancel** to close the Set Date dialog and retain the previous date.
  - To specify the current time:
    - Tap the **time format** field. The Set Time dialog displays.
    - Scroll through the “hour”, “minute”, and “am/pm” fields to set the current time, then tap **Done**. Tap **Cancel** to close the Set Time dialog and retain the previous time.
5. Tap **Set Date and Time** button to save your changes.
- A confirmation message displays. Tap **Close** to close the message.



**NOTE:** When the tablet connects to the internet again, the customer date and time will be updated according to the selected time zone beforehand.

## VEHICLE INSPECTION SETUP

The Vehicle Inspection Setup feature is designed to provide users the ability to create various report types. Vehicle Inspection reporting includes three types: **Diagnostic Report**, **Customer Report**, and **Collision Industry Report**. In each report type, a user has the flexibility to customize their inspection report according to their unique requirements such as OBD2 Diagnostics, Scan All Systems, Service Check, and Service Warning Light. This customizable vehicle inspection setup allows the reporting to be tailored to specific functions that you select whether it's routine maintenance, diagnostic analysis, or collision repairs.


## Vehicle Inspection Setup

Diagnostic Report Setup &gt;

Customer Report Setup &gt;

Collision Industry Report Setup &gt;

1. Scroll the Settings page to the **Vehicle Inspection Setup** field.
2. Tap the business report you wish to setup.
  - The Report selection screen displays.
  - Tap the **Toggle Switch** to either turn On or Off feature as desired.

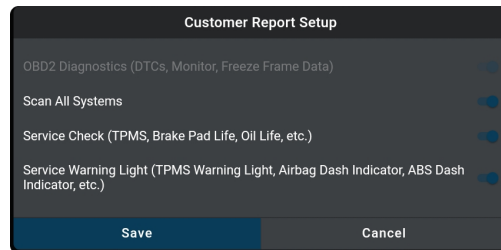

**NOTE:** The OBD2 Diagnostics (DTCs, Monitor, Freeze Frame Data) is always ON, this function cannot be turned OFF.


3. Tap the **Save** button to save your changes.
  - Tap the **Cancel** button to close the screen without saving any changes.

## RETAILER SELECTION


To get the best possible parts recommendations, provide the name of the retailer where you purchased your INNOVA Smart Diagnostic System tablet.

### Specifying the Retailer

1. Scroll the Settings page to the **Retailer** field.
  - If you previously specified a retailer, the name of the retailer is shown in the upper left corner of the **Retailer** field.

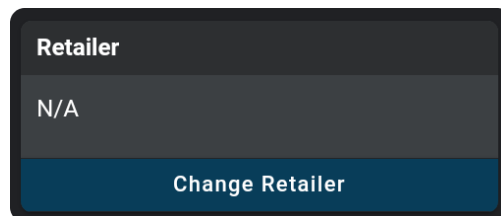

2. Tap **Change Retailer**.
  - The Select Retailer dialog displays.
3. Tap the **Enter Retailer** text box, then enter the name of the location from which you purchased your tablet (or another local retailer, as desired) using the keyboard.

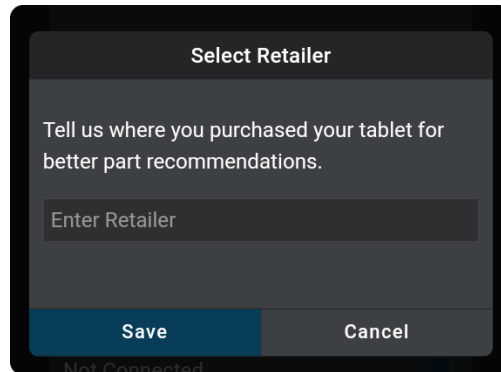


4. When the desired retailer has been entered, tap the **Save** button to save your changes and return to the Retailer field.

■ To cancel changes and retain the current retailer, tap **Cancel** to return to the Retailer field.

## RepairSolutionsPRO SETTINGS

You have the option and convenience to purchase the associated part for each recommended fix. Each part includes a button, which links to your selected retailer and provides an estimated cost. This feature can be turned on and off as desired.

1. Scroll the Settings page to the **RepairSolutionsPRO Settings** field.
2. Tap the **Toggle Switch** to either turn On or Off the Buy Parts feature.

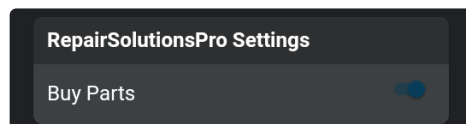


## WI-FI SETTINGS

To access all the features provided in your diagnostic tablet, a local Wi-Fi network connection is necessary.


### Connecting to a Wi-Fi Network

1. Scroll the Settings page to the **Wi-Fi Settings** field.
  - If you are currently connected to a Wi-Fi network, the network name is shown; if not, it shows "Not Connected".

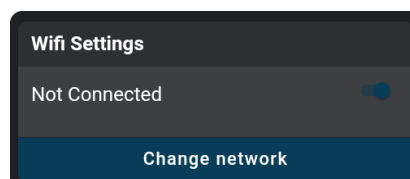

2. Tap **Change Network**.


- The Sign In To Your Wi-Fi Network dialog displays.

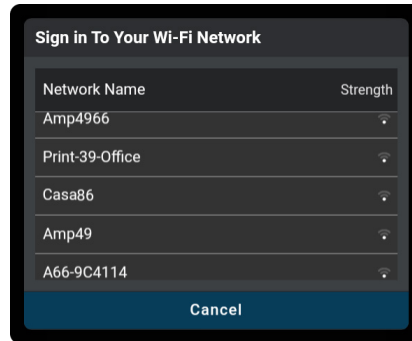

- The dialog lists all available Wi-Fi networks within range of the tablet.

## 3. Swipe up or down to scroll to the desired Wi-Fi network, then tap your network name.

- To cancel changes and retain the current network connection, tap **Cancel** to return to the Wi-Fi Settings field.
- The Enter Password dialog displays.

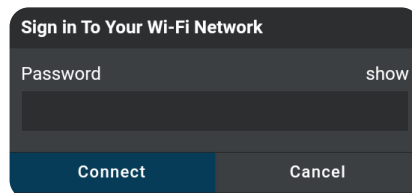4. Tap the **Password** text box, then enter the Wi-Fi network password using the keyboard.


- As you type, the password displays as a series of bullets by default. Tap **show** to show the password as you type. Tap **hide** to display the password as bullets.
5. When the password has been entered, tap the **Connect** button to save your changes and connect to the selected Wi-Fi network.
- Tap **Cancel** to cancel your changes and return to the Sign In To Your Wi-Fi Network dialog to select a different network.

## SMOG CHECK OR I/M PROGRAM LOCATION

Allows you to set the Smog Check or I/M Program Location to enhance the emission readiness logic.

### Configuring Smog Check or I/M Program Location:

1. Scroll the Settings page to the Smog Check or I/M Program Location field.
2. Tap the **radio button** for the desired U.S State, then tap **OK**.
  - Tap **Cancel** to close the menu and retain the previously selected location.

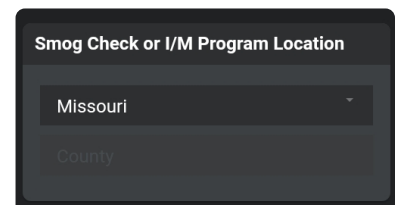

3. In some states, county-specific logic may be required. If your state requires this additional logic, select the desired county by clicking the corresponding radio button.


## REGIONAL SETTINGS

---

Allows you to set the unit of measurement for the tablet's display to U.S Standard or Metric.

### Configuring Regional Settings

1. Scroll the Settings page to the **Regional Settings** field.

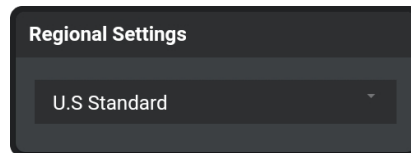

2. Tap the currently selected unit of measurement to display the menu. Select the radio button for the desired unit of measurement, then tap **OK**.
  - Tap **Cancel** to close the menu and retain the previously selected unit of measurement.


## LANGUAGE

---

Lets you set the display language for the tablet to English or Spanish.

### Setting the Display Language

1. Scroll the Settings page to the *Language* field.

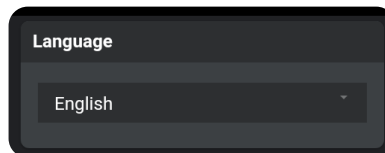

2. Tap the currently active language to display the *Select Language* menu. Select the radio button for the desired language, then tap **OK**.
  - Click **Cancel** to close the *Select Language* menu and retain the previously selected display language.
  - The display refreshes to show text in the selected language.


## IDLE TIME SETTINGS

---

Lets you set the length of “idle” time before the tablet enters “standby” mode.

### Idle Time Settings

1. Scroll the Settings page to the *Idle Time Settings* field.

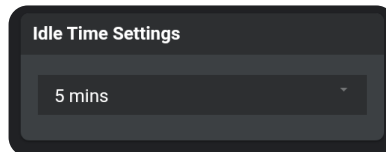


2. Tap the currently active idle time value to display the *Select Idle Time* menu. Select the radio button for the desired idle time value, then tap **OK**.
  - Tap **Cancel** to close the *Select Idle Time* menu and retain the previously selected idle time value.

## AUTO SHUT OFF

---

Allows to set a specified time to automatically shut off the tablet.

1. Scroll the Settings page to the Auto Shut Off field.
2. Tap the **currently active time value** to display the Auto Shut Off menu. Select the **radio button** for the desired time value, then tap **OK**.
  - Tap **Cancel** to close the Auto Shut Off menu and retain the previously selected time value.

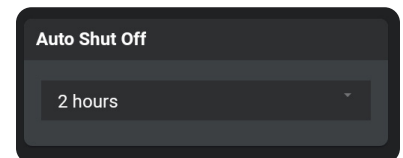


## VOLUME SETTINGS

---

Sets the volume level of the tablet speaker.

### Adjusting Speaker Volume

1. Scroll the Settings page to the *Volume Settings* field.

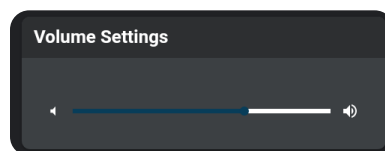

2. Use the Volume “slider” to increase or decrease speaker volume:
  - Touch and slide right to make the volume louder.


- Touch and slide left to make the volume softer.
- The current Volume setting shows above the slider as you adjust the slider position.

## BRIGHTNESS SETTINGS

Lets you adjust the brightness of the display screen.

### Adjusting Display Brightness

1. Scroll the Settings page to the *Brightness Settings* field.

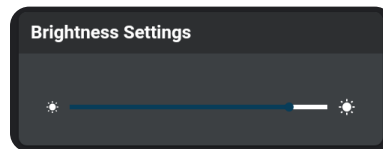


2. Use the Brightness "slider" to increase or decrease display brightness:
  - Touch and slide right to make the display brighter.
  - Touch and slide left to make the display darker.
  - The current Brightness setting shows above the slider as you adjust the slider position.

## THEME SETTINGS

Allows you to change the appearance of the tablet screens.

### Changing Theme Settings

1. Scroll the Settings page to the *Theme Settings* field.
  - Tap the **Light** selection to make the tablet's screen contrast to white / brighter mode.
  - Tap the **Dark** selection to make the tablet's screen contrast to dark gray / darker mode.

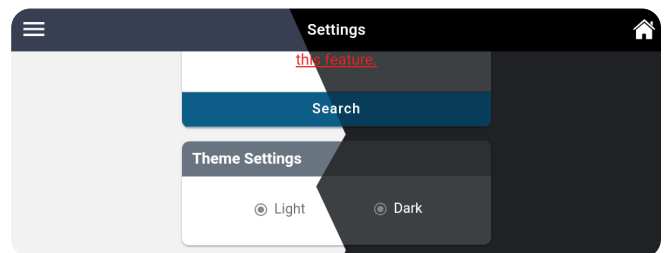

## ACCOUNT INFORMATION

Create, access, and edit your RepairSolutionsPRO™ account.

## CREATE AN ACCOUNT

1. Tap on **Settings** on the home screen and scroll down to the “Account Information” section.
2. Tap the **Create an Account** button to begin.
3. Complete the displayed form with your name, email address, your desired password, and other personal information.
4. Complete your registration by **reviewing the terms** and tap on the **Create Account** button at the bottom of the form.
  - A confirmation message displays with “The account has been created successfully”. If properly signed in, the Account Information screen displays your account name and email.

## EDIT ACCOUNT INFORMATION

Allows you to change your password and other personal information.

1. Tap on **Settings** on the home screen and scroll down to the “Account Information” section.
2. Make any necessary changes as desired and tap on the **Save Changes** button to confirm your edits.

## ACCOUNT LOG IN

1. Tap on **Settings** on the home screen and scroll down to the “Account Information” section.
2. Tap the **Log In** button.
  - The RSPRO “Log In” dialog displays.
3. Enter your credentials and tap the **Login** button.

## RESET ACCOUNT PASSWORD

1. Tap on **Settings** on the home screen and scroll down to the “Account Information” section.
2. Tap the **Log In** button.
  - The RSPRO “Log In” dialog displays.
3. Tap on **Forgot password** and follow the prompts.

## VERSION INFORMATION

---

The Version Information field shows the tablet’s Software Version, Tool Version, and other related specifications. This screen also lets you check for software updates or report an issue with the tablet.

### Viewing “Version Information”


1. Scroll the Settings page to the *Version Information* field.
  - The field shows the tablet’s current **Software Version**, **Tool ID**, **firmware version (FW)**,

**database version (DB), bootloader version (BL), GUID/Serial Num, Android Version and Build Number** for the tablet.

- Tap **View Release Notes** to see what was updated with the current version.
2. Tap **Check for Updates** to check and download any updates.
    - Tablet verifies an Internet connection and checks for any updates. If an update is available, user is given the option to view the release notes, update the tool, or enable an update reminder.



**NOTE:** If the tablet is connected to the Internet and an update is available, the tool will automatically display an update notification dialog on the Home screen. If presented, simply tap the **More Info** button to proceed, or tap the **Remind Me Later** button to update at a later time.

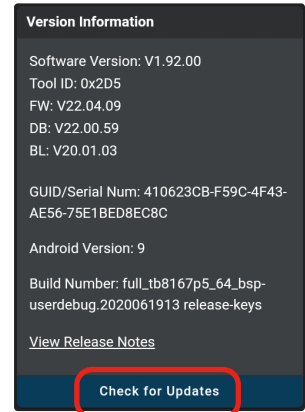


## REPORT AN ISSUE


Did you encounter an OBD II connection issue or a DTC specific problem? Use this feature to record a log of the issue and send a direct message to Innova's Technical Team to get support.

### To report an issue:


1. Scroll to the *Report an Issue* field.

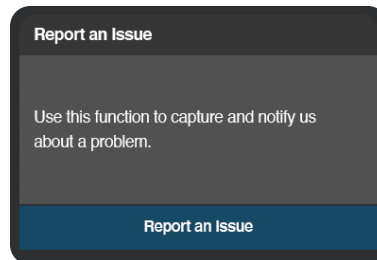

2. Tap the **Report an Issue** button.
  - A selection page displays.
3. Tap the type of issue you wish to report; **OBD II, ECM DTC, ABS DTC or SRS DTC**.

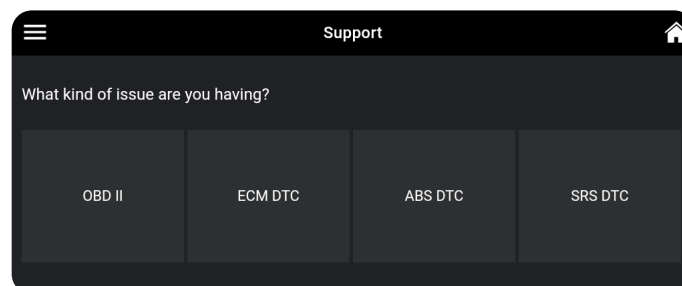


- An instructional dialog displays:

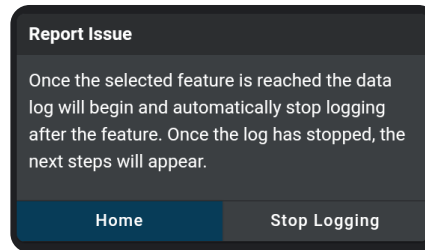


4. Tap the **Home** button to begin.

- The display returns to the Home Page, and the red **Data Log On** icon shows in the lower left corner of the screen.

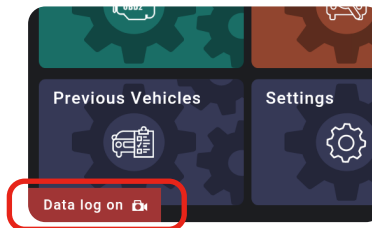

5. Proceed to perform the steps you took to demonstrate where you encountered the issue.
6. Tap the **Data Log On** icon to return to the instructional dialog.
7. Tap the **Stop Logging** button.

- A dialog screen displays with the vehicle's information and tool information.

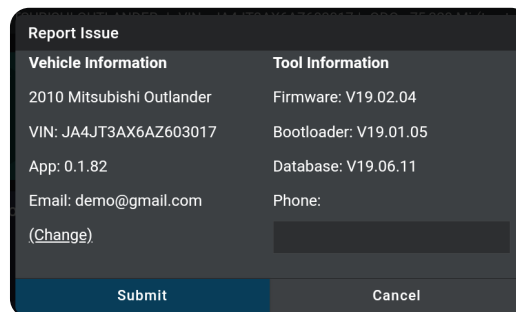A dark-themed dialog box titled "Report Issue". It is divided into two columns: "Vehicle Information" and "Tool Information".

Vehicle Information	Tool Information
2010 Mitsubishi Outlander	Firmware: V19.02.04
VIN: JA4JT3AX6AZ603017	Bootloader: V19.01.05
App: 0.1.82	Database: V19.06.11
Email: demo@gmail.com (Change)	Phone: <input type="text"/>



At the bottom, there are two buttons: "Submit" and "Cancel".

8. Enter your Email, Phone, and Issue Description (these are required fields).
  - If an email is displayed, tap **(Change)** to enter a new email address.
9. Tap **Submit** to send your report, or **Cancel** to exit and return to the Home screen.

## SUPPORT

The **Support** tab includes various support resources, including:

- **Tool Library** – access tool definitions and terminology.
- **DLC Locator** - find the location of the Data Link Connector (DLC) for a specified vehicle.
- **User Manual** - access to the most current version of the tablet User's Manual.
- **Tutorials** - offers detailed instructions on how to use the various scanning application functions.
- **Technical Support** – directly connect with Innova's Technical Support team via the tablet's email function.
- **Demo Mode** – Provides a step-by-step demonstration of diagnostics operation without connecting to the vehicle.

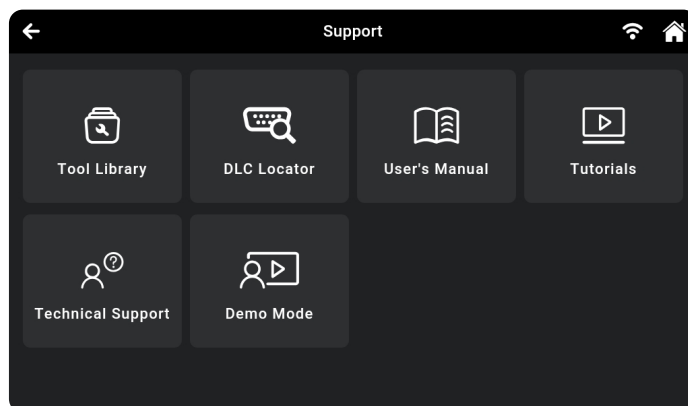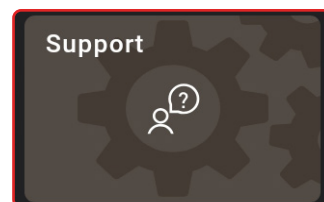


## TOOL LIBRARY

Accesses definitions of tool icons and Diagnostic Trouble Codes (DTCs).


### Using the Tool Library:

1. From the Home page tap **Support**. (You can also access it from the **Main Menu** by tapping on **Support**)
  - The Support selection dialog displays.
2. Tap the **Tool Library** button.
  - The Tool Library dialog appears.
3. Select from the provided options.
  - Tap **Cancel** to return to the Support dialog screen.

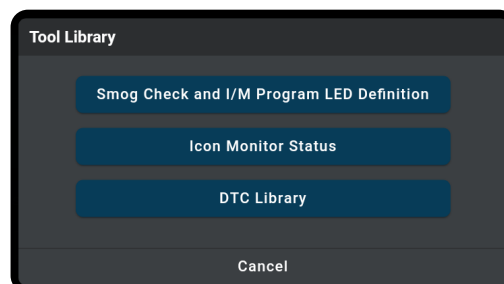

## SMOG CHECK AND I/M PROGRAM LED DEFINITION

1. Tap the **Smog Check and I/M Program LED Definition** button.

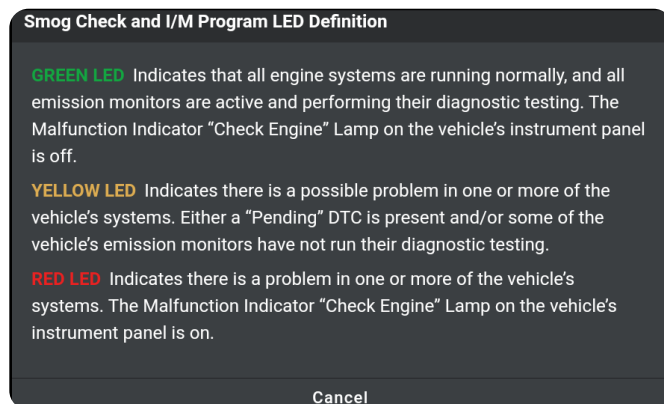

- The Smog Check and I/M Program LED Definition dialog displays.
2. Tap **Cancel** to return to the Tool Library selection screen.

## ICON MONITOR STATUS


Defines the icon monitor status' color coding and provides tips on how to proceed.

1. Tap the **Icon Monitor Status** button.
  - The Icon Monitor Status dialog displays.
2. Tap **Cancel** to return to the Tool Library selection screen.

## DTC LIBRARY

Searches for the Diagnostic Trouble Code (DTC) definitions for most 1996 and newer vehicles.

1. Tap the **DTC Library** button.
  - The DTC Library dialog displays.

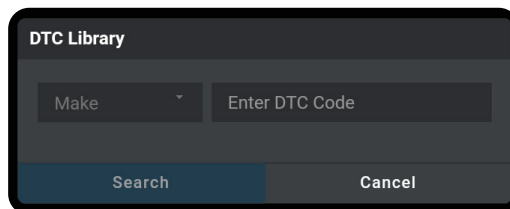

2. Tap on **Make** and scroll to select the vehicle's make from the pull-down menu.
3. Tap on **Enter DTC Code** box, enter the numeric DTC you want to define using the keyboard.
  - Be sure to include all characters – letters and numbers.
4. Tap **Search** to begin the search.


- Search dialog appears with the retrieved definition.
5. Tap **Cancel** to return to the Tool Library selection screen.

## DLC LOCATOR


Use this search function to quickly find the location of the Data Link Connector (DLC) for a specified vehicle.

### Using the DLC Locator

1. Tap the **DLC Locator** button.
2. Tap **Make** to display the *Select Make* menu. Select the radio button for the desired vehicle manufacturer, then tap **OK**.

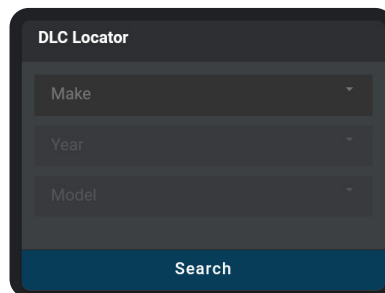

3. Tap **Year** to display the *Select Year* menu. Select the radio button for the vehicle model year, then tap **OK**.
4. Tap **Model** to display the *Select Model* menu. Select the radio button for the desired vehicle model, then tap **OK**.
5. Tap the **Search** button.
  - The DLC Locator screen for the selected vehicle displays.
  - The DLC Location screen shows a description of the DLC location and whether the DLC is “covered” or “uncovered,” and includes a picture of the DLC location.

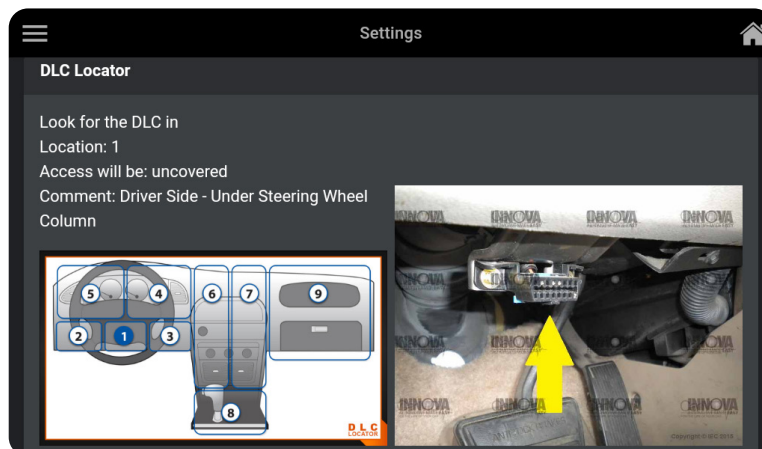


6. Tap the **Close** button to close the DLC Locator screen and return to the Support page.

## VIEW USER'S MANUAL

Get access to the most current version of the tablet User's Manual.

### Viewing the User's Manual:

1. Tap the **User's Manual** button.
2. Tap **View** to download and read a PDF version of the tablet's most current User's Manual.

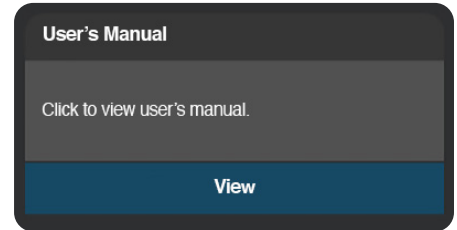


## TUTORIALS

This Tutorial offers detailed instructions on the various scanning application functions included with the tablet. Take a moment to familiarize yourself with each function to maximize its use and application.

### Using the Tutorials:


1. From the Home page, tap **Support**.
  - The Support selection dialog displays.
2. Tap the **Tutorials** button.
  - The Tutorials dialog screen appears.

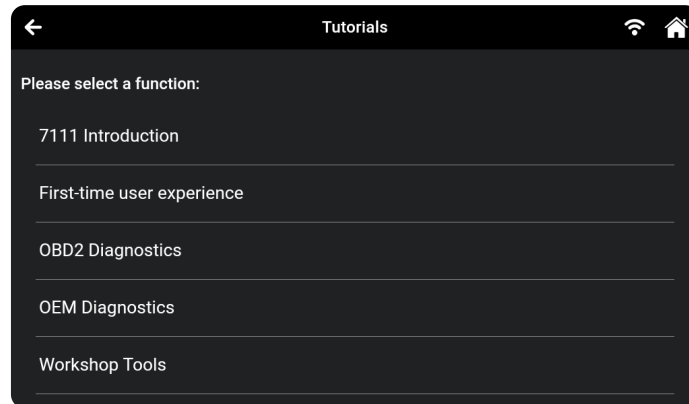

## 7111 INTRODUCTION

This tutorial offers a video presentation introducing the 7111, providing insights into its features and offering a teaser for the latest functionality.

1. From the Tutorials screen, tap **7111 Introduction**.
  - The 7111 Introduction dialog displays.

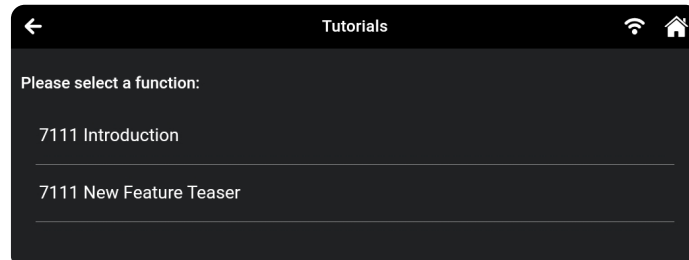


2. Tap the **7111 Introduction** or **7111 New Feature Teaser** as desired.
  - The screen displays a video with instructions about this feature.



## FIRST TIME USER EXPERIENCE


When you turn on your tablet for the first time, this feature will automatically emerge to help by offering instructions on its various features and demonstrating efficient utilization of its components.

1. From the Tutorials screen, tap **First-time user experience**.
  - The First-time user experience screen displays.

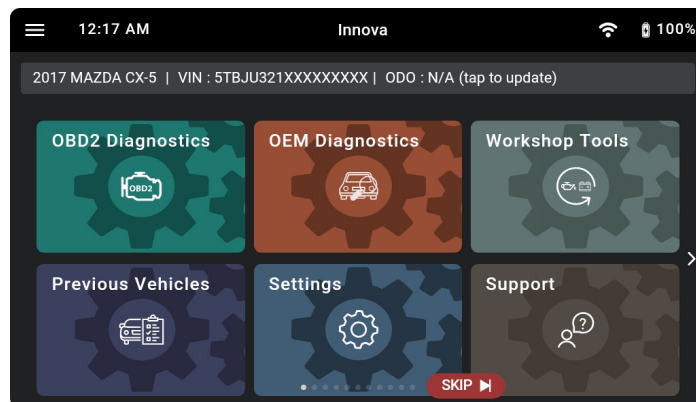

- If you wish to skip the tutorial, use the “**SKIP**” button located at the bottom of the initial tutorial screen. This allows you to go directly to the main application interface.
2. The Tutorial will guide you on how to use the different functions of the scanner. For an overview and detailed insight into each function, swipe sideways to view each step of the tutorial.


- Once you've completed the tutorial and feel confident in using the scanning tool, press the **"FINISH"** button on the last screen of the tutorial. This will conclude the tutorial session.

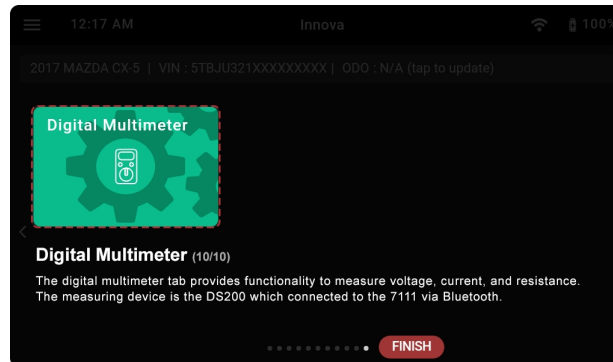

## OBD2 DIAGNOSTICS

This tutorial provides instructional videos for the 7111, covering all 10 OBD2 modes.

1. From the Tutorials screen, tap **OBD2 Diagnostics**.
  - The Tutorial for OBD2 Diagnostics screen displays.

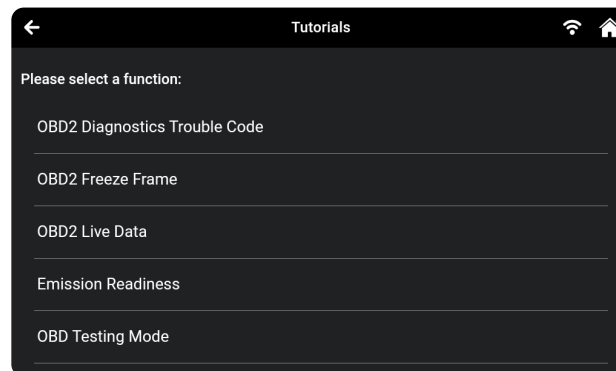


2. Select the function you wish to view tutorial as desired.
  - The screen displays a video with instructions about this function.



## OEM DIAGNOSTICS

This tutorial includes instructional videos for the 7111 focusing on OEM Diagnostics.

1. From the Tutorials screen, tap **OEM Diagnostics**.
  - The Tutorial for OEM Diagnostics screen displays.
2. Select the function you wish to view tutorial as desired.

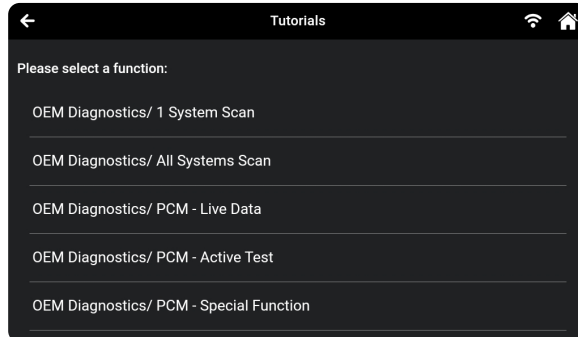


- The screen displays a video with instructions about this function.



## WORKSHOP TOOLS

This tutorial provides customers with guidance on performing service functions within Workshop Tools.

1. From the Tutorials screen, tap **Workshop Tools**.
  - The Tutorial for Workshop Tools screen displays.

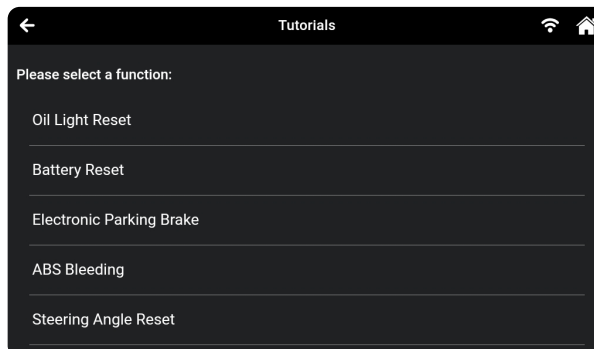


2. Select the function you wish to view tutorial as desired.
  - The screen showcases a tutorial video demonstrating the steps to execute this function.



## SETTINGS

This tutorial offers customers instructions on settings tablet preferences, reporting issues, updating firmware, and registering their accounts.

1. From the Tutorials screen, tap **Settings**.
  - The Tutorial for Settings screen displays.

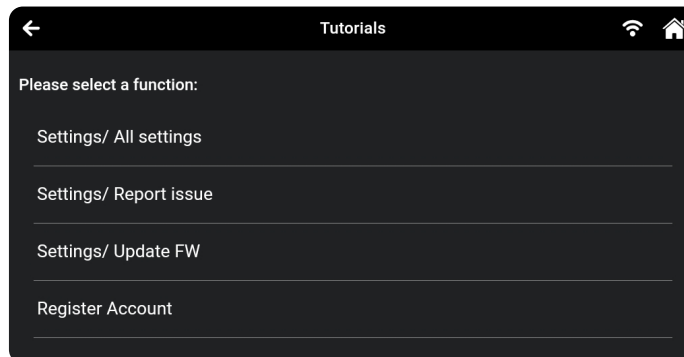


2. Select the function you wish to view tutorial as desired.
  - The screen showcases a tutorial video demonstrating the steps to execute this function.




## PREVIOUS VEHICLES/SCAN HISTORY

This tutorial provides guidance to customers on viewing reports for scanned vehicles and sending reports via email.

1. From the Tutorials screen, tap **Previous Vehicles/Scan History**.

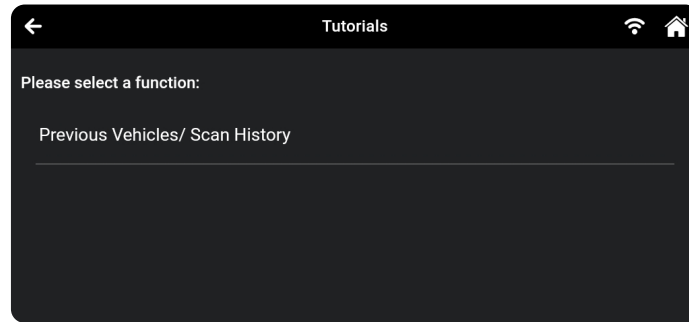

- The Tutorial for Settings screen displays.

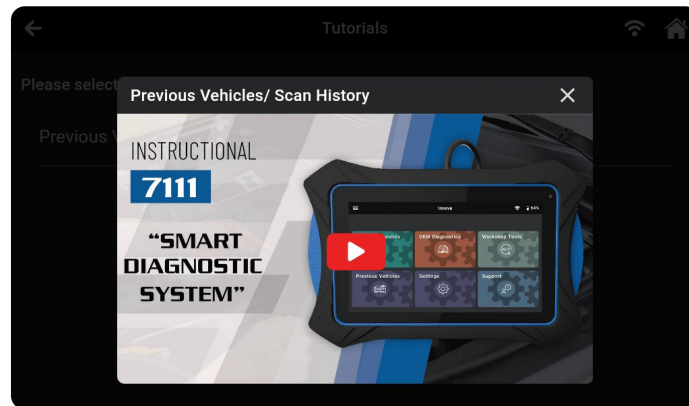

2. Tap the **Previous Vehicles/Scan History**.


- The screen showcases a tutorial video demonstrating the steps to execute this function.

## TECHNICAL SUPPORT

The Innova Electronics technical team is based in Irvine, California and is always ready to help!

### To connect with Technical Support:

1. From the Home page, tap **Support**. (You can also access it from the ☰ Main Menu by tapping on <sup>2</sup> **Support**)
  - The Support selection dialog displays.
2. Tap the **Technical Support** button.
  - The Technical Support dialog appears.
3. Tap **Email Support**.
  - The Support by Email dialog displays.

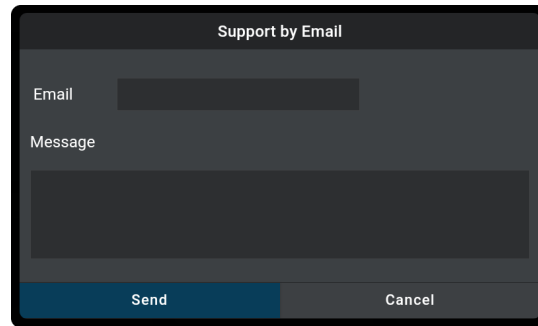

- The **Email** field shows the most recently entered email address for the tablet. If no address was previous entered, the Email field shows an empty text box.


 



**NOTE:** You *MUST* provide a personal email address to receive a reply from Innova Technical Support via email.

- To enter an **Email** address for the first time:
  - Tap the **Email** text box, then enter your personal email address.
- To change an existing **Email** address:
  - Tap **Change**. The current Email address displays in an editable text box.
- Tap the **Send** button to send your email to Innova Technical Support.
  - To cancel your message without sending, tap **Cancel** to return to the Technical Support dialog.
  - A confirmation message displays. Tap **Close** to close the message.


## DEMO MODE

The Demo Mode offers both convenience and clarity, providing a glimpse into the tool's capabilities, features and functions, allowing users to explore its potential firsthand without the need of connecting to a vehicle.


- From the Home page, tap **Support**. (You can also access it from the  Main Menu by tapping on  **Support**)
  - The Support selection dialog displays.
- Tap the **Demo Mode** button.
  - The Demo Mode screen appears.

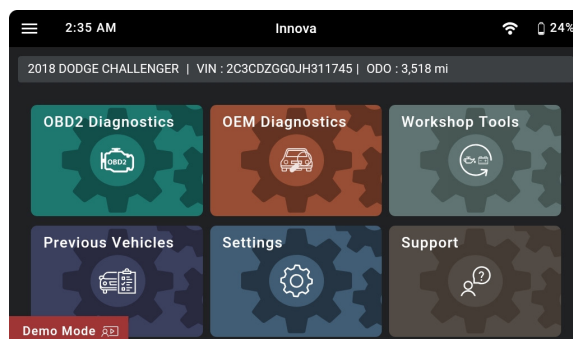

- The screen displays the tablet's available functions, and includes the vehicle information, VIN number, and Odometer value for a simulated vehicle, as if scanning the real vehicle.
3. Select the desired functions on the “Demo Mode” screen, such as **OBD2 Diagnostics**.
- The OBD2 Diagnostic screen displays.

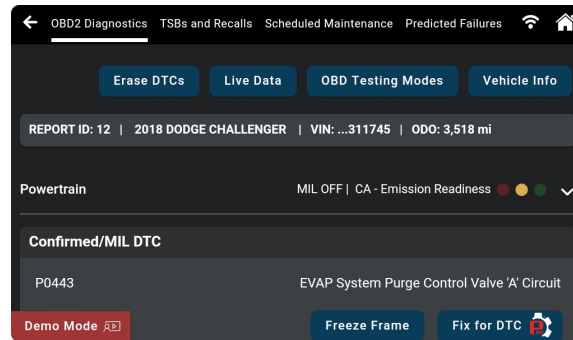

- A list of information for the system displays after scanning, such as Live Data, Erase DTCs, OBD Testing Modes, etc. You can select these functions to observe how the tablet performs in real vehicles.
4. To exit Demo Mode, tap the **Demo Mode** button displayed in the lower left corner of the screen at any time.
- A pop-up appears to confirm your selection.

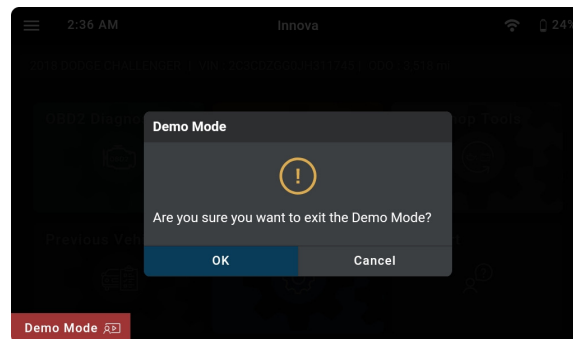

5. Tap **OK** to finish the process and return to the Support page, or tap **Cancel** to continue using Demo Mode.



## DIGITAL MULTIMETER

The **Digital Multimeter** tab offers features for measuring voltage, current, and resistance. The optional **DS200** serves as the measuring device, connected to the 7111 via Bluetooth. The 7111's integrated digital multimeter surpasses the capabilities of an average device.




## INTRODUCTION


1. From the Home screen, tap **Digital Multimeter**.
2. Tap the **Connect** button to initiate the function.
3. The display showcases two channels, each with the ability to perform separate measurements simultaneously. These independent channels can be discreetly hidden when not in use, enhancing the overall user interface with a streamlined and user-friendly design.

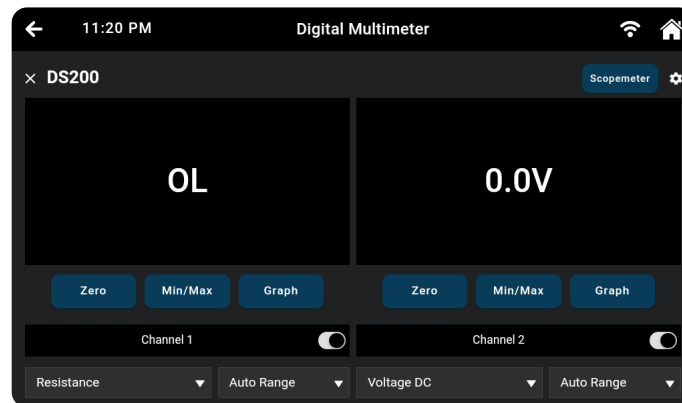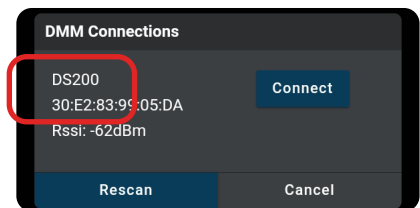


4. Each channel offers a range of measurement options in the Meter Measurement Menu, including Current, Voltage, Resistance, AMP Clamp Meter Mode, Diode Drop, and Continuity. It's important to note that different measurements necessitate specific setups.

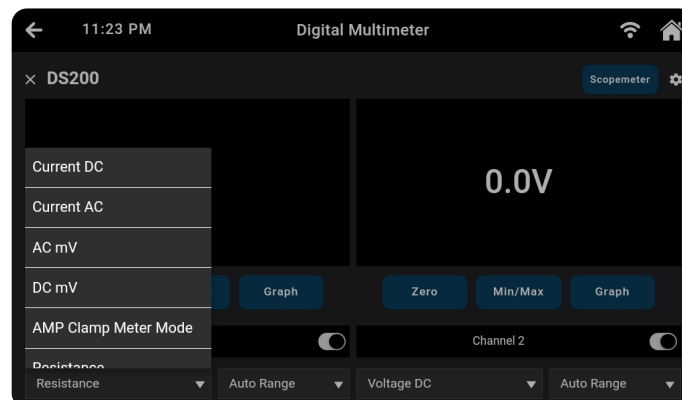


5. In terms of measurement range settings, users can either manually choose their desired range or opt for the **Auto Range** feature. This simplifies configuration adjustments and improves accuracy.

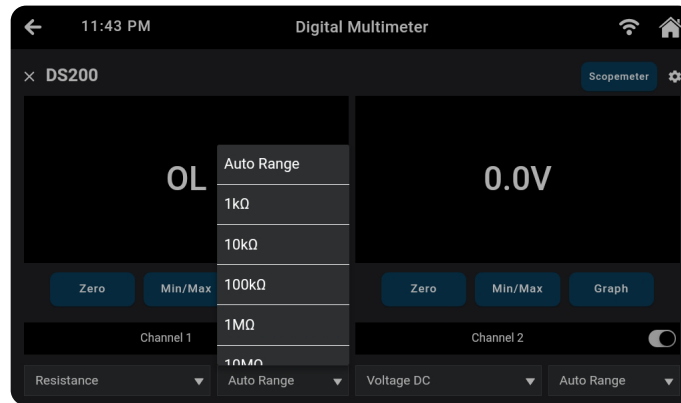


6. The 'Zero' function facilitates easy calibration of the current reading to zero (0), serving as a reference point for all subsequent measurements and eliminating offset values.

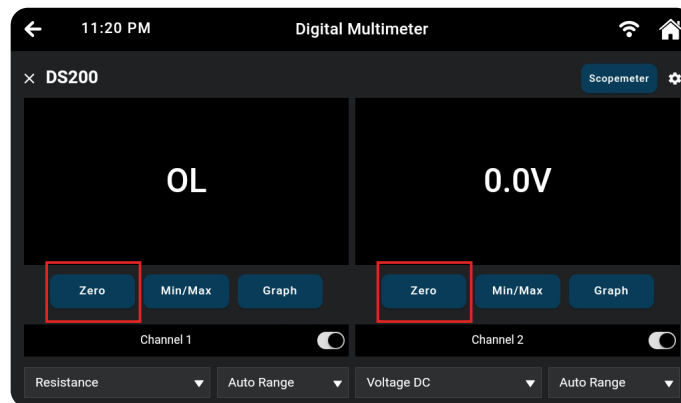



7. The Min/Max function automatically logs the highest and lowest values during the measurement period, eliminating the necessity for manual tracking.

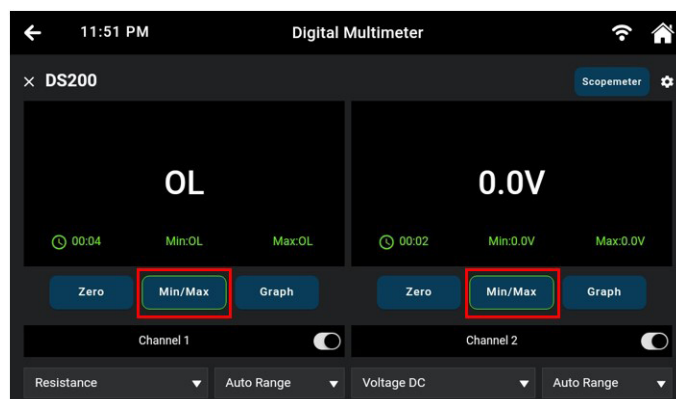

- The Graph function empowers users to visually represent measured values over time, providing a graphical representation that is particularly advantageous for capturing waveforms.

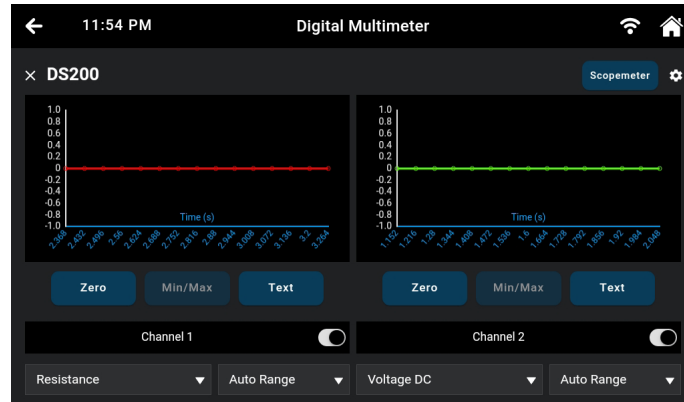

- Likewise, the Scopemeter feature merges data from both channels into a cohesive graph, effectively illustrating the interaction between the two parameters.

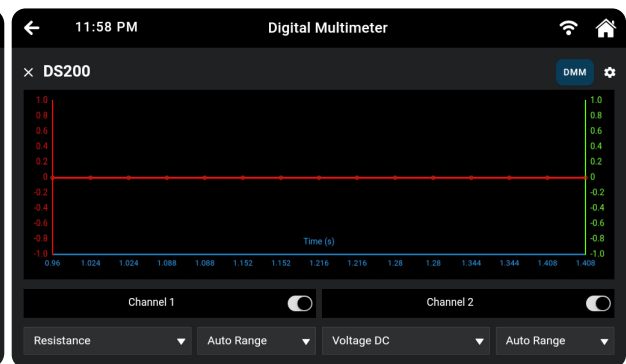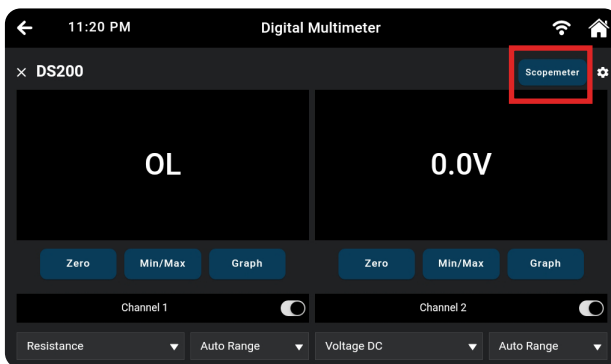


## DMM SETTINGS

The DMM settings enable you to configure the Hibernation Mode, reboot the meter, access Version Information, set the Sample Window and Speed, and view the Device Name.

- Tap the **Settings** icon to access the DMM Settings.



2. The tool displays the DMM's settings screen.
  - **Hibernation Mode** – Toggle switch places the DS200 in hibernation mode and deactivates the device's Bluetooth® radio signal.
  - **Reboot** – Toggle switch restarts the meter and automatically returns it to the scanning screen.
  - **Version Information** – Provides details about the 7111's Software version and the DS200's Bundled Firmware Version.
  - **Sample Window and Speed** – Lets you set and determine the tool's sample rate and speed to display readings.
  - **Device Name** – Allows you to customize your DMM device name – the default name is DS200. Simply tap **Edit** to rename your device.
3. To leave the DMM Settings, tap the **Back** button to go back to the Digital Multimeter screen.

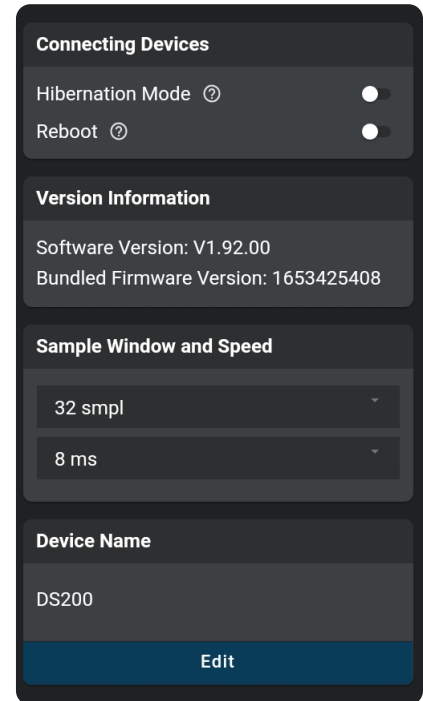

## WARRANTY+ CUSTOMER SERVICE

### LIMITED WARRANTY

---

The Manufacturer warrants to the original purchaser that this unit is free of defects in materials and workmanship under normal use and maintenance for a period of one (1) year from the date of original purchase.

If the unit fails within the one (1) year period, it will be repaired or replaced, at the Manufacturer's option, at no charge, when returned prepaid to the Service Center with Proof of Purchase. The sales receipt may be used for this purpose. Installation labor is not covered under this warranty. All replacement parts, whether new or remanufactured, assume as their warranty period only the remaining time of this warranty.

This warranty does not apply to damage caused by improper use, accident, abuse, improper voltage, service, fire, flood, lightning, or other acts of God, or if the product was altered or repaired by anyone other than the Manufacturer's Service Center.

The Manufacturer, under no circumstances shall be liable for any consequential damages for breach of any written warranty of this unit. This warranty gives you specific legal rights, and you may also have rights, which vary from state to state. This manual is copyrighted with all rights reserved. No portion of this document may be copied or reproduced by any means without the express written permission of the Manufacturer. **THIS WARRANTY IS NOT TRANSFERABLE.** For service, send via U.P.S. (if possible) prepaid to Manufacturer. Allow 3-4 weeks for service/repair.

### CUSTOMER SERVICE

---

Our ASE Certified technical staff is here to help if you have any questions or require service. For information on UPDATES and OPTIONAL ACCESSORIES, please contact your local store, distributor or Innova's Service Center.

**USA & Canada:** (800) 544-4124

*Monday through Friday: 6:00 AM to 6:00 PM PST*

**All others:** (714) 241-6802

*Monday through Friday: 6:00 AM to 6:00 PM PST*

**Web:** [www.innova.com](http://www.innova.com)

## GLOSSARY

### OBD2 TERMINOLOGY

---

The following terms and their definitions are related to OBD2 systems.

- **Powertrain Control Module (PCM)** - The PCM is the OBD2 accepted term for the vehicle's "on-board computer." In addition to controlling the engine management and emissions systems, the PCM also participates in controlling the powertrain (transmission) operation. Most PCMs also have the ability to communicate with other computers on the vehicle (ABS, ride control, body, etc.).
- **Monitor** - Monitors are "diagnostic routines" programmed into the PCM. The PCM utilizes these programs to run diagnostic tests, and to monitor operation of the vehicle's emissions-related components or systems to ensure they are operating correctly and within the vehicle's manufacturer specifications. Currently, up to fifteen Monitors are used in OBD2 systems. Additional Monitors will be added as the OBD2 system is further developed.



**NOTE:** *Not all vehicles support all fifteen Monitors*

- **Enabling Criteria** - Each Monitor is designed to test and monitor the operation of a specific part of the vehicle's emissions system (EGR system, oxygen sensor, catalytic converter, etc.). A specific set of "conditions" or "driving procedures" must be met before the computer can command a Monitor to run tests on its related system. These "conditions" are known as "**Enabling Criteria**." The requirements and procedures vary for each Monitor. Some Monitors only require the ignition key to be turned "**On**" for them to run and complete their diagnostic testing. Others may require a set of complex procedures, such as, starting the vehicle when cold, bringing it to operating temperature, and driving the vehicle under specific conditions before the Monitor can run and complete its diagnostic testing.
- **Monitor Has/Has Not Run** - The terms "**Monitor has run**" or "**Monitor has not run**" are used throughout this manual. "**Monitor has run**," means the PCM **has** commanded a particular Monitor to perform the required diagnostic testing on a system to ensure the system is operating correctly (within factory specifications). The term "**Monitor has not run**" means the PCM **has not** yet commanded a particular Monitor to perform diagnostic testing on its associated part of the emissions system.
- **Trip** - A Trip for a particular Monitor requires that the vehicle is being driven in such a way that all the required "Enabling Criteria" for the Monitor to run and complete its diagnostic testing are met. The "Trip Drive Cycle" for a particular Monitor begins when the ignition key is turned "**On**." It is successfully completed when all the "Enabling Criteria" for the Monitor to run and complete its diagnostic testing are met by the time the ignition key is turned "**Off**." Since each of the fifteen monitors is designed to run diagnostics and testing on a different part of the engine or emissions system, the "Trip Drive Cycle" needed for each individual Monitor to run and complete varies.
- **OBD2 Drive Cycle** - An OBD2 Drive Cycle is an extended set of driving procedures that takes into consideration the various types of driving conditions encountered in real life. These conditions may include starting the vehicle when it is cold, driving the vehicle at a steady speed (cruising), accelerating, etc. An OBD2 Drive Cycle begins when the ignition key is turned "On" (when cold) and ends when the vehicle has been driven in such a way as to have all the "Enabling Criteria" met for all its applicable Monitors. Only those trips that provide the Enabling Criteria for all Monitors applicable to the vehicle to run and complete their individual diagnostic tests qualify as an OBD2 Drive Cycle. OBD2 Drive Cycle

requirements vary from one model of vehicle to another. Vehicle manufacturers set these procedures. Consult your vehicle's service manual for OBD2 Drive Cycle procedures.



**NOTE:** Do not confuse a "Trip" Drive Cycle with an OBD2 Drive Cycle. A "Trip" Drive Cycle provides the "Enabling Criteria" for one specific Monitor to run and complete its diagnostic testing. An OBD2 Drive Cycle must meet the "Enabling Criteria" for all Monitors on a particular vehicle to run and complete their diagnostic testing.

- **Warm-up Cycle** - Vehicle operation after an engine off period where engine temperature rises at least 40°F (22°C) from its temperature before starting, and reaches at least 160°F (70°C). The PCM uses warm-up cycles as a counter to automatically erase a specific code and related data from its memory. When no faults related to the original problem are detected within a specified number of warm-up cycles, the code is erased automatically.

## OBD2 MONITORS

---

To ensure the correct operation of the various emissions-related components and systems, a diagnostic program was developed and installed in the vehicle's on-board computer. The program has several procedures and diagnostic strategies. Each procedure or diagnostic strategy is made to monitor the operation of, and run diagnostic tests on, a specific emissions-related component or system. These tests ensure the system is running correctly and is within the manufacturer's specifications. On OBD2 systems, these procedures and diagnostic strategies are called "Monitors."

Currently, fifteen Monitors are supported by OBD2 systems. Additional monitors may be added because of Government regulations as the OBD2 system grows and matures. Not all vehicles support all fifteen Monitors. Additionally, some Monitors are supported by "spark ignition" vehicles only, while others are supported by "compression ignition" vehicles only.

Monitor operation is either "**Continuous**" or "**Non-Continuous**," depending on the specific monitor.

### CONTINUOUS MONITORS

Three of these Monitors are designed to constantly monitor their associated components and/or systems for proper operation. Continuous Monitors run constantly when the engine is running.

**CCM** = Comprehensive Component Monitor (CCM)

**MIS** = Misfire Monitor

**FUE** = Fuel System Monitor

### NON-CONTINUOUS MONITORS

The other twelve Monitors are "non-continuous" Monitors. "Non-continuous" Monitors perform and complete their testing once per trip.

---

**O2S** = Oxygen Sensor Monitor

**HTR** = Oxygen Sensor Heater Monitor

**CAT** = Catalyst Monitor

**HCA** = Heated Catalyst Monitor

**EGR** = EGR (Exhaust Gas Recirculation) System Monitor

**EVA** = EVAP System Monitor

**AIR** = Secondary Air System Monitor



**NOTE:** The following Monitors became standard beginning in 2010. The majority of vehicles produced before this time will not support these Monitors.

**HCC** = NMHC (Non-Methane Hydrocarbon Converting) Catalyst Monitor

**NOx** = NOx Adsorber Monitor

**BPS** = Boost Pressure System Monitor

**EGS** = Exhaust Gas Sensor Monitor

**DPF** = PM (Particulate Matter) Filter Monitor

## ADDITIONAL TERMINOLOGY + ACRONYMS

---

- **ABS** = Anti-Lock Brakes
  - **DLC** = Data Link Connector (vehicle's data port)
  - **DTC** = Diagnostic Trouble Codes
  - **KOEO** = Key On, Engine Off
  - **KOER** = Key On, Engine Running
  - **MIL** = Malfunction Indicator Lamp (Check Engine Light)
  - **OBD** = On Board Diagnostics
  - **OBD2 / OBD II** = On Board Diagnostics, Second Generation
  - **OEM** = Original Equipment Manufacturer
  - **PID** = Parameter Identification Data
  - **SDC** = Since DTCs Cleared
-

- **SRS** = Safety Restraint System
  - **TDC** = This Driving Cycle
  - **TPMS** = Tire Pressure Monitoring System
  - **TSBs** = Technical Service Bulletins
-